OPEL Mokka Infotainment Manual



Wir leben Autos.



Contents	Navi 950 / CD 6005 CD 400

Navi 950 / CD 600

Introduction	6
Basic operation	16
Radio	24
CD Player	30
External devices	32
Navigation	37
Speech recognition	55
Phone	64
Frequently asked questions	73
Index	76

Introduction

General information6	
Theft-deterrent feature7	
Control elements overview 8	
Usage 14	

General information

The Infotainment system provides you with state-of-the-art in-car infotainment.

The radio can easily be used by registering a large number of FM, AM and DAB (Digital Audio Broadcasting) radio stations with the 1...6 preset buttons.

You can connect external data storage devices, e.g. iPod, USB devices, or other auxiliary devices to the Infotainment system as further audio sources; either via cable or via Bluetooth.

In addition, the Infotainment system is equipped with a phone application that allows for comfortable and safe use of your mobile phone in the vehicle.

Optionally, the Infotainment system can be operated using the instrument panel controls, the controls on the steering wheel or the speech recognition function. The well-thought-out design of the control elements and the clear displays enable you to control the system easily and intuitively.

Information on operation details and news on software updates can be obtained on our website.

Note

This manual describes all options and features available for the various Infotainment systems. Certain descriptions, including those for display and menu functions, may not apply to your vehicle due to model variant, country specifications, special equipment or accessories.

Important information on operation and traffic safety

∆Warning

The Infotainment system must be used so that the vehicle can be driven safely at all times. If in doubt, stop the vehicle and operate the Infotainment system while the vehicle is stationary.

▲Warning

The usage of the navigation system does not release the driver from the responsibility for a correct, vigilant attitude in road traffic. The related traffic regulations must always be followed.

Only make entries (e.g. addresses) with the vehicle stationary.

If a navigation instruction contradicts traffic regulations, the traffic regulations always apply.

▲Warning

Areas such as one-way streets and pedestrian zones are not marked on the navigation system map. In such areas, the system may issue a warning that must be accepted. Therefore, pay particular attention to one-way streets and other roads and entrances that must not be driven into.

Radio reception

Radio reception may be disrupted by static, noise, distortion or loss of reception due to:

- changes in distance from the transmitter,
- multi-path reception due to reflection,
- shadowing.

Theft-deterrent feature

The Infotainment system is equipped with an electronic security system for the purpose of theft deterrence.

The Infotainment system therefore functions only in your vehicle and is worthless to a thief.

Control elements overview

Navi 950



Introduction 9

1			CD/MP3/WMA: skip track forwards	12	
2	Access Home Page 16 Station buttons 16		External devices: skip track forwards 34	13	Open settings menu 2' INFO button
	Short press: select station 26	7	איניט אינ איניט איניט אינ		Radio: information on current station
3	Long press: save station 26 DEST / NAV button		CD/MP3/WMA: start/ pause playback 31		CD/MP3/WMA, external devices: information on
	Open navigation destination menu		External devices: start/ pause playback		current track
4	≪l kl button	8	FAV 1-2-3 button		Navigation: information, e.g. on current location
	Radio: search backwards 24		Open favourites list	14	Multifunction knob
	CD/MP3/WMA: skip track backwards	9	AS 1-2 button		Turn: mark menu options or set alphanumeric values16
	External devices: skip		Short press: open autostore list		Press (outer ring): select/
5	track backwards 34 එ VOL knob		Long press: save autostore stations		activate the marked option; confirm set value; switch function on/off;
	Press: switch on/off Infotainment system	10	automatically 25 TP button		open audio or navigation menu
	Turn: adjust volume 14		Activate or deactivate	15	Eight-way switch
6	A № button	11	radio traffic service 27 ≙ button		Navigation: move display window in map view
	Radio: search forwards 24		Eject CD		

10 Introduction

16	BACK button	FM24	
	Menu: one level back 16	DAB 24	
17	Input: delete last character or entire entry		
18 19	Repeat last navigation message		
20	Take phone call or activate/deactivate mute 67 NAV button		
21	Display map		
	Press to toggle through the different audio sources		
	CD/MP3 player 30		
	USB 32		
	AUX 32		
	Bluetooth 32		
	AM24		

CD 600



12 Introduction

1	
2	Access Home Page 16 Station buttons 16
	Long press: save station 26
3	Short press: select station 26
	Radio: search backwards 24
	CD/MP3/WMA: skip track backwards 31
4	External devices: skip track backwards
	Press: switch on/off Infotainment system 14
5	Turn: adjust volume 14 Ŋ ₯ button
	Radio: search forwards 24
	CD/MP3/WMA: skip track forwards
	External devices: skip track forwards

6	FAV 1-2-3 button
7	Open favourites list
	Short press: open autostore list
8	Long press: save autostore stations automatically
0	TF bullon
	Activate or deactivate radio traffic service
9	≙ button
10	Eject CD
11	Open settings menu 21 INFO button
	Radio: information on current station
	CD/MP3/WMA, external devices: information on current track

12	Multifunction knob
	Turn: mark menu options or set alphanumeric values16
13	Press: select/activate the marked option; confirm set value; switch function on/ off; open audio menu
	Menu: one level back 16
	Input: delete last character or entire entry 16
14	Tone button
15 16	Open tone settings 19 CD slot
17	Take phone call or activate/deactivate mute 67 X/II button
	CD/MP3/WMA: start/ pause playback 31
	External devices: start/ pause playback

18 SRCE (Source) button

Press to toggle through the different audio sources

CD/MP3 player	30
USB	32
AUX	32
Bluetooth	32
AM	24
FM	24
DAB	24



With radio active: turn up/ down to select next/ previous preset radio station
With CD player active: turn up/down to select next/ previous CD/MP3/WMA track
With external device active: turn up/down to select next/previous track 34
With phone active: turn up/ down to select next/ previous entry in call list 67
With phone active and calls waiting: turn up/down to switch between calls 67 + button
Increase volume 14 - button
Reduce volume
Short press: end/decline call

3

4

5

or close call list 67
or activate/deactivate mute 14
or deactivate speech recognition55

Usage

Control elements

The Infotainment system is operated via function buttons, a multifunction knob and menus that are shown on the display.

Inputs are made optionally via:

- the central control unit on the instrument panel \$ 8
- controls on the steering wheel \$ 8
- the speech recognition system \$\$ 55.

Note

Only the most direct ways for menu operation are described in the subsequent chapters. In some cases, there may be other options.

Switching the Infotainment system on or off

Press the ⁽⁾ knob briefly. After switching on, the last selected Infotainment source becomes active.

Automatic switch-off

If the Infotainment system is switched on using the \bigcirc knob while the ignition is switched off, it switches off again automatically after 10 minutes.

Setting the volume

Turn the \bigcirc knob. The current setting is shown in a pop-up at the bottom of the screen.

When the Infotainment system is switched on, the last selected volume is set, provided that the volume is lower than the maximum start-up volume.

The following volume settings can be set separately:

- the maximum start-up volume \$\Rightarrow 20
- the volume of the traffic announcements \$\$ 20
- the volume of the navigation messages \$\$ 38.

Auto volume

When auto volume is activated \Rightarrow 20, the volume is adapted automatically to compensate for the road and wind noise as you drive.

Mute

Press the 𝖍 w button (if Phone portal is available: press for a few seconds) to mute the audio sources.

To cancel mute again: turn the **VOL** knob or press the *r*/⊯ button again (if Phone portal is available: press for a few seconds).

Volume limitation at high temperatures

At very high temperatures inside the vehicle, the Infotainment system limits the maximum adjustable volume. If necessary, the volume is decreased automatically.

Modes of operation

Audio players

Repeatedly press the **SRCE** button to toggle between the AM, FM, CD, USB, AUX, Bluetooth or DAB main menus.

For detailed descriptions of:

- CD/MP3 player \$ 30
- USB port 🗘 32
- AUX input 🗘 32
- Bluetooth audio \$32
- AM radio 🗘 24
- FM radio 🗘 24
- DAB radio 🗘 29.

Navigation

Press the **NAV** button to display the map of the navigation application.

Press the multifunction knob to open a submenu with options for the input of destinations and the structuring of a route.

For a detailed description of the navigation functions \Rightarrow 37.

Phone

Press the 𝖍 🕸 button to display the phone main menu with options for the input or selection of numbers.

For a detailed description of the mobile phone functions \diamondsuit 64.

Note

Brief information on the audio sources and the current navigation session may be displayed via the **Quick Info** application.

Basic operation

Basic operation	16
Tone settings	19
Volume settings	20
System settings	21

Basic operation

Multifunction knob

The multifunction knob is the central control element for the menus.

Turn the multifunction knob:

- To mark a menu option.
- To set an alphanumeric value.

Press the multifunction knob (Navi 950: press the outer ring):

- To select or activate the marked option.
- To confirm a set value.
- To switch a system function on/off.
- To open the audio or navigation menu within the respective application.

🗟 button

Press the 🗳 button to access the **Home Page**.



Using the multifunction knob, you may then access the different applications.

Turn the multifunction knob to select the **More** screen button at the bottom of the screen.



Press the multifunction knob (Navi 950: press the outer ring) to display the second **Home Page** with further applications.

Using the multifunction knob, you may then access the different applications.

Note

Most of the applications or application menus may also be directly accessed via the buttons on the instrument panel.

BACK button Press the BACK button to:

- Exit a menu or screen.
- Return from a submenu to the next higher menu level.
- Delete the last character in a character sequence.

Press and hold the **BACK** button for a few seconds to delete the entire entry.

Examples of menu operation

Selecting a screen element

Turn the multifunction knob to move the cursor (= coloured background) to the desired option.

Press the multifunction knob to select the marked icon, screen button or menu item.

Note

In subsequent chapters the operating steps for selecting and activating a screen button or menu item will be described as "...select the...screen button..." or "...select the...menu item...".

Scrolling lists

20°C		10:22	
Phon	e Book	P M K × K < 0	
~	Summer, Nora		
1	Sup, Peter		
	Turner, Mike		
	Walter, Tom		
1	Yalk, Rosi		
~	Zoo, Robert		

If there are more menu items available in a list than presentable on the screen, a scroll bar is displayed.

Turn the multifunction button clockwise to scroll downwards and anticlockwise to scroll upwards.

Note

In subsequent chapters the operating steps for scrolling a list will be described as "...scroll to...menu item...".

Adjusting a setting



Turn the multifunction knob to change the current value of the setting.

Press the multifunction knob to confirm the set value.

Note

In subsequent chapters the operating steps for adjusting a setting will be described as "...adjust the...setting...".

Activating a menu item

Turn the multifunction knob to move the cursor (= coloured background) to the desired option. Press the multifunction knob to activate the menu item. A checkmark or a point appear within the box or ring beside the respective menu item.

20*0		10:22
RDS	Options	— 平 M K × K ≤ 0
	RDS	Ð
	Regional	
	Text Scroll Freeze	
	Radio Text	Ð
	Traffic Volume	>
	RDS Auto Time Adjust	Ð

Note

In subsequent chapters the operating steps for activating a menu item will be described as "...activate the...menu item...".

Entering a character sequence

Turn the multifunction knob to select the desired character.

Press the multifunction knob to enter the respective character in the entry field at the top of the screen. The last character in the character sequence can be deleted using the **Del** screen button or the **BACK** button. Pressing and holding the **BACK** button deletes the entire entry.

Press the multifunction knob to confirm the selected character.

Note

In subsequent chapters the operating steps for entering characters will be described as "...enter the desired characters...".

Messages

Before a system function is executed, you are sometimes prompted with a message. If requested, select one of the options.



The selection and activation of a screen button in a message function are the same as described for selecting an option in a menu.

Tone settings

Press the 🗳 button and then select the **More** screen button at the bottom of the screen. On the second **Home Page**, select the **Tone** icon. The tone settings menu is displayed.



Bass

Use this setting to enhance or attenuate the deep frequencies of the audio sources.

Adjust the setting as desired.

Mid

Use this setting to enhance or attenuate the midrange frequencies of the audio source.

Adjust the setting as desired.

Treble

Use this setting to enhance or attenuate the high frequencies of the audio sources.

Adjust the setting as desired.

EQ mode

(EQ: Equaliser)

Use this setting to optimise the tone for a specific style of music, e.g. **Rock** or **Classical**.

Select the **EQ** menu item. A submenu with predefined sound styles is displayed.

Select the desired sound style.

If one of the predefined sound styles is selected, **Bass**, **Mid** and **Treble** are preadjusted by the system.

If you manually adjust one of the settings described above, **EQ** is set to **Manual**.

Fade and Balance

When **Fade** or **Balance** are selected, an illustration is displayed on the right side of the screen.



To adjust the volume distribution between the front and rear speakers in the vehicle, select the **Fade** menu item. Adjust the setting as desired.

To adjust the volume distribution between the left and right speakers in the vehicle, select the **Balance** menu item. Adjust the setting as desired.

Volume settings

Adjusting the Auto Volume

Press the **CONFIG** button and then select the **Radio Settings** option.

Select **Auto Volume** to display the respective menu.

To adjust the degree of volume adaptation, set **Auto Volume** to **Off**, **Low**, **Medium** or **High**.

Off: no enhancement of volume with increasing vehicle speed.

High: maximum enhancement of volume with increasing vehicle speed.

Adjusting the Startup Volume

Press the **CONFIG** button and then select the **Radio Settings** menu item. Select **Startup Volume** to display the respective menu.

Adjust the setting as desired.

Adjusting the volume of traffic announcements

The volume of traffic announcements can be preset to a level independent of the "normal" volume level.

Press the **CONFIG** button and then select the **Radio Settings** menu item.

Select **RDS Options** and then **Traffic Volume** to display the respective menu.

Adjust the setting as desired.

Note

While an announcement is given out, the volume may simply be adjusted using the \bigcirc knob.

Adjusting the Chime Volume

When operating the controls in the vehicle, beeping sounds confirm your actions. The volume of the beeping sounds may be adjusted.

Press the **CONFIG** button and then select the **Vehicle Settings** menu item.

Select **Comfort and Convenience** and then **Chime Volume** to display the respective submenu. Select **Low** or **High**.

Adjusting the Navigation Volume

Press the **CONFIG** button and then select the **Navigation Settings** menu item.

Select the Voice Prompt menu item and then Navigation Volume. The respective submenu is displayed.

To adjust the volume of the announcements, select **Announcement** and then adjust the setting as desired.

To adjust the volume of the audio source possibly playing in the background, select **Background** and then adjust the setting as desired.

Select **Volume Test** to get an audio example of the settings.

Note

While an announcement is given out, the volume may simply be adjusted using the \circ knob.

System settings

Various Infotainment system settings may be adjusted via the **Config** application.

10°C		10:22
Conf	iguration Settings	「「「」と、、、、、、、、、、、、、、、、、、、、、、、、、、、、、、、、、、
n	Languages	>
1	Time and Date	>
	Radio Settings	>
	Phone Settings	>
	Navigation Settings	>
	Display Settings	>



Language settings

Press the **CONFIG** button and then select the **Languages** menu item. A list of all languages available is displayed.

Select the desired language.

Time and date settings

Press the **CONFIG** button and then select the **Time and Date** menu item to display the respective submenu.

Note

If **RDS Auto Time Adjust** is activated ⇔ 27, time and date are automatically set by the system.

Set time

To adjust the time settings, select the **Set Time** menu item. Adjust the settings as desired.

Set date

To adjust the date settings, select the **Set Date** menu item. Adjust the settings as desired.

Time format

To choose the desired time format, select the **12 hr / 24 hr Format** menu item. A submenu is displayed. Activate **12 Hour** or **24 Hour**.

Software information

Press the **CONFIG** button and then select the **Radio Settings** menu item.

Scroll through the list and select **Software Versions Menu** to display the respective submenu.

Software version information

To display a list of all software versions installed, select **Software Version Information**.

By default, all versions are activated.

Software update

To update your system software, contact your Opel Service Partner.

Log file

To generate a log file of your current software version, select the **Create Log File** menu item.

Licensing information

To display information on the manufacturer of the Infotainment system, select **Licensing Information**.

Factory defaults

To reset all Infotainment settings to their factory defaults, select **Clear and Reset Radio**.

Display settings

Press the **CONFIG** button and then select the **Display Settings** menu item to display the respective submenu.

Home Page

Select **Home Page Menu** to display the home page settings menu.

To access the menu from the **Home Page**, select the **Menu** screen button at the bottom of the screen.

The **Home Page** may be adjusted according to your personal preferences.

Customise

The application icons displayed on the first home page may be chosen as desired. Select the **Customise** menu item to display a list of all applications installed in the system. Activate the menu items of those applications you wish to be displayed on the first home page.

The other applications are then arranged on the following pages.

Sort

Up to eight application icons may be arranged on each home page.

The positions of the icons can be changed as desired.

Select the **Sort** menu item to display the home pages in edit mode.

Select the icon you wish to move.

Scroll to the position on the home page where you wish the icon to be located. Press the multifunction knob to confirm.

The icon is moved to the new location. The icon that was located in that position before is now displayed in the position of the moved icon.

Home page defaults

To reset the **Home Page** to its factory defaults, select **Restore Home Page Defaults**.

Display Off

To turn the display off, select **Display Off**.

To turn the display back on, press any button on the instrument panel (except the \bigcirc **VOL** knob).

Radio

Usage	24
Station search	24
Autostore lists	25
Favourite lists	26
Radio data system (RDS)	27
Digital audio broadcasting	29

Usage

Activating radio

Press the derived button and then select the **AM**, **FM** or **DAB** icon.

The station last selected is played.

Note

When an audio source is already active, you may toggle between the different audio sources by repeatedly pressing the **SRCE** button.

Station search

Automatic station search

Briefly press the I≪ or ▶ buttons to play the next station in the station memory.

Manual station search

Press and hold the Idea or ►► buttons. Release the button when the required frequency has almost been reached on the frequency display.

Manual station tuning

In the FM and DAB waveband, press the multifunction knob to open the respective menu and then select **Manual tuning**. The frequency currently active is displayed at the bottom of the screen.

Turn the multifunction knob to reach the desired frequency.

In the AM waveband, turn the multifunction knob to adjust the frequency.

Station lists

In the FM and DAB waveband, turn the multifunction knob to display the station list.

In the AM waveband, press the multifunction knob to display the respective waveband menu.

Select AM Station List.

A list of all receivable stations of the relevant waveband and in the current reception area is displayed.

Note

If no station list has been created beforehand, the Infotainment system performs an automatic station search.

0°C		10:22
FM s	tation list	T = 1 = 1
~	EINSLIVE	
1	WDR 2	
	WDR 3	
	WDR 4	
	WDR 5	0
~	WDR 6	

Select the desired station.

Note

The currently received station is marked by \P .

Category list

Numerous RDS ▷ 27 and DAB ▷ 29 stations broadcast a PTY code, which specifies the type of programme transmitted (e.g. news). Some stations also change the PTY code depending on the content which is currently transmitted.

The Infotainment system stores these stations in the corresponding category list sorted by programme type.

Note

The category list submenu item is only available for the FM and the DAB wavebands.

To search for a programme type determined by the stations, select the waveband specific category list option.

A list of programme types currently available is displayed.

Select the desired programme type. A list of stations is displayed transmitting a programme of the selected type.

Select the desired station.

Note

The currently received station is marked by \P .

Updating the station lists

If the stations stored in the wavebandspecific station list can no longer be received, the AM and the DAB station lists must be updated.

Note

The FM station list is updated automatically.

Select the corresponding list item in the waveband-specific menu to update a station list.

A station search is started. Once the search is finished, the station previously selected is played.

To cancel the station search, press the multifunction knob.

Note

If a waveband-specific station list is updated, the corresponding category list is also updated.

Autostore lists

The stations best received in a waveband can be stored in and selected from the autostore lists.

20°C	10:22
	○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○
hr2	0
"Night" by	((-{
Favourities on hr2	FIM
-	
Neru	
AS1of2	
hrt i' hr2 i' hr3	1 ht 1 FFH 1 FFH2

Each waveband has 2 autostore lists (**AS 1**, **AS 2**), in each of which 6 stations can be stored.

Note

The currently received station is highlighted.

Automatic station storing

Keep the **AS** button pressed until an autostore message is displayed. The 12 strongest stations in the current waveband are stored in the two autostore lists.

To cancel the autostore procedure, select the **Cancel** screen button.

Storing stations manually

Stations can also be stored manually in the autostore lists.

Set the station to be stored.

Press the **AS** button to open the autostore list or to switch to another autostore list.

To store the station in a list position: press the corresponding station button 1...6 until a confirmation message is displayed.

Note

Manually stored stations are overwritten in an automatic station storing process.

Retrieving a station

If required, press the **AS** button to open an autostore list or to switch to another autostore list.

Press one of the station buttons 1...6 to activate the station at the corresponding list position.

Favourite lists

Stations of all wavebands can be stored manually in the favourite lists.



6 stations can be stored in each favourite list. The number of available favourite lists can be set (see below).

Note

The currently received station is highlighted.

Storing a station

Set the station to be stored.

Briefly press the **FAV** button to open a favourite list or to switch to another favourite list.

To store the station in a list position: press the corresponding station button 1...6 until a confirmation message is displayed.

Retrieving a station

If required, briefly press the **FAV** button to open a favourite list or to switch to another favourite list. Press one of the station buttons 1...6 to activate the station stored in the respective location.

Defining the number of favourite lists

Press the **CONFIG** button and then select the **Radio Settings** menu item. Select **Number of Favourite Pages** to display the respective submenu.

Select the number of favourite pages you wish to be displayed.

Radio data system (RDS)

RDS is a service of FM stations that considerably facilitates the finding of the desired station and its fault-free reception.

Advantages of RDS

- On the display the programme name of the set station appears instead of its frequency.
- During station search the Infotainment system tunes in to RDS stations only.
- The Infotainment system always tunes in to the best receivable broadcasting frequency of the set station by means of AF (Alternative Frequency).
- Depending on the station that is received the Infotainment system displays radio text that can contain, for example, information on the current programme.

RDS Options menu

To open the menu for the RDS configuration, press the **CONFIG** button and then select the **Radio Settings** menu item.

Select **RDS Options** to display the respective submenu.

20°C		10:22
RDS (Options	• P M K × K ≤ 0
	RDS	Ei
	Regional	
	Text Scroll Freeze	
	Radio Text	Ð
	Traffic Volume	>
	RDS Auto Time Adjust	Ð
	- and - sold - conservation	

Activating the RDS function

Activate the **RDS** menu item.

Note

If **RDS** is deactivated, not all menu items of the **RDS Options** menu are displayed.

Regional

RDS stations sometimes broadcast regionally different programmes on different frequencies.

If **Regional** is activated, only alternative frequencies (AF) with the same regional programmes are selected. If **Regional** is deactivated, alternative frequencies of the stations are selected without regard to regional programmes.

Text Scroll Freeze

Some RDS stations do not only show the programme service name on the display, but also additional information on the current programme. If additional information is displayed, the programme name is hidden.

To prevent additional information from being displayed, activate the **Text Scroll Freeze** menu item.

Radio Text

If RDS and the reception of an RDS station are activated, information on the radio programme currently active or the music track currently playing are displayed below the programme name.

To show or hide the information, activate or deactivate the **Radio Text** menu item.

Radio traffic service

(TP = Traffic Programme)

Radio traffic service stations are RDS stations that broadcast traffic news.

If the radio traffic service is switched on, radio or media playback is interrupted for the duration of the traffic announcement.

Switching the radio traffic service on and off

To switch the traffic announcement standby facility of the Infotainment system on and off, press the **TP** button.

- If the radio traffic service is switched on, [] is indicated on the display.
- If the current station is not a radio traffic service station, a search is started automatically for the next radio traffic service station.
- If a radio traffic service station has been found, [TP] is indicated on the display.

Traffic Volume

To adjust the volume of traffic announcements, select the **Traffic Volume** menu item. The respective submenu is displayed. Adjust the setting as desired.

Listening to traffic announcements only

Switch on the radio traffic service and completely turn down the volume of the Infotainment system.

Blocking out traffic announcements

To block out a traffic announcement, e.g. during CD/MP3 playback:

Press the **TP** button or select the **Cancel** screen button in the TP message.

The traffic announcement is cancelled, but the radio traffic service remains switched on.

Auto Time Adjust

The system constantly receives information on the current time and date.

If you wish the time and date settings to be updated automatically, activate the **RDS Auto Time Adjust** menu item.

If you wish to set time and date manually, deactivate the **RDS Auto Time Adjust** menu item.

Digital audio broadcasting

Digital audio broadcasting (DAB) is an innovative and universal broadcast system.

General information

- DAB stations are indicated by the programme name instead of the broadcasting frequency.
- With DAB, several radio programmes (services) can be broadcasted on a single frequency (ensemble).
- Besides high-quality digital audio services, DAB is also able to transmit programme-associated data and a multitude of other data services including travel and traffic information.

- As long as a given DAB receiver can pick up the signal sent out by a broadcasting station (even if the signal is very weak), sound reproduction is ensured.
- There is no fading (weakening of the sound) that is typical of AM or FM reception. The DAB signal is reproduced at a constant volume.
- Interference caused by stations that are on nearby frequencies (a phenomenon that is typical of AM and FM reception) does not occur with DAB.

If the DAB signal is too weak to be picked up by the receiver, the system switches over to the same programme on another DAB or FM station.

- If the DAB signal is reflected by natural obstacles or buildings, the reception quality of DAB is improved, whereas AM or FM reception is considerably impaired in such cases.
- When DAB reception is enabled, the FM tuner of the Infotainment system remains active in the

background and continually searches for the best receivable FM stations. If TP ♀ 27 is activated, traffic announcements of the FM station which is currently best received are issued. Deactivate TP, if DAB reception should not be interrupted by FM traffic announcements.

DAB announcements

Besides their music programmes, lots of DAB stations also broadcast announcements of various categories.

While being in the DAB main menu, press the multifunction knob to open the **DAB menu** and then select **Announcements**.

If you activate some or all categories, the currently received DAB service is interrupted when an announcement of these categories is made.

Activate the desired categories.

CD Player

General information	30
Usage	31

General information

Important information about audio CDs and MP3/WMA CDs The Infotainment system's CD player can play audio CDs and MP3/WMA CDs.

Caution

Under no circumstances place DVDs, single-CDs with a diameter of 8 cm or shaped CDs in the audio player.

You must not put any stickers on CDs. These discs can get jammed in the CD drive and ruin the player. Replacement of the device will then be necessary.

File formats

Audio CDs

The following CD formats can be used: CD-ROM Mode 1 and Mode 2; CD-ROM XA Mode 2, Form 1 and Form 2.

MP3 CDs

The following file formats can be used: ISO9660 Level 1, Level 2, (Romeo, Joliet).

MP3 and WMA files written in any format other than listed above may not play correctly, and their file names and folder names may not be displayed correctly.

The following restrictions apply for the data stored on an MP3/WMA CD:

Number of tracks: max. 999.

Number of folders: max. 255.

Folder structure depth: max. 64 levels (recommended: max. 8 levels).

Number of playlists: max. 15.

Number of songs per playlist: max. 255.

Applicable playlist extensions: .m3u, .pls, .asx, .wpl.

Usage

Starting CD playback

Push the CD with the labelled side facing upwards into the CD slot until it is pulled in.

CD playback starts automatically and the **CD** or **MP3 CD** main menu is displayed.

If there is already a CD inserted, but the **CD** or **MP3 CD** main menu is not active, press the 🗳 button and then select the **CD** icon.

The **CD** or **MP3 CD** main menu is displayed and CD playback is started.

20°C	10:22
Pop MP3 CD	$\oplus M \leq \times \pi \leq 0$
Leave Me Now	(E)
The Favourites	CD
Best Of	00
A New	

Depending on the data stored on the audio **CD** or **MP3 CD**, more or less detailed information on the CD and the current music track are shown on the display.

Note

When an audio source is already active, you may toggle between the different audio sources by repeatedly pressing the **SRCE** button.

Removing a CD

Press the Δ button.

The CD is pushed out of the CD slot.

If the CD is not removed after ejection, it will be drawn back in again automatically after a few seconds.

Track List

Turn the multifunction knob to display a list of all tracks on the CD.

Note

The currently playing track is marked by \P .

Select the desired track.

Function buttons

Skipping to previous or next track

Press the I◀ or ▶ buttons once or several times to skip to the previous or next track.

Fast forwarding or rewinding

Press and hold the I◀ or ► buttons to fast forward or rewind the current track.

Pausing playback

Press the A/II button to pause playback.

Audio menu

Press the multifunction knob to display the CD or MP3 menu.

Note

For a description of the functions in the MP3 menu \diamondsuit 34.

Shuffle function

To play the tracks on the CD in random order, activate the **Shuffle** menu item.

To return to the normal playing order, deactivate the **Shuffle** menu item.

External devices

General information	32
Playing audio	34
Displaying pictures	35

General information

Sockets for the connection of external devices are located in the centre console hidden behind a cover.

Note

The sockets must always be kept clean and dry.

AUX input

It is possible to connect e.g. an iPod, Smartphone or another auxiliary device to the AUX input. The Infotainment system can play music files contained in auxiliary devices.

When connected to the AUX input, the audio signal of the auxiliary device is transmitted via the speakers of the Infotainment system.

The volume can be adjusted via the Infotainment system. All other control functions must be operated via the auxiliary device.

Connecting a device

To connect the auxiliary device to the AUX input socket of the Infotainment system, use the following cable:

3-pole for audio source.

To disconnect the AUX device, select another function and then remove the AUX device.

USB port

An MP3 player, USB device, iPod or Smartphone can be connected to the USB port. The Infotainment system can play music files or display pictures contained in auxiliary devices.

When connected to the USB port, the devices mentioned above can be operated via the controls and menus of the Infotainment system.

Note

Not all MP3 players, USB drives, iPod models or Smartphones are supported by the Infotainment system.

Connecting/disconnecting a device

Connect the device to the USB port. For the iPod, use the appropriate connection cable.

Note

If a non-readable USB device or iPod is connected, a corresponding error message will appear and the Infotainment system will automatically switch to the previous function.

To disconnect the USB device or iPod, select another function and then remove the USB storage device.

Caution

Avoid disconnecting the device during playback. This may damage the device or the Infotainment system.

Bluetooth

Bluetooth enabled audio sources (e.g. music mobile phones, MP3 players featuring Bluetooth, etc.), which support the Bluetooth music profiles A2DP and AVRCP can be connected wirelessly to the Infotainment system.

The Infotainment system can play music files contained in Bluetooth devices, e.g. iPod or Smartphone.

Connecting a device

For a detailed description of the Bluetooth connection r > 65.

File formats

Audio files

Only devices formatted in the FAT32, NTFS and HFS+ file systems are supported.

Note

Some files may not be played properly. This might be due to a different recording format or the condition of the file.

Files from online shops to which Digital Rights Management (DRM) has been applied cannot be played.

The playable audio file formats are .mp3, .wma, .aac and .m4a.

When playing a file with ID3 tag information, the Infotainment system can display information, e.g. on the track title and artist.

Picture files

The displayable picture file formats are .jpg, .jpeg, .bmp, .png and .gif.

The files must have a maximum size of 2048 pixels in width and 2048 pixels in height (4MP).

Gracenote

The Gracenote database contains information on media data currently available on the market.

When connecting external devices, the tracks or files are recognised by the Gracenote function.

If the Gracenote normalisation function is activated, spelling mistakes in MP3 tag data are automatically corrected. Due to this, media search results may be improved.

Press the **CONFIG** button and then select the **Radio Settings** menu item.

Select **Gracenote Options** to display the respective submenu.

Activate the Gracenote normalisation function.

Playing audio

Starting playback

If not connected, connect the device \Rightarrow 32.

Example: USB main menu

20°C		10:22
Pop USB The Start Holiday Unplugged	<i>\</i> ₹ 1	29
000.11	 	J 89410

Function buttons

The media files on the USB and Bluetooth devices may be operated using the buttons on the instrument panel.

Skipping to previous or next track

Press the I◀ or ▶ buttons once or several times to skip to the previous or next track.

Fast forwarding or rewinding

Press and hold the I◀ or ► buttons to fast forward or rewind the current track.

Pausing playback

Press the A/II button to pause playback.

Audio menus

To display the respective audio menu, press the multifunction knob.

Note

Not all menu items are available in all audio menus.

20°C		10:22
USB	Menu	T = M = K × K × 0
~	Shuffle	
1	Play More Like This	
	Delete automatic playlist	
	Folders	>
	Play Lists	>
~	Artists	>

Shuffle function

Press the multifunction knob to display the USB or Bluetooth menu.

To play the tracks on the respective device in random order, activate the **Shuffle** menu item.

To return to the normal playing order, deactivate the **Shuffle** menu item.

Browsing

(only available in USB menus)

To search for a track within the structure, select one of the menu items, e.g. Folders, Play Lists or Albums.

Browse through the structure until you find the desired track.

Select the track to start playback.

Individual playlists

The system allows new playlists to be created via the Gracenote function. Similar tracks are put together on a list automatically generated by the system.

Select the track around which you wish to create a new playlist.

Select the **Play More Like This...** menu item in the respective audio menu. A new playlist is created and stored in the **Play Lists** menu.

To delete a playlist generated by the system, select the **Delete automatic playlist** menu item. A list of all generated playlists is displayed. Select the playlist you wish to delete. The playlist is deleted.

Displaying pictures

Viewing pictures

Connect a USB device \diamondsuit 32.

Press the 🗳 button and then select the **Pictures** icon to open the **Picture Viewer USB** menu.

A list of all pictures and picture folders found on the USB device is displayed.

Browse through the pictures and folders until you find the desired picture and select it. The picture is displayed.

20°C						10:22		
Info	1		1		1		1	Menu

Function buttons

Info button

Select the **Info** screen button at the bottom of the screen to display information on the picture stored on

the USB device, e.g. a name or number. The respective information is displayed above the picture.

Skipping to the previous or next picture

Select the < or > screen buttons at the bottom of the screen to display the previous or next picture.

Slide show

To start a slideshow of all pictures stored in the respective picture folder, select the \blacktriangleright screen button at the bottom of the screen. The slideshow is started.

When the slideshow is started, the \blacktriangleright screen button changes to **II**.

Select the **II** screen button to pause the slideshow.

Rotating the picture

Select the S screen button at the bottom of the screen to rotate the picture.

Picture menu

To display the picture menu, select the **Menu** screen button at the bottom of the screen.

Picture Viewer Main Select the **Picture Viewer Main** menu item to display a list of all picture folders, see above.

Slideshow Timer

To adjust the time sequence in which one picture is shown during a slide show, select the **Slideshow Timer** menu item. The respective submenu is displayed. Select the desired option.

Shuffle Images

To display the pictures of a slide show in random order, activate the **Shuffle Images** screen button.
Navigation

General information	37
Usage	38
Destination input	42
Guidance	50

General information

The navigation application will reliably guide you to your destination without the need to read maps.

The current traffic situation is taken into account in the route calculation. For this reason, the Infotainment system receives traffic announcements in the current reception area via RDS-TMC.

The navigation application cannot, however, take into account traffic incidents, traffic regulations changed at short notice and hazards or problems that arise suddenly (e.g. road works).

Caution

The usage of the navigation system does not release the driver from the responsibility for a correct, vigilant attitude in road traffic. The relevant traffic regulations must always be followed. If a navigation instruction contradicts traffic regulations, the traffic regulations always apply.

Functioning of the navigation application

The position and movement of the vehicle are detected by the navigation application using sensors. The travelled distance is determined by the vehicle's speedometer signal and turning movements on bends by a gyro sensor. The position is determined by the GPS satellites (Global Positioning System).

By comparing the sensor signals with the digital maps, it is possible to determine the position with an accuracy of approx. 10 metres.

The system will also work with poor GPS reception, however, the accuracy of the determination of the position will be reduced.

After the entry of the destination address or point of interest (nearest petrol station, hotel, etc.) the route is calculated from the current location to the destination selected. Route guidance is provided by voice commands and a direction arrow, as well as with the aid of a multi-colour map display.

Usage

Information on the map display

To display the map around the current location, you may optionally:

- Press the NAV button.

Route guidance not active



If route guidance is not active, the following information is displayed:

- In the top line: information on the audio source currently active and the time.
- Below the top line: **GPS** symbol.
- In the upper left corner: a compass that indicates the north direction.
- Map display of the area around the current position.
- Current position: indicated by a red triangle within a grey circle.
- Points of interest (POI), e.g. petrol stations, parking areas or restaurants: indicated by corresponding symbols (if activated).
- In the bottom line: street name of the current position.

Route guidance active



If route guidance is active, the following information is displayed:

- In the top line: information on the audio source currently active and the time.
- Below the top line: GPS symbol.
- Below the top line: name of the street to follow after the next intersection.
- In the upper left corner: a compass symbol that indicates the north direction.
- Map display of the area around the current position.

- Current position: indicated by a red triangle within a grey circle.
- Route: indicated by a blue line.
- Final destination: indicated by a black chequered flag.
- Waypoint (intermediate destination): indicated by a red diamond.
- Points of interest (POI), e.g. petrol stations, parking areas, or restaurants: indicated by corresponding symbols (if activated).
- Traffic incidents, e.g. traffic jam: indicated by corresponding symbols (if activated).
- On the left side: direction arrow and distance to the next manoeuvre.
- On the left side: remaining distance to the final destination or to the next waypoint.
- On the left side: estimated arrival time or remaining travel time.
- In the bottom line: street name of the current position.

Map manipulation

Moving the visible map section

The visible map section on the map display can be moved freely in all directions using the Eight-way switch.

The Eight-way switch in the middle of the multifunction knob may be tilted in all directions.

Tilt the switch to one side. The visible map section moves in the respective direction.

To redisplay the map around the current location, press the **BACK** button.

Changing the map scale

When the map is displayed, turn the multifunction knob to display a scale bar at the bottom of the screen.

Turn the multifunction knob again to adjust the scale as desired.

Changing the map mode

The map may be displayed in three (route guidance not active), respectively five (route guidance active) different modes, see "Map setup" below.

Repeatedly press the **NAV** button to toggle between the different map modes.

Map setup

Heading indicator

Press the multifunction knob to display the **Navigation Menu**. Select the **Heading Indicator** menu item to display the respective submenu.

The following options are available:

- 2D North Up: 2D view, north facing upwards.
- 2D Heading Up: 2D view, driving direction facing upwards.
- 3D Heading Up: 3D view, driving direction facing upwards.

Select the desired option.

Map modes

Press the multifunction knob to display the **Navigation Menu**. Select the **Map Modes** menu item to display the respective submenu.

The following options are available:

- Full Map ("Normal" view described above): Full screen map view, all function and indication screen buttons displayed.
- Full Glory: Full screen map view, most functions and indication screen buttons hidden.
- Split with Turn List: Divided screen with map on the left and turn list on the right side.
- Split with Turn Arrow: Divided screen with map on the left side and turn arrow for the next turning manoeuvre on the right side.
- Split with Media: Divided screen with map on the left side and audio source currently active on the right side.

Select the desired option.

Map display

Press the multifunction knob to display the **Navigation Menu**. Select the **Map Settings** menu item and then **Map Display** to display the respective submenu.

Depending on the external lighting conditions, activate the **Day** or **Night** menu item.

For an automatic adaption by the system, activate **Automatic**.

Displaying POIs

Press the multifunction knob to display the **Navigation Menu**.

Select the **Show POIs** menu item to display the respective submenu.

If you wish all POIs available in the system to be displayed on the map, activate **Show all POIs**.

If you do not wish POIs to be displayed on the map, activate **Hide all POIs**.

To only display specific POIs, activate the **User Defined** menu item and then activate the POI categories you wish to be displayed.

Changing screen information

The route information displayed on the screen during active route guidance may be customised.

Press the multifunction knob to display the **Navigation Menu**. Scroll through the list and select the **Switch Route Time/Destination** menu item.

Time information

If you wish to change the time information displayed, select **Switch Arrival/Travel Time** to display the respective submenu.

Activate the information setting you wish to be displayed.

Destination information

If you are in a waypoint trip, you may want to display the route information for a waypoint instead of those for the final destination.

To change the setting, select **Switch Waypoint/Destination**. A list of all destinations in the waypoint trip currently active is displayed.

Activate the information setting you wish to be displayed.

Position information

Current position

Press the multifunction knob to display the **Navigation Menu**. Select the **Current Position Info** menu item.

On the right side of the screen, the current position is displayed on the map. On the left side, the GPS coordinates of the current position are shown.

Destination position

If route guidance is active, you may display information on the destination entered.

Press the multifunction knob to display the **Navigation Menu**. Select the **Destination Position Info** menu item.

On the right side of the screen, the destination is displayed on the map. On the left side, the address and the GPS coordinates of the destination are shown.

Saving a position

The current position or a destination position may be saved in the address book.

Select the **Save** screen button. Find a detailed description on saving addresses in the address book $rac{1}{2}$ 42.

Route simulation

The Infotainment system features a route simulation mode for test purposes.

To start the simulation mode, press the **CONFIG** button and then select the **Navigation Settings** menu item.

Scroll through the list and select **Route Simulation** to display the respective submenu.

Starting position

Since the simulation mode does not draw on the GPS signal providing the current position of the vehicle, a start position must be set manually.

Use Last Known Position

To set the last position provided by a GPS signal as starting point, select the **Use Last Known Position** menu item.

Use Previous Destination

To use one of the last destinations entered as starting point, select the **Use Previous Destination** menu item. The previous destinations list is displayed.

Select the desired address.

Use Specified Location

To use a specific location as starting point, select the **Use Specified Location** menu item.

Enter an address. Find a detailed description \diamondsuit 42.

Simulation mode is started.

Cancelling simulation mode

To leave the simulation mode, press the **CONFIG** button and then select the **Navigation Settings** menu item.

Scroll through the list and select **Route Simulation** to display the respective submenu.

Select the **Cancel Route Simulation** menu item.

Additional route simulation menu

When route guidance is active in the simulation mode, an additional menu is displayed in the **Navigation Menu**.

Press the multifunction knob to display the **Navigation Menu**. Scroll through the list and select the **Route Simulation** menu item to display the respective submenu.

To stop the simulated route guidance, select the **Stop Simulation** menu item. The guidance process is stopped, the route guidance mode remains active.

To display the next simulated turning manoeuvre on the map, select the **Next Manoeuvre** menu item.

Destination input

The **Destination** application provides different options to set a destination for route guidance.

Press the **DEST / NAV** button (when route guidance is not active) to display the **Destination Entry** menu.



20°C	10:22
Address Entry	T M K × K ≤ 0
Country: Belgium	
City/Postal: 1234 Bruxelles	
Street.	House #:
Junction:	
	Done

Manual address entry

Address Entry menu

Press the **DEST** / **NAV** button to display the **Destination Entry** menu and then select the **Address Entry** icon to display a mask for address entry. Select the Country entry field. A list is displayed. Select the desired country.

Select the City/Postal entry field to display a keyboard. Enter the desired city name or postal code (see below).

Select the Street entry field to redisplay the keyboard. Enter the desired street name (see below).

You may then enter a house number or junction.

Select the House number or Junction entry field. The keyboard is redisplayed. Enter the desired number or street name (see below).

Note

If a house number is not stored in the system database, the house number closest to the destination entered is used for route calculation.

If required, confirm your input.

A confirmation menu is displayed. Select the **Start Guidance** menu item to start route guidance.

Keyboard

Depending on the function selected, the keyboards may be displayed differently.

20*0												10):22
Stre	et							. 9	114	14	\times	$\beta_i^{(l)}$	< 0
WER									10	99	9		
1	2	3	- 4	5	6		7	8					Delete
Q	W		E	R	т		Y	U		I		0	Ρ
	A,	s	D	F		G		н	J		К		L
ABC	;	Ζ	Х	C		٧		в	Ν		М		9
	La	st 5								s	tree	tLis	st

To change the letter arrangement on the letter keyboard, select the **ABC** screen button on the left side of the keyboard. The letters are now arranged in alphabetical order.

To enter a character sequence, successively select the desired characters.

Note

When entering an address, the keyboard uses an intelligent spelling function which automatically blocks out characters that cannot occur next in the respective character sequence.

To enter special characters not available on the letter keyboard, select the **ÄÖ** screen button at the right side of the letter keyboard. The special characters keyboard is displayed. Select the desired character.

To enter numbers or symbols, select the **Sym** screen button at the right side of the special characters keyboard. The symbols keyboard is displayed. Select the desired character. To redisplay the letter keyboard, select the **ABC** screen button at the right side of the symbol keyboard. This way you may toggle between the three keyboards.

To delete characters already entered, select the **Delete** screen button at the right side of the respective keyboard or press the **BACK** button.

When entering an address, a list of matching entries is automatically displayed as soon as the number of matching entries found in the address memory is equal to or less than six.

To manually display a list of matching entries for the current input, select the respective **List** screen button at the bottom of the keyboard.

To display the last five entries made, select the **Last 5** screen button at the bottom of the keyboard.

Select the desired entry from the list.

If required, select the confirmation button displayed at the bottom of the keyboard.

Points of Interest

A point of interest is a specific location that might be of general interest, e.g. a petrol station, parking area or restaurant.

The data stored within the Infotainment system contain a great number of predefined POIs which are indicated by symbols on the map.

These POIs may be selected as destinations for route guidance.

Search menu

A POI may be selected using different search masks.

Press the **DEST / NAV** button to display the **Destination Entry** menu and then select the **Points of Interest** icon to display the **POI List** menu.

Select **Category:**, **Name:** or **Telephone number**. The respective search mask is displayed.

20°C						2
POI Selection		7	M -	\times	10.1	- 0
Location	Nearby					
Category:	Restaurants and Nightife					
Sort Method:	By Distance					
				Se	arch	

Fill out the entry fields in the respective search mask.

Category search mask

Select the Location entry field to display a list. Select the desired option.

Select the Category entry field to display a POI category list. Select the desired category and then a subcategory from the list.

Select the Sort Method entry field to display the respective submenu. Select **By Distance** or **By Name**.

Select the **Search** screen button at the bottom of the screen. A list of POIs or POI categories is displayed corresponding to the criteria entered. Select the desired menu item.

Name search mask

Select the Country entry field to display a list of all available countries. Select the desired country.

To specify the location, select the entry field for the city or postal code. A keyboard is displayed. Enter the desired name or number.

Select the Sort Method entry field to display the respective submenu. Select **By Distance** or **By Name**.

Select the **Search** screen button at the bottom of the screen. The keyboard is redisplayed.

Enter the name of the desired POI.

Telephone number search mask

Select the Country entry field to display a list of all available countries. Select the desired country.

Select the Sort Method entry field to display the respective submenu. Select **By Distance** or **By Name**.

Select the Number entry field to display a keypad. Enter the desired number.

When the respective search mask is filled out, a confirmation menu is displayed.

Select the **Start Guidance** menu item to start route guidance.

Category lists

Press the NAV button and then the multifunction knob to display the Navigation Menu. Select Nearby POIs or POIs Along Route. A POI category list is displayed.

Select the desired category, subcategories and then POI.

A confirmation menu is displayed. Select the **Start Guidance** menu item to start route guidance.

Previous Destinations

The last destinations selected or entered for route guidance are stored within the system. Press the **DEST** / **NAV** button to display the **Destination Entry** menu and then select the **Previous Destinations** icon.

A list of the last destinations is displayed sorted in reverse chronological order.

Select the desired address from the list.

A confirmation menu is displayed. Select the **Start Guidance** menu item to start route guidance.

Address Book

The **Address Book** provides local storage space for addresses entered in the navigation application.

Storing addresses in the address book

To store an address in the address book, press the **DEST / NAV** button to display the **Destination Entry** menu.

Enter or select the desired address. The confirmation menu is displayed.

10:22
T = M = K = X = M = T T = M = K = X = M = T T = M = T T = M = T T = M = T T = M = T T = M = T T = M = T T = M = T T = M = T T = M = T T = M = T T = M = T T = M = T T = M = T T = M = T T = M = T T = M = T T T = M = T T
Adam-Opel-Strasse
65428 Rüsselsheim, Germany
20 14.0 km

Select the **Save** screen button. The **Address Book Entry** mask is displayed.

20°C				10:22
Address Book I	Entry		MKX	K / 0
Name:	MARY GOLD			
Address:	Pennywish, 24340	Goosefeld,	Germany	
Number:	123456789			
loon:	Thumbtack			
			D	one

Depending on the information available, the different entry fields are already filled.

To enter or modify the name of the respective location, select the Name entry field. A keyboard is displayed. Enter the desired name and confirm your input.

To modify the address, select the Address entry field. The address entry mask is displayed. Make your changes and confirm your input.

To enter or modify the phone number, select the Number entry field. A keypad is displayed. Enter the desired number.

If activated \Rightarrow 38, the address book entries are indicated on the map by POI icons. To change the icon indicating an address entry, select the Icon entry field. A list of all POI icons available within the system is displayed.

Scroll through the list and select the desired icon.

Select the **Done** screen button at the bottom of the entry mask. The address is stored.

Selecting addresses from the address book

Press the **DEST / NAV** button to display the **Destination Entry** menu and then select the **Address Book** icon. A list of all address book entries is displayed.

20°C		10:22
Addr	ess Book	P M K × K ≤ 0
\sim	Home Address	
L.	ABBY ABBY	
	ANDREA	
	EI ANNA	
	IN BAB GROCERIES	
~	EI BADMINTON	

Select the desired entry.

A confirmation menu is displayed. Select the **Start Guidance** menu item to start route guidance.

Editing addresses in the address book

Press the **DEST / NAV** button to display the **Destination Entry** menu and then select the **Address Book** icon. A list of all address book entries is displayed.

Select the desired entry.

A confirmation menu is displayed. Select the **Edit** menu item to display the **Address Book Entry** mask.

Make your changes and confirm your input. The changes are stored in the address book.

Phone Book

Addresses stored in the phone book of the mobile phone connected may be selected as destinations.

Press the **DEST / NAV** button to display the **Destination Entry** menu and then select the **Phone Book** icon. The **Phone Book Search** menu is displayed.

Select the desired first letter range to display a preselection of the telephone book entries you wish to be displayed. The phone book jumps to the position of the letter range selected.

20°C		10:22
Phor	e Book	P M K × K < 0
~	Dag, Peter	
1	Dart, Henry	
	Dedur, Robert	
	Denter, Lisa	
L .	Dog, Tony	
~	Dube, Rudolf	

Select the desired entry in the telephone book to display the address saved under this entry. Select the address.

Note

When the Infotainment system cannot find a valid address, you are prompted with a message.

A confirmation menu is displayed. Select the **Start Guidance** menu item to start route guidance.

Destination selection from the map

Destinations (addresses or POIs) may also be set via the map.

Press the **NAV** button to display the map.

Use the Eight-way switch to centre the map around the desired destination. A red \bigcirc symbol is indicated on the map and the corresponding address is displayed on a label.

20°C 🕂 V	0812	10.92
-Orthophen	Am Südpark 65451 Keisterbach, Germany	201 (198)
7.0	The second second second second	
0 O	Salaranti ()	Ser.
45 km		6
		mala
400m		00

Press the multifunction knob to activate the **Go** screen button.

A confirmation menu is displayed. Select the **Start Guidance** menu item to start route guidance.

Note

If there is more than one POI located at the map position selected, this is indicated on the label. Activating the **Go** screen button then opens a list for selection.

My Home

You can permanently store your home address in the system.

Storing the home address

Press the **DEST / NAV** button to display the **Destination Entry** menu.

Enter your home address.

A confirmation menu is displayed. Select the **Save as Home** menu item.

You are prompted with a message. Confirm the message to save your home address.

Note

The home address is also stored in the address book.

Selecting the home address

Press the **DEST / NAV** button to display the **Destination Entry** menu and then select the **My Home** icon.

Route guidance to the home address is started immediately.

Waypoint routes

When a destination has been entered and route guidance is active, intermediate destinations (waypoints) may be added to the route.

To set up a waypoint route during active route guidance, press the **DEST / NAV** button to open the **Route Menu** and then select the **Destination List** menu item. A submenu is displayed.

20°C	10:22
Destination List	P M K × K ≤ 0
View Waypoint	>
Add Waypoint	>
Delete Waypoint	>
Sort Waypoints	>
Delete All Destinations	>
Save as favourite route	>

Adding waypoints

To add an intermediate destination, select the **Add Waypoint** menu item. The waypoint list is displayed.

0°C dd Waypoint	10:22 マヨミンスト
Ra TILO. An den Römerstein, 551	Add Add
2 Rugener Weg, 3844x Wolfsbu	rg, Germany Add
Scarlensteiner Strasse 5, 651	Add Add Add Add

Select the **Add** screen button at the position where you wish to add a waypoint. The **Destination Entry** menu is displayed.

Enter or select the desired destination. The confirmation menu is displayed.

Select the **Add** menu item. The route is recalculated and the waypoint list is redisplayed with the intermediate destination at the position selected.

Note

Up to four destinations may be stored in a waypoint list.

Deleting waypoints

To delete a waypoint, select the **Delete Waypoint** menu item. The waypoint list is displayed.

Select the **Delete** screen button next to the waypoint you wish to delete.

The waypoint is deleted and the waypoint list is redisplayed.

To delete the whole list and end route guidance, select the **Delete All Destinations** screen button.

Moving waypoints

To change the order of the waypoints in the route, select the **Sort Waypoints** screen button.

Select the **Move** screen button next to the waypoint you wish to move. The **Add Waypoint** menu is displayed.

Select the **Add** screen button at the position where you wish to drop the respective waypoint.

The route is recalculated and the order of the waypoints in the waypoint list is changed.

Favourite Routes

Storing waypoint routes

A waypoint route created (see above) may be saved as favourite route.

During an active waypoint route, press the **DEST / NAV** button to open the **Route Menu** and then select the **Destination List** menu item. A submenu is displayed.

Select **Save as favourite route**. A keyboard is displayed.

Enter a name for the favourite route and confirm your input.

The waypoint route is saved.

Creating new favourite routes Press the DEST / NAV button to display the Destination Entry menu and then select the Favourite Routes icon to display the Favourite Route menu.

Select the **New Favourite Route** menu item. A keyboard is displayed.



Enter a name for the favourite route and confirm your input. The **Favourite Route** menu is redisplayed.

Select the desired favourite route. A menu is displayed.

PET	ER	************************************
~	Start Guidance	>
1	View Waypoint	>
	Add Waypoint	>
L	Delete Waypoint	>
	Sort Waypoints	>
\sim	Delete All Destinations	>

Create a waypoint route (see above).

To change the name of the respective favourite route, select the **Edit Name** menu item. The keyboard for name entry is displayed. Enter the desired name and confirm your input

To delete the respective favourite route, select the **Delete Favourite** menu item. The favourite route is deleted and the **Favourite Route** menu is redisplayed.

Selecting a favourite route

Press the **DEST / NAV** button to display the **Destination Entry** menu and then select the **Favourite Routes** icon to display a list of the favourite routes saved.

Select the desired route from the list. The route confirmation menu is displayed.

To start route guidance, select the **Start Guidance** menu item.

Latitude / Longitude

The GPS coordinates of a desired location may be used to set a destination.

Press the **DEST** / **NAV** button to display the **Destination Entry** menu and then select the **Latitude** menu item.

Select the Latitude entry field to display the **Geolocation Entry** menu.

10°C			1	0:22 AJ
Geolocation Entry			$M \le \times 1$	< 0
	Lat	lude		
N	8*	24	15*	

Repeatedly press the multifunction knob to adjust the first setting as desired.

Turn the multifunction knob to move to the next value to be set.

Proceed like this to set all values.

Select the **BACK** button to return to the next higher menu level.

Adjust the longitude values as described above.

When all GPS coordinates are entered, select the **Search** screen button at the bottom of the screen.

A confirmation menu is displayed.

To start route guidance, select the **Start Guidance** menu item.

Deleting saved destinations

To delete destinations stored in the system, press the **CONFIG** button, select the **Navigation Settings** menu item and then **Delete Saved Destinations**. A submenu is displayed.

Activate the menu items of the storage location you wish to be cleared.

Select the **Delete** screen button. The selected storage locations are cleared.

Guidance

Starting and cancelling route guidance

Starting route guidance

Enter or select the desired address.

A confirmation menu is displayed. Select the **Start Guidance** menu item to start route guidance.



Cancelling route guidance

When route guidance is active, press the **DEST / NAV** button to display the **Route Menu**.

Select the **Cancel Route** menu item to cancel the current navigation session.

Guidance instructions

Route guidance is provided by voice prompts and visual instructions on the map (if activated).

Voice prompts

Navigation voice prompts announce which direction to follow, when approaching an intersection at which you need to turn.

Press the **CONFIG** button and then select the **Navigation Settings** menu item.

Select the **Voice Prompt** menu item to display the respective submenu.

If you wish the system to audibly indicate the next turning manoeuvre, activate **Navigation Voice Prompts**.

If you wish traffic alerts to be read out, activate **Traffic Alert Prompts**.

To adjust the volume during voice prompts, select the **Navigation Volume** menu item. The respective submenu is displayed.

To adjust the volume of voice prompts, select **Announcement** and then adjust the setting as desired.

To adjust the volume of the audio source possibly playing in the background, select **Background** and then adjust the setting as desired. Select **Volume Test** to get an audio example of the settings.

Guidance alerts

Guidance alerts show in a close-up view of the respective map section which direction to follow when approaching an intersection at which you need to turn.

Press the **CONFIG** button and then select the **Navigation Settings** menu item.

Select the **Guidance Alert** menu item to display the respective submenu.

If you wish the display to automatically show the map when approaching the next turning manoeuvre, activate **Guidance Alert in Primary**.

If you wish turning manoeuvres to be displayed in a close-up view, activate **Guidance Alert in Map**.

Traffic incidents

The TMC traffic information system receives all current traffic information from TMC radio stations. This information is included in the calculation of a route.

Traffic settings

Press the **CONFIG** button and then select the **Navigation Settings** menu item.

Select the **Traffic Settings** menu item to display the respective submenu.

To use the TMC traffic information system, activate the **Traffic Events** menu item.

Recalculation of an active route

If a traffic problem occurs during active route guidance, the route may be changed.

Select **Alert if better route is available** to display the respective submenu.

If you wish the route to be constantly adapted to the current traffic situation, activate **Route Based on Traffic Conditions**. Choose between Automatic Recalculation and Recalculation after Confirmation of a corresponding message.

Traffic incidents on the map

Traffic incidents may be indicated on the map by corresponding symbols.

Select **Show Traffic Events on Map** to display the respective submenu.

20"0			10:22
Shov	v Traffic Events on Map	空間式に	$< x \le 0$
~	Show All		0
L .	Hide All		0
L	User Defined		۲
L	Advisories	******	Ð
1	Closed Roads	0	Ð
~	Incidents	23.13.13.	Ð

Select the desired option.

If **User Defined** is activated, scroll through the list and activate the traffic incidents categories you wish to be displayed.

TMC stations

The TMC stations broadcasting traffic information, may be set automatically or manually.

Select the **Traffic Stations** menu item to display a selection mask.

Select the Mode entry field to display the respective submenu. Select the desired option.

If **Manual Station Selection** is chosen, a TMC station needs to be set.

Select the Station entry field to display the **Traffic Station List**.

Select the desired station.

Traffic incidents lists

When route guidance is active, press the **NAV** button and then press the multifunction knob to display the **Navigation Menu**. Scroll through the list and select the **Traffic** menu item.

To display a list of all traffic events known for the area around the current vehicle location, select the **All Traffic Events** menu item. To display a list of the traffic events concerning the current route, select the **Traffic Events on Route** menu item.

The traffic incidents lists may be sorted in different ways.

Select the **Traffic Settings** menu item in the **Traffic** menu and then **Sort Method:**. The respective submenu is displayed.

Activate the desired option.

Route tracking

The bread crumbs function allows tracking of the roads already taken in a route.

Press the **CONFIG** button and then select the **Navigation Settings** menu item. Select the **Bread Crumbs** menu item to display the respective menu.

To start a tracking session, activate the **Record** menu item. The route taken is recorded and displayed as dotted line on the map.



To delete the bread crumbs already dropped in an active tracking session, select the **Delete** screen button. You are prompted with a message. Confirm the message to delete all bread crumbs.

To end the tracking session, deactivate the **Record** menu item. A keyboard is displayed.

Enter a name for the respective tracking session and select the **Done** screen button. The session is stored in the **Saved** list.

To display a list of all tracking sessions, select the **Saved** screen button. Select the desired tracking session to display the **Bread Crumb Details** menu.

To change the name of the respective tracking session, select the **Edit Name** menu item. A keyboard is displayed. Enter the desired name and select the **Done** screen button.

Select the **Load** menu item to display the bread crumb main menu. If you wish the respective tracking session to be constantly displayed on the map, activate the **Display** menu item.

To directly display the whole tracking session in the respective map section, select the **Show on Map** menu item.

To delete the respective tracking session, select the **Delete** menu item.

Routing

When a route has been calculated, you may manually change certain parts or recalculate the whole route.

Turn List

The **Turn List** displays all streets and turning manoeuvres on the calculated route starting from the current location.

Press the **DEST / NAV** button and then select the **Turn List** menu item. The turn list is displayed.

20°C			10:22
Tum			
~	B43 Rugbyring 0.4 km	faries.	Avoid
		1mins	
	1 Friedrich-Lutzmann-Ring 260 m	<1m	Avoid
	Friedrich-Lutzmann-Ring	111	Avoid
	240 m	<1m	711010
~			
	()		

To exclude certain streets from the route, select the **Avoid** screen button next to the respective street.

The route is recalculated and the respective street is excluded.

Avoid List

When streets have been excluded from the original route, they are displayed in the **Avoid List**.

Press the **DEST / NAV** button and then select the **Avoid List** menu item to display the respective submenu.

To display all streets avoided, select the **View List** menu item.

To delete all avoidances and return to the original route, select the **Delete All Items** menu item.

Detour

Press the **DEST / NAV** button and then select the **Detour** menu item.

To change the route for a certain distance, select the **Detour By Distance** menu item. A menu listing different distances is displayed.

Select the desired distance. The route is recalculated accordingly.

To block the whole route, select the **Detour Complete Route** menu item. The original route is blocked and a new route to the desired destination is calculated.

Exit list

To display a list of the next exits and motorway stations while driving on a motorway, press the **NAV** button and then press the multifunction knob to display the **Navigation Menu**.

Scroll through the list and select the **Exit List** menu item.

Route options

When route guidance is active, press the **DEST / NAV** button and then select the **Route Options** menu item.

A list of route calculation options and road types is displayed.

To define by what criteria a route may be calculated, activate one of the options: **Fastest** for the fastest route (in time), **Shortest** for the shortest route (in distance) or **Eco** for the route with the lowest fuel consumption.

To define which road types may be included in the calculation of the route, activate the desired options: highways, tollroads, ferries, etc.

Speech recognition

General information	55
Usage	56
Speech commands overview	59

General information

Embedded speech recognition

The speech recognition of the Infotainment system enables you to operate various functions of the Infotainment system via voice input. It recognises commands and numeric sequences independently of the relevant speaker. The commands and numeric sequences can be spoken without a pause between the individual words.

In the event of incorrect operation or commands, the speech recognition gives visual and/or acoustic feedback and requests you to re-enter the desired command. Apart from this, the speech recognition acknowledges important commands and will enquire if necessary.

In general, there are different ways to speak commands for completing the tasks. Most of them, except destination entry and voice keypad, can be completed in a single command. If the action takes more than one command to be performed, proceed as follows:

In the first command, you indicate the type of action to be performed, e.g. "Navigation destination entry". The system replies with prompts that lead you through a dialogue for entering the necessary information. For example, if a destination for route guidance is needed, say "Navigation" or "Destination entry".

Note

To ensure that conversations inside the vehicle do not lead to unintentional triggering of the system functions, the speech recognition does not start until it has been activated.

Language support

- Not all languages available for the display of the Infotainment system are also available for the speech recognition.
- If the currently selected display language is not supported by the speech recognition, speech recognition is not available.

In such a case you must select another language for the display if you want to control the Infotainment system via voice input. Changing the display language, see "Language" in chapter "System settings" ♀ 21.

Address input for destinations in foreign countries

In case you want to enter the address of a destination located in a foreign country via voice input, you must change the language of the Infotainment display to the language of the foreign country.

E.g. if the display is currently set to English and you want to enter the name of a city located in France, you must change the display language to French.

Exceptions: If you want to enter addresses in Belgium, you may optionally change the display language to French or Dutch. For addresses in Switzerland you may optionally change the display language to French, German, or Italian. For changing the display language, see "Language" in chapter "System settings" ♀ 21.

Input order for destination addresses

The order in which the parts of an address must be entered using the speech recognition system is dependent on the country where the destination is located.

An example for the respective input order is given out by the system.

Voice pass-thru application

The voice pass-thru application of the Infotainment system allows access to the speech recognition commands on your smartphone. See the operating instructions for your smartphone to find out whether your smartphone supports this feature.

Usage

Embedded speech recognition

Activating speech recognition

Note

Speech recognition is not available during an active phone call.

Press the κ button on the right side of the steering wheel.

The audio system mutes, the 6 symbol on the display is highlighted, and a voice output message prompts you to say a command.

As soon as the speech recognition is ready for voice input, a beep is heard.

You can now say a voice command to directly initiate a system function (e.g. playing a radio station), or to start a dialogue sequence with several dialogue steps (e.g. entering a destination address), see "Operation via speech commands" further below. After a dialogue sequence is finished, the speech recognition is deactivated automatically. To initiate another dialogue sequence, you must activate the speech recognition again.

Adjusting the volume of voice prompts

Press the + or - buttons on the right side of the steering wheel.

Interrupting a voice prompt

As an experienced user, you can interrupt a voice prompt by briefly pressing the k button on the steering wheel.

A beep is heard immediately, and a command can be stated without having to wait.

Cancelling a dialogue sequence

There are several possibilities to cancel a dialogue sequence and to deactivate the speech recognition:

- Say "Cancel" or "Exit".
- Press the
 button on the right side of the steering wheel.

In the following situations a dialogue sequence is automatically cancelled:

- If you do not say any commands for some time (by default you are prompted three times to say a command).
- If you say commands that are not recognised by the system (by default you are prompted three times to say a correct command).

Operation via speech commands

The speech recognition can understand commands that are either naturally stated in sentence form, or direct commands stating the application and the task.

For best results:

- Listen for the voice prompt and wait for the beep before saying a command or replying.
- Say "Help" if you want to listen again to the help prompt for the current dialogue step.

- The voice prompt can be interrupted by pressing the ⊮ button again. If you wish to directly speak your command, press the ⊮ button twice.
- Wait for the beep and then speak the command naturally. In most cases, recognition rates will be higher if pauses are kept to a minimum. Use short and direct commands.

Usually phone and audio commands can be spoken in a single command. For example, "Call David Smith at work", "Play" followed by the artist or song name, or "Tune to" followed by the radio frequency and the waveband.

Navigation destinations, however, are too complex for a single command. First, state "Navigation" and then, e.g. "Address" or "Point of Interest". The system responds with requesting more details.

After saying "Point of Interest", only major chains may be selected by name. Chains are businesses with at least 20 locations. For other POIs, say the name of a category, e.g. "Restaurants", "Shopping centres", or "Hospitals".

Direct commands are easier understood by the system, e.g. "Call 01234567".

If you say "Phone", the system understands that a phone call is requested and responds with respective questions until enough details are gathered. If the phone number has been saved with a name and a place, the direct command should include both, for example "Call David Smith at work".

Selecting list items

When a list is displayed, a voice prompt asks to confirm or select an item from that list. A list item may be manually selected, or by speaking the line number of the item.

The list on a speech recognition screen functions the same as a list on other screens. Manually scrolling the list on a screen during a speech recognition session suspends the current speech recognition event and plays a prompt like "Make your selection from the list using the manual controls, or press the back button on the faceplate to try again".

If no manual selection is made within 15 seconds, the speech recognition session terminates, you are prompted with a message, and the former screen is redisplayed.

The "Back" command

To return to the previous dialogue step, alternatively: say "**Back**", or press the **BACK** button on the instrument panel.

The "Help" command

After saying "**Help**", the help prompt for the current dialogue step is read aloud.

To interrupt the help prompt, press the ⊮ button again. A beep is heard. You may say a command.

Voice pass-thru application

Activating the voice pass-thru speech recognition

Press and hold the \cancel{k} button on the right side of the steering wheel until a speech recognition session is started.

Find further information in the operating instructions for your smartphone.

Adjusting the volume of voice prompts

Press the + or - buttons on the right side of the steering wheel.

Deactivating the voice pass-thru speech recognition

Press the ∞ button on the right side of the steering wheel. The speech recognition session is ended.

Speech commands overview

The table below contains an overview of the most important speech commands.

Menu	Action	Speech commands
All menus	Confirming a system question	(Yes Right OK Yeah Yep Correct)
	Negating a system question	(No Incorrect Wrong Nope)
	Cancelling a session	Cancel
	Returning to previous step	([Go] Back Return Previous)
	Asking for assistance	(Help Assistance) (Help Assist) Me More Commands
	Activating or deactivating "Verbose"	[Set] Verbose On [Set] Verbose Off
	Requesting the current music source	("What's" What is) playing [now]

60 Speech recognition

Menu	Action	Speech commands
Radio menu	Selecting a waveband	[Tune [to] Select] F M [Radio] [Tune [to] Select] A M [Radio] [Tune [to] Select] D A B [Radio]
	Selecting a station	Tune F M Tune A M Tune D A B
Media menu	Selecting a media source	[Play Select] C D [Play Select] U S B [Play Select] [Front] AUX [Play Select] Bluetooth Audio
	Selecting a search category	Play Artist Play Album Play Genre Play Folder Play Playlist Play Composer Play Audiobook
	Selecting a song	Play Song

Menu	Action	Speech commands	
Navigation menu	Entering a destination	Directed [Destination] Address [entry] (enter go to navigate to) [Destination] Address Directed	
		(Navigation Destination), [Destination] Address [entry] (Enter Go to Navigate to) [Destination] Address	
		(Navigation Destination), [Destination] (Intersection Junction)	
	Entering a POI	(Navigation Destination), (P O I (Place Point) of Interest)	
		(Navigation Destination), (P O I (Place Point) of Interest) (nearby near me)	
		(Navigation Destination), (POI (Place Point) of Interest) (around near) destination	
		(Navigation Destination), (P O I (Place Point) of Interest) along [the] (route way)	
	Entering the home address	(Navigation Destination), [Go] [to] Home	
	Asking for the current location	(Navigation Destination), Where am I [My] Current Location What is My Current Location	

62 Speech recognition

Menu	Action	Speech commands
Navigation	Adding a waypoint	(Navigation Destination), Add Waypoint Directed Address
menu		(Navigation Destination), Add Waypoint ([Destination] Address [entry] (Enter Go to Navigate to) [Destination] Address)
		(Navigation Destination), Add Waypoint (P O I (Place Point) of Interest)
		(Navigation Destination), Add Waypoint (Intersection Junction)
		(Navigation Destination), Add Waypoint [(Go Navigate) to] Contact
		(Navigation Destination), Add Waypoint [(Go Navigate) [to]] Home
	Deleting a waypoint	(Navigation Destination), Delete Waypoint
	Cancelling route guidance	(Navigation Destination), (Stop Cancel Turn Off End) (Navigation [My] [Current] Route Directions Route Guidance)
	Activating/	[Set Turn] Voice Guidance On
	deactivating voice guidance	[Set Turn] Voice Guidance Off

Menu	Action	Speech commands
Phone menu	Pairing device	(Pair Connect) [Device]
	Dialling a number	Digit Dial (Call Dial Ring)
	Redialling the last number	Redial [Last Number]
	Erasing digits	(Clear Erase) (Clear Erase) All
	Reading a text message	[Read] (Messages Texts S M S)

... : dynamic spacer stands for the specific names to be inserted in that position

| : vertical bar separates alternatives

(): round brackets embrace alternatives

[]: square brackets designate optional parts in a command

, : comma separates necessary steps in a sequence

Phone

General information	64
Bluetooth connection	65
Emergency call	66
Operation	67
Text messages	70
Mobile phones and CB radio	
equipment	72

General information

The Phone portal provides you with the possibility of having mobile phone conversations via a vehicle microphone and the vehicle loudspeakers as well as operating the most important mobile phone functions via the Infotainment system in the vehicle. To be able to use the Phone portal, the mobile phone must be connected with it via Bluetooth.

The Phone portal can be operated optionally via the speech recognition system.

Not all Phone portal functions are supported by every mobile phone. The possible phone functions depend on the relevant mobile phone and network provider. You will find further information on this in the operating instructions for your mobile phone or you can enquire about them with your network provider.

Important information for operation and traffic safety

▲Warning

Mobile phones have effects on your environment. For this reason safety regulations and directions have been prepared. You should be familiar with the related directions before you use the telephone function.

∆Warning

Use of the hands-free facility while driving can be dangerous because your concentration is reduced when telephoning. Park your vehicle before you use the handsfree facility. Follow the stipulations of the country in which you find yourself at present.

Do not forget to follow the special regulations that apply in specific areas and always switch off the mobile phone if the use of mobile phones is prohibited, if interference is caused by the mobile phone or if dangerous situations can occur.

Bluetooth

The Phone portal is certified by the Bluetooth Special Interest Group (SIG).

You will find further information about the specification on the Internet at http://www.bluetooth.com

Bluetooth connection

Bluetooth is a radio standard for the wireless connection of e.g. mobile phones, iPod/iPhone models, or other devices.

To be able to set up a Bluetooth connection to the Infotainment system, the Bluetooth function of the Bluetooth device must be activated. For further information, please consult the user guide of the Bluetooth device. Via the **Bluetooth** menu, pairing (PIN code exchange between Bluetooth device and Infotainment system) and connecting of the Bluetooth devices to the Infotainment system are carried out.

Important information

- Up to five devices can be paired to the system.
- Only one paired device can be connected to the Infotainment system at a time.
- Pairing normally only needs to be carried out once, unless the device is deleted from the list of paired devices. If the device has been connected previously, the Infotainment system establishes the connection automatically.
- Bluetooth operation considerably drains the device's battery. Therefore, connect the device to the power outlet for charging.

Bluetooth menu

To open the **Bluetooth** menu, press the **CONFIG** button. Select the **Phone Settings** menu item and then **Bluetooth**.

The menu items **Device list** and **Pair device** are displayed.

Pair device

To initiate the pairing process on the Infotainment system, select the **Pair device** menu item. A message with a four-digit Infotainment system code is displayed.

Initiate the pairing process on the Bluetooth device. If required, enter the Infotainment system code on the Bluetooth device.

A six-digit PIN code for the pairing process is displayed on the Infotainment system.

To confirm the pairing process:

If SSP (secure simple pairing) is supported:

Compare the PIN codes displayed on the Infotainment system and on the Bluetooth device (if demanded) and confirm the message on the Bluetooth device.

If SSP (secure simple pairing) is not supported:

Enter the PIN code on the Bluetooth device and confirm your input.

The devices are paired and the phone main menu is displayed.

The phone book and call lists (if available) are downloaded from the Bluetooth device.

If required, confirm the corresponding message on the Bluetooth device.

Device list

The device list contains all Bluetooth devices paired to the Infotainment system.

20°C	10:22
Device list	小さんという
O 1 MyPhone	>
O 2 Nick's Phone	>
O 3 Nina's Phone	>
O 4 Phone 3	>
05<>	

If a new device is paired, it is displayed in the device list.

Connecting a device

Select the device you wish to connect. A submenu is displayed.

Select the **Select** screen button.

The device previously connected is disconnected and this device is connected.

Deleting a device

Select the device you wish to delete. A submenu is displayed.

Select the **Delete** screen button.

The device is deleted.

Emergency call

▲Warning

Connection setup cannot be guaranteed in all situations. For this reason you should not rely exclusively on a mobile phone when a vitally important communication (e.g. a medical emergency) is concerned.

In some networks it may be necessary for a valid SIM card to be properly inserted in the mobile phone.

∆Warning

Bear in mind that you can make and receive calls with the mobile phone, if it is in a service area with a sufficiently strong signal. Under certain circumstances emergency calls cannot be made on all mobile phone networks; it is possible that they cannot be made when certain network services and/or telephone functions are active. You can enquire about this with the local network operators.

The emergency call number can differ depending on the region and country. Please enquire beforehand about the correct emergency call number for the relevant region.

Making an emergency call

Dial the emergency call number (e.g. **112**).

The telephone connection to the emergency call centre is set up.

Answer when the service personnel questions you about the emergency.

∆Warning

Do not end the call until you are requested to do so by the emergency call centre.

Operation

As soon as a connection via Bluetooth has been set up between your mobile phone and the Infotainment system, you can also operate many functions of your mobile phone via the Infotainment system.

After setting up a connection between the mobile phone and the Infotainment system, the mobile phone data is transmitted to the Infotainment system. This can take some time depending on the phone model. During this period, operation of the mobile phone is possible via the Infotainment system only to a limited extent.

Not every telephone supports all functions of the phone application. Therefore, deviations from the range of functions described are possible.

Phone main menu

To display the phone main menu, press the 𝖍/𝔅 button. The following screen is displayed (if a mobile phone is connected).



Initiating a phone call

Entering a number

Press the ✔/☆ button and then select the **Enter number** menu item. A keypad is displayed.



Enter the desired number.

Select the **Del** screen button or press the **BACK** button to delete the last digit entered.

Select the \blacktriangleright or \blacktriangleleft screen button to move the cursor within the number already entered.

To start dialling, select the **OK** screen button.

Note

You may access the phone book from the keypad by pressing the **PB** button.

Phone book

Press the r∕i≋ button and then select the **Phone Book** menu item. The **Phone Book Search** menu is displayed.

0°C		10:22	
Sear	ch	T = 1 = 1 = 1	
~	DEF	>	
L	GHI	>	
	JKL	>	
	MNO	•	
	PQRS	>	
~	TUV		

Select the desired first letter range to display a preselection of the telephone book entries you wish to be displayed. The phone book jumps to the position of the letter range selected.

Select the desired entry in the telephone book to display the numbers saved under this entry.

Select the desired number to start dialling.

Phone book sorting

The phone book may be sorted by last name or by first name.

To change the sorting order, select the 𝖍≋ button and then the Phone Settings menu item.

Select **Sort Order** to display the respective submenu.

Activate the desired option.

Call lists

Press the ✔/☆ button and then select the Call Lists menu item. The Call Lists menu is displayed.

10°C		10:22
Call Lists		P M R × R < 0
Incom	ning calls	>
Outgo	ping calls	>
Misse	d calls	>

Select the desired call list. Depending on the list selected, the last incoming, outgoing or missed calls are displayed.

Select the desired entry in the call list to start dialling.

Incoming calls

When a call comes in, a message is displayed on the screen.



 20°C
 10:22

 attl
 Image: Second seco

To take the call, select the **Answer** screen button.

To reject the call, select the **Decline** screen button.

Functions during a phone call

When a call is active, the in-call view is displayed.

Ending a phone call

To end the call, select the **Hang up** screen button.

Muting a call

To temporarily mute the microphone, activate the **Mute call** screen button.

Deactivate the **Mute call** screen button to unmute the microphone.

Transferring to handset

Select the **Transfer to Handset** menu item to transfer the call to the mobile phone. The **Private Call** menu is displayed.

To transfer the call back to the Infotainment system, select the **Transfer call** menu item in the **Private Call** menu.

Second phone call

Initiating a second phone call

While a call is active, select the **Enter number** menu item in the in-call view. The keypad is displayed. You may enter a number or select a number from the phone book, see above.

Second incoming phone call

When a second call comes in, a message is displayed at the bottom of the screen.

Select the desired option.

If the call is taken, the first call is put on hold and the second call becomes active.

Both calls are displayed in the in-call view.



To switch between the calls, select the **Switch calls** menu item.

Conference call

Select the **Merge calls** screen button to activate both calls at the same time.

The **Merge calls** screen button changes to **Detach call**.

To end a conference call, select the **Detach call** screen button.

Ending phone calls

In a conference call, select the **Hang up** screen button to end both phone calls.

Text messages

As soon as a connection via Bluetooth has been set up between your mobile phone and the Infotainment system, you can operate the messages inbox of your mobile phone via the Infotainment system.

Not every phone supports the text messages function of the Infotainment system.

Activating the messages application on the mobile phone

The transmission of text message data to the Infotainment system must be activated on the mobile phone.

After connecting to the Infotainment system you may be prompted with a message on your mobile phone requesting permission to access the mobile phone text messages via the Infotainment system. Confirm the message.

If no message is displayed, access the Bluetooth menu on your mobile phone, select the name of the Infotainment system and activate the corresponding access function.

Note

Find detailed information for granting access on different mobile phones on our website.

The **Messages** icon in the Home menu of the Infotainment system is then selectable.

Incoming text message

When a new text message is received, you are prompted with a message indicating the name or number of the sender.

Select one of the options in the message.

Listen

If you wish the system to read out the message, select the **Listen** screen button.

View

To display the message on the screen, select the respective screen button.

Note

Messages are only displayed on the screen when the vehicle is parked.

Dismiss

To dismiss the message, select the respective screen button.

Reply

To directly answer the message, select the **Reply** screen button. A list of predefined messages is displayed.

Select the desired message and confirm your input.

The message is sent.

Note

New predefined messages may be created in the settings menu.

Call

To call the sender of the text message, select the **Call** screen button.

Inbox

Press the 🗳 button and then select the **Messages** icon to display the respective menu.

Select the **Inbox** menu item to display a list of all inbox messages.

20*0		10:22
Inbo	t.	T M K × K \ 0
\sim	01234567	
1	1348991	
	 34589 	
	● 73449	
1	98223	
\sim	● 24595	

Select the desired message. The message is displayed on the screen.

Note

Messages are only displayed on the screen when the vehicle is parked.

If desired, select one of the options at the bottom of the screen (see above).

Settings

Press the 🗳 button and then select the **Messages** icon to display the respective menu.

Select the **Settings** menu item to display the respective submenu.

Adjust the settings as desired.

Mobile phones and CB radio equipment

Installation instructions and operating guidelines

The vehicle specific installation instructions and the operating guidelines of the mobile phone and handsfree manufacturer must be observed when installing and operating a mobile telephone. Failure to do so could invalidate the vehicle type approval (EU directive 95/54/ EC).

Recommendations for fault-free operation:

- Professionally installed exterior antenna to obtain the maximum range possible,
- Maximum transmission power 10 watts,
- Installation of the phone in a suitable spot, consider relevant Note in the Owner's Manual, chapter Airbag system.

Seek advice on predetermined installation points for the external antenna or equipment holder and ways of using devices with a transmission power exceeding 10 watts.

Use of a handsfree attachment without external antenna with mobile telephone standards GSM 900/1800/1900 and UMTS is only permitted if the maximum transmission power of the mobile telephone is 2 watts for GSM 900 or 1 watt for the other types.

For reasons of safety, do not use the phone while driving. Even use of a handsfree set can be a distraction while driving.

▲Warning

Operation of radio equipment and mobile telephones which fail to meet above mentioned mobile telephone standards is only permitted using an antenna located outside of the vehicle.

Caution

Mobile telephones and radio equipment may lead to malfunctions in the vehicle electronics when operated inside the vehicle with no exterior antenna, unless the above mentioned regulations are observed.
Frequently asked questions

Frequently asked questions 73

Frequently asked questions

Speech recognition

⑦ The speech recognition function does not work very well. How can I improve its performance?

① Wait for the beep and then try to speak the command naturally. Avoid long pauses, use little accentuation and speak at a moderate volume.

Detailed description ▷ 56.

- ⑦ The voice prompts given out by the speech recognition system are too long. How can I interrupt them to directly speak a command?
- ① To interrupt the voice prompt of the speech recognition system, press the ⊮ button on the steering wheel. Wait for the beep and then speak your command.

Detailed description \Leftrightarrow 56.

- ⑦ I cannot select a phone contact via speech recognition. What am I doing wrong?
- ① The Infotainment system accesses the phone book entries as they are stored. If the sorting order is set to "last name, first name", the correct command for calling John Smith is "Smith, John".

Detailed description ⇔ 55.

- ⑦ I cannot enter an address located in another country via speech recognition. What am I doing wrong?
- ① Via speech recognition, you can only enter addresses for destinations located in the country whose language is selected as the system language, e.g. if the system is set to German, you cannot enter a destination located in France.

Detailed description ⇔ 55.

Phone

- ⑦ How can I pair my phone with the Infotainment system?

Detailed description ⇔ 65.

- ⑦ How can I access my phone book or recent calls list via the Infotainment system?
- ① Depending on the phone, you must allow access to the respective data in the settings of your mobile phone. In general, the download of the phone book and recent calls list is not supported by all mobile phones.

Detailed description \diamondsuit 65.

- ② Although access to my phone book has been granted, not all contacts are available in the Infotainment system. Why is that?
- ① Depending on the phone, contacts stored on the SIM card cannot be read by the Infotainment system.

Detailed description \diamondsuit 65.

Navigation

- ⑦ How can I toggle between total driving time or remaining driving time and total distance or partial distance?
- ① When the navigation application is active, press the multifunction knob to display the Navigation Menu. Select Switch Route Time/ Destination and adjust the settings as desired.

Detailed description ▷ 38.

- When pressing the DEST/NAV button, different menus are displayed sometimes. Why is that?
- ① If route guidance is active, the destination application is displayed for you to select a destination.

Detailed description ⇔ 42.

If route guidance is not active, the **Route Menu** is displayed.

Detailed description \Leftrightarrow 50.

Audio

- When playing media files from a device connected via Bluetooth, the track title and artist are not displayed in the Infotainment system and the media browse function is not available. Why is that?
- ① When connecting a device via Bluetooth, due to the Bluetooth protocol supported only restricted functions are available.

Detailed description ⇔ 34.

⑦ The Infotainment system does not have a tone button on the faceplate. How can I change the tone settings?

Detailed description \diamondsuit 19.

Index

A	C
Activating AUX 34	Ca
Activating Bluetooth music	C
Activating CD player	Cł
Activating radio24	Co
Activating the Infotainment system 14	
Activating the navigation system 38	
Activating the phone portal	Co
Activating USB audio 34	D
Activating USB picture	
Address book 42	DA
Audio CUE volume20	De
Audio files	Di
Autostore lists25	Di
Retrieving stations	Di
Storing stations25	
Auto volume	E
AUX	Er
В	EC
BACK button	Ec
Balance	F
Basic operation16	г Ба
Bass	Fa Fa
Bluetooth connection	га Fa
Bluetooth music	гa
Bread crumbs50	
	Fil

-	
Category list	. 24
CD player	. 30
Chime volume	
Control elements	
Infotainment system	8
Steering wheel	8
Control elements overview	8

-	
DAB	. 29
Date	. 21
Destination input	. 42
Digital audio broadcasting	. 29
Display	. 21
Displaying pictures	. 35

Emergency call	66
EQ	19
Equaliser	19

Factory defaults	21
Fader	19
Favourite lists	26
Retrieving stations	26
Storing stations	26
File formats	30

Audio files	32
Picture files	32
Frequently asked questions7	73

G

General information 30, 32, 37, 55,	64
AUX	32
Bluetooth music	32
CD	30
Infotainment system	. 6
Navigation	37
Phone portal	64
Radio	24
USB	32
Gracenote	32
Guidance	50

Н

Home address	42
Home Page	16, 21

N Navigation Address book	50 42 38 42 42 42 38 50 42 42 42 38 38 38

Recent destinations...... 42

Route simulation	38
Route tracking	50
TMC stations	50
Traffic incidents	50
Turn list	50
Voice prompts	
Waypoint trip	42
Navigation system	37
Navigation volume	20

0

Operation67AUX34Bluetooth music34CD31Infotainment system14Menu16Navigation system38Phone67Radio24USB34, 35
--

Ρ

•	
Pairing	65
Phone	
Bluetooth	64
Bluetooth connection	65
Conference call	67
Emergency calls	66
Functions during a call	67
Conference call Emergency calls	67 66

Phone book67
Recent calls 67
Text messages70
Phone book
Phone call
Initiating67
Taking
Picture files
Pictures35
Playing audio
POIs

R Radio

Radio	
Autostore lists	25
Category list	24
DAB	
DAB announcements	29
Digital Audio Broadcasting	29
Favourite lists	
Radio Data System	
RDS	
RDS Options menu	27
Regional	
Retrieving stations	
Station list	
Station search	
Storing stations	
TP	
11	21

Traffic Programme	
S Software update	
Software21 Time and Date21	
TA. 27 TA volume. 20 Text messages. 70 Theft-deterrent feature 7 Time. 21 Time format. 21	
TMC	

Tone settings TP Traffic incidents Traffic programme Treble Turn list	27 50 27 19
U Usage	34 31 14 38 67 35
V	
Voice recognition	55
Audio Cue volume Auto volume Chime volume Maximum startup volume Mute function Navigation volume Volume of traffic	20 20 20 14

announcements	20
/olume settings	20

١

W Waveband selection......24 Waypoint trip......42

CD 400

Introduction	82
Radio	92
CD Player	101
AUX input	104
USB port	105
Bluetooth music	108
Phone	110
Index	120

Introduction

General information	82
Theft-deterrent feature	83
Control elements overview	84
Usage	86
Basic operation	88
Tone settings	90
Volume settings	91

General information

The Infotainment system provides you with state-of-the-art in-car infotainment.

Using the FM, AM or DAB radio functions, you may register up to 36 stations on six favourites pages.

The integrated audio player will entertain you with audio CDs and MP3/WMA CDs.

You can connect external data storage devices, e.g. iPod, MP3 player, USB stick, or a portable CD player to the Infotainment system as further audio sources; either via cable or via Bluetooth.

In addition, the Infotainment system is equipped with a Phone portal that allows for comfortable and safe use of your mobile phone in the vehicle.

Optionally, the Infotainment system can be operated using controls on the steering wheel.

The well-thought-out design of the control elements and the clear displays enable you to control the system easily and intuitively.

Note

This manual describes all options and features available for the various Infotainment systems. Certain descriptions, including those for display and menu functions, may not apply to your vehicle due to model variant, country specifications, special equipment or accessories.

Important information on operation and traffic safety

▲Warning

The Infotainment system must be used so that the vehicle can be driven safely at all times. If in doubt, stop the vehicle and operate the Infotainment system while the vehicle is stationary.

Radio reception

Radio reception may be disrupted by static, noise, distortion or loss of reception due to:

- changes in distance from the transmitter,
- multipath reception due to reflection,
- shadowing.

Theft-deterrent feature

The Infotainment system is equipped with an electronic security system for the purpose of theft deterrence.

The Infotainment system therefore functions only in your vehicle and is worthless to a thief.

Control elements overview

Control panel



Introduction 85

1	Radio station buttons 1 - 6	8
2	Long press: save station 93 Short press: select station 93 එ VOL knob	9
	Press: switch on/off Infotainment system	
3	Turn: adjust volume	1
4	Activate radio or change waveband92 CD button	1
5	Activate CD source 101 AUX button	1
6	Activate media or change audio source	
	Open telephone main menu 110	
7	or activate/deactivate mute function	1

8	TONE button
9	Tone settings90 ⇔ BACK button
	Menu: one level back
10	Input: delete last character or entire entry
11	Central control for selection and navigation in menus
12	System settings 86 INFO button
	Radio: Information about the current station
	CD/MP3/WMA: Information about the current track
13	≙ button
	Eject disc 102

14	TP button
15	Activate or deactivate radio traffic service
16	Autostore lists
17	Radio favourites
	Radio: search backwards and forwards
	CD/MP3/WMA: skip track backwards or forwards 102

Steering wheel audio controls



1 ⊭ 🛹 button

2

Press: end/decline call 114
or close call list 114
or activate/deactivate mute function
Short press: take phone call 110 or activate redial function 114 or dial number in call list 114

Long press: open call list 114
or switch handsfree mode on/off
SRC (Source) 86
Press: select audio source 86
With radio active: turn upwards/downwards to select next/previous preset radio station
With CD player active: turn upwards/downwards to select next/previous CD/ MP3/WMA track
With Phone portal active and call list open (see item 1): turn upwards/ downwards to select next/ previous entry in call list 114
With Phone portal active and calls waiting: turn upwards/downwards to switch between calls

3

4

Usage

Control elements

The Infotainment system is operated via function buttons, a multifunction knob and menus that are shown on the display.

Inputs are made optionally via:

- the control panel on the Infotainment system ⇔ 84
- audio controls on the steering wheel ⇔ 84.

Switching the Infotainment system on or off

Press the \bigcirc **VOL** knob briefly. After switching on, the last selected Infotainment source becomes active.

Press the \oplus VOL knob again to turn the system off.

Automatic switch-off

If the Infotainment system is switched on using the \bigcirc **VOL** knob while the ignition is turned off, it will switch off again automatically 10 minutes after the last user input.

Setting the volume

Turn the \bigcirc **VOL** knob. The current setting is shown on the display.

When the Infotainment system is switched on, the last selected volume is set, provided this setting is lower than the maximum startup volume (see below).

The following inputs can be made separately:

- the maximum startup volume ♀ 91
- the volume of traffic announcements \$\$ 91.

Speed compensated volume

When speed compensated volume is activated \Rightarrow 91, the volume is adapted automatically to make up for the road and wind noises as you drive.

Mute function

Press the \checkmark / \measuredangle button or the \measuredangle button (if Phone portal available: press for a few seconds) to mute the audio sources. To cancel the mute function: turn the \bigcirc VOL knob or press the \checkmark / \checkmark button (if Phone portal available: press for a few seconds) or press the \checkmark button again.

Volume limitation at high temperatures

At very high temperatures inside the vehicle the Infotainment system limits the maximum adjustable volume. If necessary, the volume is decreased automatically.

Modes of operation

Radio

Press the **RADIO BAND** button to open the radio main menu or to change between the different wavebands.

Press the multifunction knob to open the waveband menus with options for the station selection.

For a detailed description of the radio functions \diamondsuit 92.

Audio players

Press the **AUX** button once or several times to open the USB, iPod or AUX main menu (if available) or to switch between these menus.

Press the multifunction knob to open the relevant menus with options for the track selection.

For a detailed description of:

- CD player functions \$ 101
- AUX functions 🗘 104
- USB port functions \$ 105
- Bluetooth music functions ¢ 108.

Phone

Press the \checkmark / \checkmark button briefly to open the telephone menu.

Press the multifunction knob to open the phone menu with options for the input and selection of numbers.

For a detailed description of the Phone portal \Rightarrow 110.

System settings

Adjusting the language

The menu texts on the Infotainment system's display can be displayed in various languages.

Press the **CONFIG** button to open the **Settings** menu.

Select the **Languages** menu item in the **Settings** menu to display the respective menu.

Choose the desired language for the menu texts.

Note

Find a detailed description for the menu operation \diamondsuit 88.

Time and date settings

Find a detailed description in your Owner's Manual.

Basic operation

Multifunction knob

The multifunction knob is the central control element for the menus.

Turn the multifunction knob:

- to mark a menu option
- to set a numeric value.

Press the multifunction knob:

- to select or activate the marked option
- to confirm a set value
- to switch a system function on/off.

BACK button

Press the C BACK button briefly to:

- exit a menu
- return from a submenu to the next higher menu level
- delete the last character in a character sequence.

Press and hold the \Leftrightarrow **BACK** button for a few seconds to delete the entire entry.

Examples of menu operation

Selecting an option

Settings	
Languages	>
Time Date	>
Radio settings	>

Turn the multifunction knob to move the cursor (= coloured background) to the desired option.

Press the multifunction knob to select the marked option.

Submenus

An arrow on the right-hand edge of the menu indicates that after selection of the option a submenu with further options will be opened.

Activating a setting

	DAB announcements	
🕫 Drama		
Culture		
12 Science		

Turn the multifunction knob to mark the desired setting.

Press the multifunction knob to activate the setting.

Set time		
	12:15 PM	

~ ...

Turn the multifunction knob to change the current value of the setting.

Press the multifunction knob to confirm the set value.

The cursor then switches to the next value. If all values are set, you are automatically returned to the next higher menu level.

Adjusting a setting

Tone settings		
Bass	0	
Midrange	7	
Treble	0	

Turn the multifunction knob to adjust the setting.

Press the multifunction knob to confirm the setting.

Switching a function on or off

RDS options	\$
RDS	On
Regional	On
Text scroll freeze	Off

Turn the multifunction knob to mark the function to be switched on or off.

Press the multifunction knob to switch between the settings **On** and **Off**.

Entering a character sequence

Enter number	
1234	
0123456789+*#+	

To enter character sequences, e.g. PIN codes or telephone numbers:

Turn the multifunction knob to mark the desired character.

Press the multifunction knob to confirm the marked character.

To change the position of the cursor in the character sequence already entered, select ◄ or ► on the display.

Tone settings

In the tone settings menu the tone characteristics can be set differently for each radio waveband and each audio player source.

Press the **TONE** button to open the tone settings menu.

Setting bass, midrange, and treble

Scroll through the list and select **Bass**, **Midrange** or **Treble**.

Set the desired value for the selected option.

Setting the volume distribution between front and rear

Scroll through the list and select **Fader**.

Set the desired value.

Setting the volume distribution between right and left

Scroll through the list and select **Balance**.

Set the desired value.

Selecting a tone style

Scroll through the list and select **EQ** (Equaliser). The **EQ presets** menu is displayed.



The displayed options offer optimised bass, middle, and treble presettings for the relevant style of music.

Select the desired option.

Setting an individual setting to "0"

Select the desired option and press the multifunction knob for a few seconds.

The value is reset to "0".

Setting all settings to "0" or "OFF"

Press the **TONE** button for a few seconds.

All values are reset to "0", the EQ preset is set to "**OFF**".

Volume settings

Adjusting the speed compensated volume

Press the **CONFIG** button to open the **Settings** menu.

Select Radio settings and then Auto volume control.

The **Auto volume control** function can be deactivated or the degree of the volume adaptation can be selected in the menu displayed.

Select the desired option.

Adjusting the maximum startup volume

Press the **CONFIG** button to open the **Settings** menu.

Select **Radio settings** and then **Maximum startup volume**.

Set the desired value.

Adjusting the volume of traffic announcements

The volume of traffic announcements can be preset to increase or decrease in proportion to the normal audio volume.

Press the **CONFIG** button to open the **Settings** menu.

Select Radio settings, RDS options and then TA volume.

Set the desired value.

Adjusting the volume of the ring tone

Press the **CONFIG** button to open the **Settings** menu.

Select Phone settings, Sound & Signals and then Ring Volume.

Set the desired value.

Radio

Usage	. 92
Station search	. 92
Autostore lists	. 93
Favourite lists	. 93
Waveband menus	. 94
Radio data system (RDS)	. 97
Digital audio broadcasting	. 98

Usage

Activating the radio Press the RADIO BAND button to open the radio main menu.

10:2	0		17	°C
() FM	Pop BBB The Favo	dio 2 Leave me"	-/FAV	/1

The station last played will be received.

Selecting the waveband

Press the **RADIO BAND** button once or several times to select the desired waveband.

The station last played in that waveband will be received.

Station search

Automatic station search

Briefly press the buttons 𝔄 𝔄 or 𝔅 𝔅 to play the previous or next station in the station memory.

Manual station search

Press and hold the buttons \triangleleft N or \bowtie D. Release the respective button when the required frequency has almost been reached on the frequency display.

A search is made for the next station that can be received and it is played automatically.

Note

Manual station search: If the radio does not find a station, it switches automatically to a more sensitive search level. If it still does not find a station, the frequency that was last active is set again.

Note

FM waveband: when the RDS function is activated, only RDS stations ▷ 97 are searched for, and

when the radio traffic service (TP) is activated, only traffic service stations \diamondsuit 97 are searched for.

Manual station tuning

AM and FM radio

Turn the multifunction knob and set the optimal reception frequency.

DAB radio

Press the multifunction knob to open the respective waveband menu and select **DAB manual tuning**. On the popup frequency display, turn the multifunction knob and set the optimal reception frequency.

Autostore lists

The stations received best in a waveband can be searched for and stored automatically via the autostore function.

Each waveband has 2 autostore lists (**AS-Stations 1**, **AS-Stations 2**), in each of which 6 stations can be stored.

AS-Stations	/FM /	1S1
1 FM 89.0	QI) 2 FM 92.1	
3 FM 93.8	4 FM 95.6	
5 FM 95.9	6 FM 97.2	

Note

The currently received station is marked by \P .

Automatic station storing

Keep the **AS 1-2** button pressed until an autostore message is displayed. The 12 strongest stations in the current waveband will be stored in the 2 autostore lists.

To cancel the autostore procedure, press the multifunction knob.

Storing stations manually

Stations can also be stored manually in the autostore lists.

Set the station to be stored.

Briefly press the **AS 1-2** button once or several times to switch to the desired list.

To store the station in a list position: press the corresponding station button **1**...**6** until a confirmation message is displayed.

Note

Manually stored stations are overwritten in an automatic station storing process.

Retrieving a station

Briefly press the **AS 1-2** button once or several times to switch to the desired list.

Briefly press one of the station buttons 1...6 to open the station at the corresponding list position.

Favourite lists

Stations of all wavebands can be stored manually in the favourite lists.

FAV page 1/6				/FAV1
1 FM 102.3	¢1))	2 FM	96.8	21741
3 FM 89.0		4 FM	93.1	
5 FM 105.8		6 FM	103.9	

6 stations can be stored in each favourite list. The number of available favourite lists can be set (see below).

Note

The currently received station is marked by \P .

Storing a station

Set the station to be stored.

Briefly press the **FAV 1-2-3** button once or several times to switch to the desired list.

To store the station in a list position: press the corresponding station button **1**...**6** until a confirmation message is displayed.

Retrieving a station

Briefly press the **FAV 1-2-3** button once or several times to switch to the desired list.

Briefly press one of the station buttons 1...6 to open the station at the corresponding list position.

Defining the number of available favourite lists

Press the **CONFIG** button to open the **Settings** menu.

Select **Radio settings** and then **Radio** favourites to open the menu Max. number of favourites pages.

Select the desired number of available favourite lists.

Waveband menus

Alternative facilities for station selection are available via waveband specific menus.

FM menu	
Favourites list	>
FM stations list	>
FM category list	>

Note

The following displays are shown as examples.

Stations lists

When in a radio main menu, turn the multifunction knob to open the stations list of the respective waveband.

All receivable FM, AM or DAB stations in the current reception area are displayed.

FM station	s list
88.2 MHz	d»
89.0 MHz	
92.4 MHz	

Note

If no station list has been created beforehand, the Infotainment system performs an automatic station search.

Select the desired station.

Note

The currently received station is marked by \blacksquare .

Updating the stations lists

When in a radio main menu, press the multifunction knob to open the relevant waveband menu.

If the stations stored in the wavebandspecific station list can no longer be received:

Select the menu item **Update FM** stations list, **Update AM stations list** or **Update DAB stations list** in the respective waveband menu.

A station search is started. Once the search is completed, the station last received will be played.

To cancel the station search: press the multifunction knob.

Note

If the Infotainment system features a dual tuner, the stations lists are continuously updated in the background. No manual update is required.

Note

If a waveband specific station list is updated the corresponding category list (if available) is also updated.

Favourites list

Being in a radio main menu, press the multifunction knob to open the relevant waveband menu.

Select **Favourites list**. All stations saved in the favourite lists are displayed.

Favourites list	
FM 102.3 MHz	(FAV1-P1)
FM 96.8 MHz	(FAV2-P2)
FM 89.0 MHz	(FAV3-P3) (引))

Select the desired station.

Note

The currently received station is marked by \P .

Category lists

Numerous RDS ♀ 97 and DAB ♀ 98 stations broadcast a PTY code, which specifies the type of programme transmitted (e.g. news). Some stations also change the PTY code depending on the content currently being transmitted. The Infotainment system stores these stations, sorted by programme type, in the corresponding category list.

To search for a programme type determined by station: select the waveband specific category list option.

A list of programme types currently available is displayed.

FM category list	
Science (2)	>
Entertainment (7)	>
Pop music (12)	>

Select the desired programme type.

A list of stations is displayed that transmit a programme of the selected type.

FM category static	on list
BBC Radio 2	
BBC Radio 3	۹))
BBC Radio 7	

Select the desired station.

The category list is updated, too, when the corresponding waveband specific station list is updated.

Note

The currently received station is marked by \blacksquare .

DAB announcements

Besides their music programmes, numerous DAB stations ▷ 98 broadcast various announcement categories. The currently received DAB service (programme) is interrupted when any announcement of previously activated categories is pending.

Activating announcement categories Being in the DAB menu, select DAB announcements to display the respective menu.

	DAB announcements	
🕫 Drama		
Culture		
z Science		U

Activate the desired announcement categories.

Several announcement categories can be selected at the same time.

Note

The following options are only available, if **RDS** is set to **On**.

Radio data system (RDS)

RDS is a service of FM stations that considerably facilitates the finding of the desired station and its fault-free reception.

Advantages of RDS

- On the display, the programme name of the set station appears instead of its frequency.
- During a station search, the Infotainment system tunes in to RDS stations only.
- The Infotainment system always tunes into the best receivable broadcasting frequency of the set station by means of AF (Alternative Frequency).
- Depending on the station that is received, the Infotainment system displays radio text that can contain e.g. information about the current programme.

Configuring RDS

Press the **CONFIG** button to open the **Settings** menu.

Select Radio settings and then RDS options.

RDS options	
RDS	On
Regional	On
Text scroll freeze	Off

Set the option RDS to On or Off.

Note

If RDS is switched off, it will be automatically switched on again when a radio station is changed (by search function or preset button).

Note

The following options are only available, if **RDS** is set to **On**.

RDS options

Switching regionalisation on and off

At certain times some RDS stations broadcast regionally different programmes on different frequencies.

Set the option Regional to On or Off.

If regionalisation is switched on, only alternative frequencies (AF) with the same regional programmes are selected.

If regionalisation is switched off, alternative frequencies of the stations are selected without regard to regional programmes.

RDS scrolling text

Some RDS stations hide the programme name in the display line in order to display additional information.

To prevent additional information being displayed:

Set Text scroll freeze to On.

Radio text

If the RDS function is activated and a RDS station is currently received, information about the current programme and the music track currently playing are displayed below the programme name.

To show or hide the information, set **Radio text** to **On** or **Off**.

TA volume

The volume of traffic announcements (TA) can be preset. For a detailed description r > 91.

Radio traffic service

(TP = Traffic Programme)

Radio traffic service stations are RDS stations that broadcast traffic news.

Switching the radio traffic service on and off

To switch the traffic announcement standby facility of the Infotainment system on and off:

Press the **TP** button.

- If the radio traffic service is switched on, [] is displayed in the radio main menu.
- Only radio traffic service stations are received.
- If the current station is not a radio traffic service station, a search is started automatically for the next radio traffic service station.
- If a radio traffic service station has been found, [TP] is displayed in the radio main menu.
- Traffic announcements are played at the preset TA volume ⇔ 91.
- If the radio traffic service is switched on, CD/MP3 replay is interrupted for the duration of the traffic announcement.

Listening to traffic announcements only

Switch on the radio traffic service and completely turn down the volume of the Infotainment system.

Blocking out traffic announcements

To block out a traffic announcement, e.g. during CD/MP3 replay:

Press the **TP** button or the multifunction knob to confirm the cancelling message on the display.

The traffic announcement is cancelled, but the radio traffic service remains switched on.

Digital audio broadcasting

Digital audio broadcasting (DAB) is an innovative and universal broadcast system.

DAB stations are indicated by the programme name instead of the broadcasting frequency.



General information

- With DAB, several radio programmes (services) can be broadcasted on a single frequency (ensemble).
- Besides high-quality digital audio services, DAB is also able to transmit programme-associated data and a multitude of other data services including travel and traffic information.
- As long as a given DAB receiver can pick up the signal sent out by a broadcasting station (even if the signal is very weak), sound reproduction is ensured.
- There is no fading (weakening of the sound that is typical of AM or FM reception). The DAB signal is reproduced at a constant volume.
- If the DAB signal is too weak to be picked up by the receiver, reception is interrupted completely. This incident can be avoided by activating Auto ensemble linking and/or Auto linking DAB-FM in the DAB settings menu.

- Interference caused by stations that are on nearby frequencies (a phenomenon that is typical of AM and FM reception) does not occur with DAB.
- If the DAB signal is reflected by natural obstacles or buildings, the reception quality of DAB is improved, whereas AM or FM reception is considerably impaired in such cases.
- When DAB reception is enabled, the FM tuner of the Infotainment system remains active in the background and continually searches for the best receivable FM stations. If TP ♀ 97 is activated, traffic announcements of the FM station which is currently best receivable are issued. Deactivate TP, if DAB reception should not be interrupted by FM traffic announcements.

Configuring DAB

Press the CONFIG button.

Select Radio settings and then DAB settings.

The following options are available in the configuration menu:

Auto ensemble linking

With this function activated, the device switches over to the same service (programme) on another DAB ensemble (frequency) when the DAB signal is too weak to be picked up by the receiver.

Set the function to **On** or **Off**.

Auto linking DAB-FM

With this function activated, the device switches over to a corresponding FM station of the active DAB service when the DAB signal is too weak to be picked up by the receiver.

Set the function to On or Off.

Dynamic audio adaption

With this function activated, the dynamic range of the DAB signal is reduced. That means the level of the loud sounds is reduced and the level of the quiet sounds is increased. Therefore, the volume of the Infotainment system can be raised to a point where the quiet sounds are audible, without the loud sounds being too loud.

Set the function to On or Off.

Band selection

Select the menu item **Band selection** to display the respective menu.

To define which DAB wavebands are to be received by the Infotainment system, activate one of the options:

L-Band: 1452 - 1492 MHz, earth and satellite radio

Band III: 174 - 240 MHz, earth radio Both

CD Player

General information	101
Usage	102

General information

The Infotainment system's CD player can play audio CDs and MP3/WMA CDs.

Important information

Caution

Under no circumstances place single-CDs with a diameter of 8 cm or shaped CDs in the audio player.

You must not put any stickers on CDs. These discs can get jammed in the CD drive and ruin the player. Replacement of the device will then be necessary.

The following CD formats can be used:

CD-ROM Mode 1 and Mode 2. CD-ROM XA Mode 2, Form 1 and Form 2.

The following file formats can be used:

ISO 9660 Level 1, Level 2 (Romeo, Joliet).

MP3 and WMA files written in any format other than listed above may not play correctly and their file names and folder names may not be displayed correctly.

- Audio CDs with copy protection, which are not in compliance with the audio CD standard, may not play correctly or not at all.
- Self-recorded CD-Rs and CD-RWs are more vulnerable to mishandling than prerecorded CDs. Correct handling, especially in the case of self-recorded CD-Rs and CD-RWs, must be ensured (see below).
- Self-recorded CD-Rs and CD-RWs may not play correctly or not at all. In such cases it is not the equipment that is at fault.
- On mixed mode CDs (audio tracks and compressed files, e.g. MP3, are stored), the audio tracks part and the compressed files part can be played separately.
- Avoid leaving fingerprints when you change CDs.

- Put CDs back in their sleeves immediately after removing them from the CD player in order to protect them from damage and dirt.
- Dirt and liquids on CDs can smear the lens of the CD player inside the device and cause faults.
- Protect CDs from heat and direct sunlight.
- The following restrictions apply to MP3/WMA CDs:

Bit rate: 8 kbit/s - 320 kbit/s.

Sampling frequency: 48 kHz, 44.1 kHz, 32 kHz (for MPEG-1) and 24 kHz, 22.05 kHz, 16kHz (for MPEG-2).

 The following restrictions apply to the data stored on an MP3/WMA CD:

Number of tracks: max. 999.

Number of tracks per folder level: max. 512.

Folder structure depth: max. 10 levels.

Note

This chapter deals only with playing MP3 files since the operation for MP3 and WMA files is identical. When a CD with WMA files is loaded MP3 related menus are displayed.

Usage

Starting CD replay

Press the **CD** button once or several times to open the CD or MP3 main menu.

10:20 •	17 °C
CD Track 1 Leave me now The Favourites	0:18

If there is a CD in the CD player, CD replay is started.

Depending on the data stored on the audio CD or MP3 CD, differing information about the CD and the current music track will be shown on the display.

Inserting a CD

Insert a CD with the printed side facing up into the CD slot until it is drawn in.

Note

If a CD is inserted, • is shown on the display.

Skipping to the next or previous track

Briefly press the buttons ◀ ⋪ or ⋫ №.

Fast forward or rewind

Press the buttons \triangleleft K or \bowtie \bowtie and hold them down to fast forward or fast rewind the current track.

Selecting tracks using the audio CD menu

Press the multifunction knob to open the **CD menu**.

CD menu	
Shuffle songs	On
Repeat	Off
Folders	>

Shuffle songs

To play all tracks in a random order: set this function to **On**.

Note

If this function is activated, $\supset \Rightarrow$ is shown in the respective main menu.

Repeat

To repeatedly listen to a track: set this function to **On**.

Note

If this function is activated, is shown in the respective main menu.

Track list

To select a track on the CD: select **Track list** and then select the desired track.

Folders

To select a track from a folder: select **Folders**. A list of the folders stored on the CD is displayed.

Select one of the folders and then select the desired track.

Note

This menu item is only available, if an MP3 CD is inserted.

Search...

To open a menu for track search and selection: select **Search...**.

Select one of the categories and then select the desired track.

Note

This menu item is only available, if an MP3 CD is inserted.

Removing a CD

Press the Δ button.

The CD is pushed out of the CD slot.

If the CD is not removed after ejection, it will be drawn back in again automatically after a few seconds.

AUX input

General information	104
Usage	104

General information

On the control panel of the Infotainment system ▷ 84, there is an AUX input for the connection of external audio sources.

It is possible, for example, to connect a portable CD player with a 3.5 mm jack plug to the AUX input.

Note

The socket must always be kept clean and dry.

Usage

Press the **AUX** button once or several times to activate the AUX mode.



Turn the O **VOL** knob of the Infotainment system to adjust the volume.

All other functions can be operated only via the control elements of the audio source.

USB port

General information	105
Playing saved audio files	106

General information

In the centre console below the climate controls there is a USB socket for the connection of external audio data sources.

Note

The socket must always be kept clean and dry.

An MP3 player, USB drive, SD card (via USB connector/adapter), or iPod can be connected to the USB port.

When connected to the USB port, various functions of the above devices can be operated via the controls and menus of the Infotainment system.

Note

Not all MP3 player, USB drive, SD card or iPod models are supported by the Infotainment system.

Important information

 The external devices connected to the USB port must comply with the USB Mass Storage Class specification (USB MSC).

- Devices connected via USB are supported according to USB Specification V 2.0. Maximum supported speed: 12 Mbit/s.
- Only devices with a FAT16/FAT32 file system are supported.
- Hard disk drives (HDD) are not supported.
- USB hubs are not supported.
- The following file formats can be used:

ISO9660 Level 1, Level 2 (Romeo, Joliet).

MP3 and WMA files written in another format than listed above may not play correctly, and their file names and folder names may not be displayed correctly.

The following restrictions apply to the files stored on the external device:

Bit rate: 8 kbit/s - 320 kbit/s.

Sampling frequency: 48 kHz, 44.1 kHz, 32 kHz (for MPEG-1) and

106 USB port

24 kHz, 22.05 kHz, 16kHz (for MPEG-2).

The following restrictions apply to the data stored on external devices connected to the USB port:

Number of tracks: max. 999.

Number of tracks per folder level: max. 512.

Folder structure depth: max. 10 levels.

WMA files with Digital Rights Management (DRM) from online music shops cannot be played.

WMA files can only be played safely, if they were created with Windows Media Player version 9 or later.

Applicable playlist extensions: .m3u, .pls, .wpl.

Playlist entries must be in the form of relative paths.

The system attribute for folders/ files that contain audio data must not be set.

Playing saved audio files

Press the **AUX** button once or several times to activate the MP3 or iPod mode.

Replay of the audio data stored on the device is started automatically.

10:20		17 °C
USB	The Favourites Leave me now Best of	▶ 01:22

Using the device-specific menu

Press the multifunction knob to open the menu of the device currently connected.

Menu US	В
Shuffle songs	On
Repeat	Off
Folders	>U

Shuffle songs

To play all tracks in a random order: set this function to **On**.

Note

If this function is activated, $\Rightarrow \ddagger$ is shown in the respective main menu.

Repeat

To repeatedly listen to a track: set this function to **On**.

Note

If this function is activated, rais shown in the respective main menu.

Folders

To select a track from a folder: select **Folders**. A list of the folders stored on the device is displayed.

Select one of the folders and then select the desired track.

Note

This menu item is not available, if an iPod is connected.

Search...

To open a menu for track search and selection: select **Search...**.

Select one of the categories and then select the desired track.

Removing the device

To safely remove the device, select **Remove USB** or **Eject iPod** and then disconnect the device.

Bluetooth music

General information	108
Operation	108

General information

Bluetooth enabled audio sources (e.g. music mobile phones, MP3 players featuring Bluetooth, etc.) which support the Bluetooth music protocol A2DP can be connected wirelessly to the Infotainment system.

Important information

- The Infotainment system only connects to Bluetooth devices that support A2DP (Advanced Audio Distribution Profile) version 1.2 or higher.
- The Bluetooth device must support AVRCP (Audio Video Remote Control Profile) version 1.0 or higher. If the device does not support AVRCP, only the volume can be controlled via the Infotainment system.
- Before connecting the Bluetooth device to the Infotainment system, become acquainted with its user guide for Bluetooth functions.

Operation

Prerequisites

The following prerequisites must be met in order to use the Bluetooth music mode of the Infotainment system:

- The Bluetooth function of the Infotainment system must be activated \$ 111.
- The Bluetooth function of the external Bluetooth audio source must be activated (see user guide of the device).
- Depending on the external Bluetooth audio source, it may be required to set the device to "visible" (see user guide of the device).
- The external Bluetooth audio source must be paired and connected to the Infotainment system \$ 111.
Activating the Bluetooth music mode

Press the **AUX** button once or several times to activate the Bluetooth music mode.

Bluetooth music playback has to be started and paused/stopped via the Bluetooth device.

Operation via Infotainment system

Adjusting the volume

The volume can be adjusted via the Infotainment system \diamondsuit 86.

Skipping to previous or next track

Briefly press the buttons ◀ Ħ or Ħ ▷ on the control panel of the Infotainment system.

Phone

General information	110
Bluetooth connection	111
Emergency call	113
Operation	114
Mobile phones and CB radio	
equipment	117

General information

The Phone portal provides you with the possibility of having mobile phone conversations via a vehicle microphone and the vehicle loudspeakers as well as operating the most important mobile phone functions via the Infotainment system in the vehicle. To be able to use the Phone portal, the mobile phone must be connected to the Infotainment system via Bluetooth.

Not all Phone portal functions are supported by every mobile phone. The possible phone functions depend on the relevant mobile phone and network provider. You will find further information on this in the operating instructions for your mobile phone or you can enquire about them with your network provider.

Important information for operation and traffic safety

▲Warning

Mobile phones have effects on your environment. For this reason safety regulations and directions have been prepared. You should be familiar with the related directions before you use the telephone function.

∆Warning

Use of the hands-free facility while driving can be dangerous because your concentration is reduced when telephoning. Park your vehicle before you use the handsfree facility. Follow the stipulations of the country in which you find yourself at present.

Do not forget to follow the special regulations that apply in specific areas and always switch off the mobile phone if the use of mobile phones is prohibited, if interference is caused by the mobile phone or if dangerous situations can occur.

Bluetooth

The Phone portal is certified by the Bluetooth Special Interest Group (SIG).

You will find further information about the specification on the Internet at http://www.bluetooth.com

Control elements

The most important telephone specific control elements are the following:

 $\boldsymbol{\varsigma}$ / $\boldsymbol{\varkappa}$ button: opens the telephone main menu.

Controls on steering wheel:

Bluetooth connection

Bluetooth is a radio standard for the wireless connection of e.g. a telephone with other devices. Data such as a telephone book, call lists, the network operator's name, and field strength can be transferred. The functionality can be restricted depending on the telephone type.

To be able to set up a Bluetooth connection with the Phone portal, the Bluetooth function of the mobile phone must be activated and the mobile phone must be set to "visible". Find a detailed description in the operating instructions for the mobile phone.

Activating Bluetooth

Press the **CONFIG** button to open the **Settings** menu.

Select **Bluetooth settings** and then **Bluetooth**.

Bluetooth	
Activation	>
Device list	>
Add device (Handsfree)	>[

Select Activation and then On.

Pairing a Bluetooth device

Press the CONFIG button to open the Settings menu. Select Bluetooth settings and then Add device (Handsfree).

The following display is shown.



As soon as the Phone portal of the Infotainment system is detected, it appears in the device list of your Bluetooth device. Select the Phone portal.

Upon request, enter the PIN code on your Bluetooth device. The devices are paired and connected.

Note

Your mobile phone book will be downloaded automatically. The presentation and order of the telephone book entries may be different on the Infotainment system's display and the mobile phone's display. If the Bluetooth connection has been successfully performed: in case another Bluetooth device had been connected to the Infotainment system, this device is now disconnected from the system.

If the Bluetooth connection failed: start the procedure described above again or consult the user guide of the Bluetooth device.

Note

A maximum of 5 devices can be paired with the Infotainment system.

Changing the Bluetooth code

Press the **CONFIG** button to open the **Settings** menu.

Select **Bluetooth settings** and then **Change Bluetooth code**. The following display is shown.

Enter the desired four-digit PIN code and confirm your input with **OK**.

Connecting another paired device

Press the **CONFIG** button to open the **Settings** menu.

Select **Bluetooth settings** and then **Device list**. A list of all Bluetooth devices currently paired to the Infotainment system is displayed.

Device list	
⊙ 1. MyMobile1	>
O 2. MyMobile2	>
03. ↔	U

Select the desired device. A submenu is displayed.

Select the submenu item **Select** to establish the connection.

Disconnecting a device

Press the **CONFIG** button to open the **Settings** menu.

Select **Bluetooth settings** and then **Device list**. A list of all Bluetooth devices currently paired to the Infotainment system is displayed.

Select the paired device. A submenu is displayed.

Select the submenu item **Disconnect** to disconnect the device.

Removing a paired device

Press the **CONFIG** button to open the **Settings** menu.

Select **Bluetooth settings** and then **Device list**. A list of all Bluetooth devices currently paired to the Infotainment system is displayed.

Select the desired device. A submenu is displayed.

If the device is connected, it has to be disconnected first (see above).

Select the submenu item **Delete** to remove the device.

Restoring the factory defaults

The phone settings, e.g. the device list, the Bluetooth code, and the ring tone, can be reset to the factory defaults. Press the **CONFIG** button to open the **Settings** menu. Select **Bluetooth settings** and then **Restore factory settings**.

The submenu prompts you with a question. To reset all values to the factory defaults, select **Yes**.

Emergency call

▲Warning

Connection setup cannot be guaranteed in all situations. For this reason you should not rely exclusively on a mobile phone when a vitally important communication (e.g. a medical emergency) is concerned.

In some networks it may be necessary for a valid SIM card to be properly inserted in the mobile phone.

▲ Warning

Bear in mind that you can make and receive calls with the mobile phone, if it is in a service area with a sufficiently strong signal. Under certain circumstances emergency calls cannot be made on all mobile phone networks; it is possible that they cannot be made when certain network services and/or telephone functions are active. You can enquire about this with the local network operators.

The emergency call number can differ depending on the region and country. Please enquire beforehand about the correct emergency call number for the relevant region.

Making an emergency call

Dial the emergency call number (e.g. **112**).

The telephone connection to the emergency call centre is set up.

Answer when the service personnel questions you about the emergency.

▲Warning

Do not end the call until you are requested to do so by the emergency call centre.

Operation

As soon as a Bluetooth connection has been set up between your mobile phone and the Infotainment system, you can also operate many functions of your mobile phone via the Infotainment system.

Via the Infotainment system, you can, e.g., set up a connection to the telephone numbers stored in your mobile phone or change the telephone numbers.

Note

In the handsfree mode, mobile phone operation is still possible, e.g. taking a call or adjusting the volume. After the setup of a connection between the mobile phone and the Infotainment system, mobile phone data is transmitted to the Infotainment system. This can take several minutes depending on the phone model. During this period, operation of the mobile phone is possible via the Infotainment system only to a limited extent.

Note

Not every mobile phone supports all functions of the Phone portal. Therefore deviations from the range of functions described with these specific mobile phones are possible.

Prerequisites

The following prerequisites must be met in order to use the handsfree mode of the Infotainment system:

- The Bluetooth function of the Infotainment system must be activated \$ 111.
- The Bluetooth function of the mobile phone must be activated (see user guide of the device).

- The mobile phone must be set to "visible" (see user guide of the device).
- The mobile phone must be paired to the Infotainment system <a>Phi 111.

Activating the handsfree mode

Press the 5. / 18 button on the control panel of the Infotainment system. The phone main menu is displayed.

Note

If there is no mobile phone connected to the Infotainment system, **No phone available** is displayed. For a detailed description of how to establish a Bluetooth connection \diamondsuit 111.

Many functions of the mobile phone can now be controlled via the phone main menu (and associated submenus) and via the phonespecific controls on the steering wheel.

Initiating a phone call

Entering a number manually

Being in the phone main menu, press the multifunction knob to open the **Phone Menu**.

Select the submenu item **Enter number**. The following screen is displayed.



Enter the desired number and select **\circle\$** on the display to start dialling.

Note

To open the **Search** screen of the phone book, select \square .

Using the phone book

Note

The phone book may only be downloaded, if this function is supported by your mobile phone. For further information please consult the user guide of your mobile phone.

The phone book contains contact names and numbers.

Phone book	
Adam Adamsson	
Bert Bertisson	
Billy Billisson	

Being in the phone main menu, press the multifunction knob to open the **Phone Menu**. Select the submenu item **Phone book**. Select **Search** and then **First Name** or **Last Name**. The following screen is displayed.

		Searching)	
ABC	DEF	GHI	JKL	MNO
PQRS	TUV	WXYZ	0-9	etc

As on a telephone or mobile phone, the letters are organised in alphabetical groups on the display: **abc**, **def**, **ghi**, **jkl**, **mno**, **pqrs**, **tuv**, and **wxyz**.

Select the desired group of letters. The phone book is displayed showing the entries starting with one of the letters in the letter group.

Scroll through the list and select the desired entry name.

Scroll through the list of phone numbers and select the desired number. The corresponding phone number is dialled.

Updating the phone book

If entries in the phone book of your mobile phone have changed, you may update the phone book entries first downloaded to the Infotainment system.

Press the ✓ / ✓ button to display the **Phone Menu**. Select **Phone book** and then **Update**. You are prompted with a question. Select **Yes** to start the updating process.

Deleting the phone book

Using the call lists

All incoming, outgoing, or missed calls are registered in corresponding call lists.

Being in the phone main menu, press the multifunction knob to open the **Phone Menu**. Select the submenu item **Call lists**.

The following screen is displayed.

Call lists	
Incoming calls	>
Outgoing calls	>
Missed calls	>

Select the desired call list, e.g. **Missed calls**. A menu with the corresponding call list is displayed.

To initiate a phone call: select the desired list entry. The corresponding phone number is dialled.

Redialling a phone number

The last dialled phone number can be redialled.

Press the \checkmark button on the steering wheel to open the **Redial** menu.

Press the *r* button again to start dialling.

Press the ⊭ ∞ button on the steering wheel to exit the **Redial** menu. You may optionally use the multifunction knob to select **No** on the display.

Incoming phone call

If an audio mode, e.g. the radio or CD mode, is active at the time of an incoming call, the relating audio source will be muted and stay muted until the call ends.

To answer the call: select **Answer** on the display.

To reject the call: select **Decline** on the display.

Second incoming phone call

If a second phone call comes in during an ongoing call, a message is displayed.

To answer the second call and end the ongoing call: select **Answer** on the display. To reject the second call and continue the ongoing call: select **Decline** on the display.

Changing the ring tone

Press the **CONFIG** button to open the **Settings** menu.

Select **Phone settings**, **Sound & Signals** and then **Ring tone**. A list of all ring tones available is displayed.

Select the desired ring tone.

For a detailed description on the ring tone volume \Rightarrow 91.

Functions during a phone call

During an ongoing phone call, the phone main menu is displayed.

Select **Menu** on the display to open the menu **Connected**.

Select **Hang up** on the display to end the call.

Activating the private mode

In the **Connected** menu, select the submenu item **Private call** to switch the call to the mobile phone.

To switch the call back to the Infotainment system, select **Menu** on the display and then **Transfer call**.

Deactivating/activating the microphone

In the **Connected** menu, set the submenu item **Mute Mic** to **On**. The caller cannot hear you any more.

To reactivate the microphone: set the submenu item **Mute Mic** to **Off** again.

Mobile phones and CB radio equipment

Installation instructions and operating guidelines

The vehicle specific installation instructions and the operating guidelines of the mobile phone and handsfree manufacturer must be observed when installing and operating a mobile telephone. Failure to do so could invalidate the vehicle type approval (EU directive 95/54/ EC). Recommendations for fault-free operation:

- Professionally installed exterior antenna to obtain the maximum range possible,
- Maximum transmission power 10 watts,
- Installation of the phone in a suitable spot, consider relevant Note in the Owner's Manual, section Airbag system.

Seek advice on predetermined installation points for the external antenna or equipment holder and ways of using devices with a transmission power exceeding 10 watts.

Use of a handsfree attachment without external antenna with mobile telephone standards GSM 900/1800/1900 and UMTS is only permitted if the maximum transmission power of the mobile telephone is 2 watts for GSM 900 or 1 watt for the other types. For reasons of safety, do not use the phone while driving. Even use of a handsfree set can be a distraction while driving.

▲Warning

Operation of radio equipment and mobile telephones which fail to meet above mentioned mobile telephone standards is only permitted using an antenna located outside of the vehicle.

Caution

Mobile telephones and radio equipment may lead to malfunctions in the vehicle electronics when operated inside the vehicle with no exterior antenna, unless the above mentioned regulations are observed.

Phone 119

Index

Α.
 4

Activating Bluetooth music 108 Activating CD player
Activating the handsfree Phone mode
Auto volume control
B Basic operation
BluetoothBluetooth connection

Bluetooth music	
Activating	108
General information	108
Operation	108
Prerequisites	108

C Call

Call	
Functions during a call Incoming call	
Initiating a phone call	
Ring tone	
Call lists	
Category list	
CD menu	102
CD player	
Activating	
CD menu	102
General information	101
Inserting a CD	
Removing a CD	
Starting CD replay	
Usage	102
Control elements	
Infotainment system	84
Phone	
Steering wheel	
Control elements overview	84

D

DAB	98
Date settings	86
Digital audio broadcasting	98
Dynamic audio adaption	98

Е

Emergency	call	113

F

Favourite lists	93,	94
Retrieving stations		93
Storing stations		93

G

General information
AUX input 104
Bluetooth music 108
CD player 101
Infotainment system
Phone 110
USB port 105
•

Ι.

L

Μ

Maximum startup volume	
Menu operation	. 88
Mobile phones and CB radio	
equipment	117
Multifunction knob	
Mute	. 86

0 0

Operation	108, 114
AUX input	104
Bluetooth music	108
CD player	102
Menu	88
Phone	114
Radio	92
USB port	106

P Př

hone	
Activating	114
Bluetooth	110
Bluetooth connection	111
Call lists	114
Control elements	110
Dialling a number	114
Emergency calls	113
Functions during a call	114
General information	110
Important information	110

Incoming call	114
Phone book	114
Prerequisites	114
Redialling a phone number	114
Selecting the ring tone	114
Phone book	114
Playing saved audio files	106

R Radio

- Taulo	
Activating	92
Autostore lists	93
Band selection	98
Category list	94
Configuring DAB	98
Configuring RDS	
DAB announcements	94
Digital audio broadcasting	
(DAB)	
Dynamic audio adaption	
Favourite lists	
Radio data system (RDS)	97
Radio traffic service	
Regionalisation	97
Retrieving stations	93
Selecting the waveband	92
Station lists	94
Station search	92
Station tuning	92
Storing stations	93

Traffic announcements	
Redial function	
Retrieving stations	
Ring tone	
Ring tone volume	
Selecting the ring tone	

S

Selecting the waveband	
Starting CD replay 1	02
Station lists	
Station search	92
Steering wheel audio controls	84
Storing stations	93
Switching the Infotainment	
system on	86
Switching the radio on	92
System settings	
Language	86
Restore factory settings	86
Time and date	
Vehicle settings	86

Т	
TA volume	91
Theft-deterrent feature	83
Time settings	86
Tone settings	90
Traffic announcements	97

U Updating station lists
USB port Activation

V Volume

Volume	
Auto volume control	91
Maximum startup volume	91
Mute function	86
Ring tone volume	91
Setting the volume	86
Speed compensated volume	91
TA volume	91
Volume limitation at high	
temperatures	86
Volume settings	91

W

Waveband menus94	4
------------------	---

www.opel.com

Copyright by ADAM OPEL AG, Rüsselsheim, Germany.

The information contained in this publication is effective as of the date indicated below. Adam Opel AG reserves the right to make changes to the technical specifications, features and design of the vehicles relative to the information in this publication as well as changes to the publication itself.

Edition: July 2014, ADAM OPEL AG, Rüsselsheim.

Printed on chlorine-free bleached paper.

KTA-2755/3-en

07/2014

