CORSA Infotainment Manual



Contents

Multimedia Navi Pro /	
Multimedia Navi	5
Multimedia 5	57
Radio (Infotainment system) 8	39

Multimedia Navi Pro / Multimedia Navi

Introduction	6
Basic operation	16
Radio	23
External devices	28
Navigation	32
Speech recognition	44
Phone	47
Index	54

General information6
Theft-deterrent feature7
Control elements overview
Usage

General information

Note

This manual describes all options and features available for the various Infotainment systems. Certain descriptions, including those for display and menu functions, may not apply to your vehicle due to model variant, country specifications, special equipment or accessories.

Note

The Infotainment system includes certain third party software. For the associated notices, licenses and any other information regarding this software see http://www.psa-peugeotcitroen.com/oss.

Important information on operation and traffic safety

∆Warning

Drive safely at all times. Only operate the Infotainment system if the traffic conditions allow a safe usage.

In the interest of safety, it might be appropriate to stop the vehicle before operating the Infotainment system (e.g. for entries of addresses).

∆Warning

The usage of the navigation system does not release the driver from the responsibility for a correct, vigilant attitude in road traffic. Always follow the applicable traffic rules.

∆Warning

In some areas one-way streets and other roads and entrances (e.g. pedestrian zones) that you are not allowed to turn into are not marked on the map. In such areas the Infotainment system may issue a warning that must be accepted. Here you must pay particular attention to one-way streets, roads and entrances that you are not allowed to drive into.

Radio reception

Radio reception may be disrupted by static, noise, distortion or loss of reception due to:

- changes in distance from the transmitter
- multi-path reception due to reflection
- shadowing


Theft-deterrent feature

The Infotainment system is equipped with an electronic security system for the purpose of theft deterrence.

The Infotainment system therefore functions only in your vehicle and is worthless to a thief.

Control elements overview


Control panel - Multimedia Navi Pro

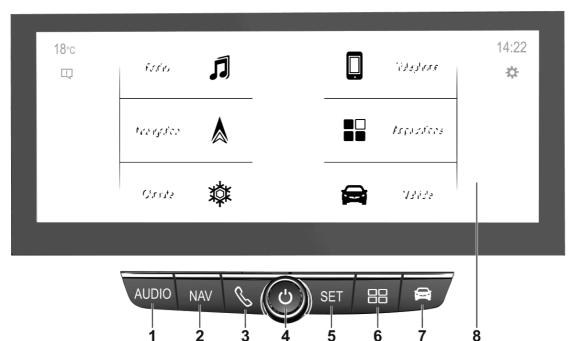

1	AUDIO	5	SET / C
	Open audio menu:		Open settings menu 16
	Radio 23		or open charging settings
2	External devices (USB, Bluetooth) 28 NAV	6	(electric vehicles), see Owner's Manual ##
	Display embedded navigation map	7	Open apps menu 31
3	C		Open vehicle settings menu, see Owner's Manual
Di	ppen phone menu 49	8	Info Display
	Display phone projection screen when phone projection is active		Home menu will be displayed by a 3-finger touch on screen
4	ம் 12		
	If switched off: switch power on / off		
	If switched on: mute system		
	Turn: adjust volume		

9

Control panel - Multimedia Navi

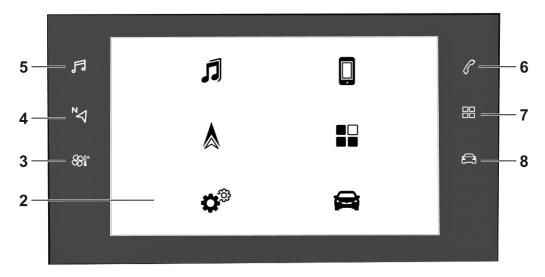



1	ம் 1	2
---	------	---

If switched off: switch power on / off

If switched on: mute system

Turn: adjust volume

2 Info Display

Home menu will be displayed by a 3-finger touch on screen

3 SSI.

Open climate menu if available, see Owner's Manual

4 ∛⊲

5 月

Open audio menu:

Radio 23


 C

6

7

8

Steering wheel controls

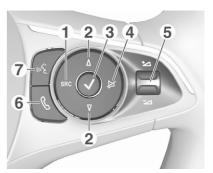

1 SRC (Source)

Select audio source, confirm selection with \checkmark 12

Long press: mute system

2 ∆/∇

or select next / previous entry in station list, media list, call / contacts list when operation started via steering wheel controls

Confirm selection with \checkmark

3

Confirm selected item

or open station list, media list

4 🎽

Activate / deactivate mute	
function	12

5 + / -

Turn upwards / downwards: increase / decrease volume

6 🕓

Short press: accept incoming call

Long press: reject incoming call, hang up call 49

or open call / contacts list 49

If phone call active: open call in progress menu

7 (2

Short press: activate embedded speech recognition

Long press: activate speech recognition in Apple CarPlay[™] or Android[™] Auto if phone connected via USB port 45

Usage

Control elements

The Infotainment system is operated via function buttons, a touch screen and menus that are shown on the display.

Inputs are made optionally via:

- the control panel on the Infotainment system ▷ 8
- the touch screen ♀ 16
- audio controls on the steering wheel ▷ 8
- the speech recognition ▷ 44

Switching the Infotainment system on or off

Press (). After switching on, the last selected Infotainment source becomes active.

Note

Some functions of the Infotainment system are only available if ignition is switched on or engine is running.

Automatic switch-off

If the Infotainment system has been switched on pressing () while the ignition is switched off, it will switch off again automatically when the Eco mode becomes active.

Setting the volume

Turn (). The current setting is shown on the display.

When the Infotainment system is switched on, the last selected volume is set.

Speed compensated volume

When the speed compensated volume is activated \diamondsuit 19, the volume is adapted automatically to make up for the road and wind noise as you drive.

Mute

Press (^{\downarrow}) to mute the Infotainment system.

To cancel the mute function, press $(\!\!\!)$ again. The last selected volume is set again.

Modes of operation

Audio-Media


Press AUDIO / 🎵 to display the main menu of the last selected audio mode.



Changing the media source Select SOURCES to display the menu for media source selection.

Note

For a detailed description of menu operation via touch screen r > 16.

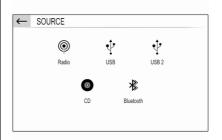

Select the desired media source. For a detailed description of:

- Radio functions \$\$ 23
- External devices ⇔ 29

Navigation

Press NAV / ^N⊲ to display the navigation map showing the area around the current location.



For a detailed description of basic functions of the navigation system \Rightarrow 33.

Navigation menu

Select **MENU** to display the navigation menu.



The navigation menu serves as central entry point for:

- Address search and input
 ⇒ 37
- Defining trips with several waypoints \$\$ 37
- Defining criteria for route guidance ⇔ 41
- Cancelling and resuming route guidance ♀ 41

Phone

Before the phone function can be used, a connection has to be established between the Infotainment system and the mobile phone. For a detailed description of preparing and establishing a Bluetooth connection between the Infotainment system and a mobile phone \Rightarrow 47.

If the mobile phone is connected, press & to display the main menu of the phone function.

18°c		- 1	@		big FM	💷 🌣 14:	22
1		2		< 3 ∞			
4 ^{shi}		abc 5		6 mno	MyProvid	er.com	
7 pqrs		8 tuv	•	9 wxyz			
0	·	ò	·	#	I 🗑 MyPhone		
OPTION	S		C	ontacts	1	Calls	

For a detailed description of mobile phone operation via the Infotainment system $rac{1}{2}$ 49.

Network and connected services

Press 🗄 and then select **OPTIONS** to display the Bluetooth, network and connected services settings.

To connect the vehicle to a Wi-Fi network, touch **?**. A list of all available Wi-Fi networks is displayed.

It is also possible to share the Wi-Fi connection for other devices.

To update the service and connection status, go to the menu for connected services \clubsuit and touch .

To use the connected services, make sure that data sharing and the vehicle position are activated in the privacy menu in the **System settings**.

Apps

To show specific apps of your smartphone on the display of the Infotainment system, connect your smartphone.


Press 🗄 to display the main menu of the apps mode.

Touch **Apple CarPlay** or **Android Auto**. A menu with different selectable apps is displayed.

For a detailed description \diamondsuit 31.

Settings

Press **SET** / **‡** and then select **Audio settings** to display the respective menu.

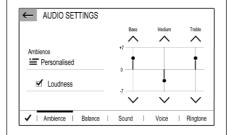

For a detailed description \diamondsuit 16.

Press **SET** / **‡** and then **OPTIONS** to display a menu for various system-related settings.

←	SETTINGS AND TOOLS	
	j [*] 4. C.	
	System settings Languages Setting the time-date	
	Screen configuration Setting of the profiles	

For a detailed description \diamondsuit 16.

Vehicle settings

Select 🗁 to open a menu for various vehicle-related settings.

Vehicle settings are described in the Owner's Manual.

Basic operation 16	
Tone settings 19	
Volume settings 19	
System settings 20	

Basic operation

The display of the Infotainment system has a touch-sensitive surface that allows direct interaction with the displayed menu controls.

Caution

Do not use pointed or hard items like ballpoint pens, pencils or similar for touch screen operation.

Menu operation

Selecting or activating a screen button or menu item

Rüsselsheim		\sim
Taybara-Automobile Kürbisstraße, Rüsselsheim	A	
Apotheke am Langbar traße Zeithstraße 7. 53721 Siegt	۲	
Hamburg 11 Alter Fischmarkt	4	t
Mainz 1a Alte Universitäts	•	\checkmark
Rece Preferred	Con	tacts

Touch a screen button or menu item.

Note

The corresponding system function is activated, a message is shown, or a submenu with further options is displayed.

\longleftarrow and \checkmark / OK screen buttons

←	GUIDANCE CF	RITERIA				
-	Fast ₱ 576 km 09:20	-	-	Compromise ₱ 531 km 09:56		
-	Short F [#] 528 km 10:21	-	_	Ecological 199 563 km 09:59		
	Motorway:	Toll:		Ferry:		
	OFF ON	OFF ON	-	OFF ON		
Take account of traffic 🛛 🔄 Automatic						
✓ 11	🔟 See on map					

When operating the menus, touch in the respective submenu to return to the next higher menu level.


After selecting menu items or performing settings in a menu, touch ✓ / OK to confirm your settings. Otherwise all performed selections or settings will be lost.

Shortcuts to important menus



The texts and icons displayed in the top bar, of e.g. the navigation main menu, serve as shortcuts to some important menus. For example, touch the station name to open the station list menu.

Scrolling a list

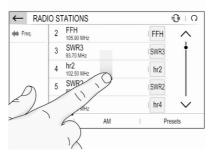

If there are more items available than presentable on the screen, the list must be scrolled.

To scroll through a list of menu items, you may optionally:

 Place your finger anywhere on the screen and move it upwards or downwards.

Note

Constant pressure must be applied and the finger must be moved at a constant speed.

 Touch ∧ or ∨ at the top or bottom of the scroll bar.

- Touch anywhere on the guiding line of the scroll bar.
- Move the slider of the scroll bar up and down with your finger.

Updating a list

Touch $\overline{\Omega}$ to manually update, e.g., station lists, contacts lists or destination lists.

Input fields and keyboards

← SETTIN	IG OF THE PROF	ILES	
	 Profile 1 		
	ී Reset profile		
✓ Profile	1 Profile 2	Profile 3	Common profile

Input fields are indicated by 🆍.

Touch the input field to open a keyboard for text or number input.

Depending on the application or function currently active, different keyboards are displayed.

Keyboards for text input

←	ADD	TO FA	VOURI	TES					
	ABC			Nan	Name				
	Numbe	r			a.	Гуре			
Q	W	Е	R	Т	Y	U	T	0	Ρ
А	S	D	F		G	Н	J	К	L
Ζ	Х	С	V	В	Ν	М	-		
:::::	Aa	0#		S	pace		C.		$\langle X$
~									

Keyboards for text input may contain several input fields. To enable a field for text input, touch it.

To enter a character, touch the respective screen button. The character is entered upon release.

Touch and hold a letter screen button to display associated letters in a letter pop-up menu. Release and then select the desired letter.

To switch to the symbol keyboard, touch **0..#**.

To switch back to the letter keyboard or to switch between capital and small letters, touch **Aa**.

To switch the letter keyboard between normal order and alphabetical order, touch

To delete the most recently entered character or symbol, touch $\langle \times |$.


To delete a character or symbol at any point of your input: touch at the desired point to place a blinking cursor, then touch $\langle X \rangle$.

Keyboards for number input

←	FREQ	JENCY			
		102 .	50	MHz	$\langle X \rangle$
		1		2	3
		4		5	6
		7		8	9
				0	
✓					

Keyboards for number input may contain several input fields. In the illustrated example, you first need to touch the input field behind the decimal point, before you can enter the decimal digits.

Adjusting a setting

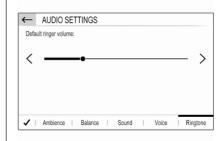


To adjust a setting like the illustrated example, you may optionally:

- Touch $\langle \text{ or } \rangle$.
- Touch anywhere on the line.
- Move the slider with your finger.

Tone settings

Press SET / D, select Audio settings and then select the Ambience tab.

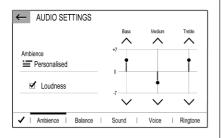

Several predefined settings are available to optimise the tone for a specific style of music (e.g. **Pop-Rock** or **Classical**).

To adjust the tone individually, select **Personalised**. Change the settings as desired and then confirm your settings.

Note

If you change the settings of a predefined setting, e.g. **Pop-Rock**, this settings will be applied to the **User** or **Personalised** setting.

Activating the **Loudness** function may optimise the tone at low volume levels.

Balance and fader

Select the Balance tab.

← AUDIO SETTINGS	
= All passengers	^
ට Reset	
✓ Ambience Balance	Sound Voice Ringtone

Several predefined settings are available to adjust the volume distribution inside the vehicle (e.g. **All passengers** or **Front only**). To change the current setting, e.g. **All passengers**, select that setting and then select the desired new setting from the displayed list.

You may individually adjust the predefined settings.

To define the point in the passenger compartment where the volume is at its highest level, move the cursor in the illustration on the right side of the screen to the desired point.

To return to the default factory settings, select **Reset**.

Volume settings

Press **SET** / **‡**, select **Audio settings** and then select the **Sound** tab.

Audible touch feedback

If the audible touch feedback function is activated, each touch of a screen button or menu item is indicated by a beeping sound.

To adjust the touch beep volume, activate **Touch tones** and then adjust the setting.

Speed compensated volume

Activate or deactivate Volume linked to speed.

If activated, the volume of the Infotainment system is adapted automatically to make up for the road and wind noise as you drive.

Speech output

Select the Voice tab.

Adjust the volume for all speech outputs of the system, e.g. traffic announcements, navigation messages etc.

Ringtone

Select the Ringtone tab.

Adjust the ringtone volume of incoming calls.

System settings

Press **SET** / **‡** and then select **OPTIONS**.

←	SETTINGS AND	TOOLS		
	() ^{(‡}	(E)		
	System settings	Languages	Setting the time-date	
			2	
	Screen co	infiguration Setting	of the profiles	

Configuring the system

Select **System settings** to perform some basic system configurations, e.g.:

- Adjust the display of units for temperature or fuel consumption.
- Reset the system configuration to factory defaults.
- Update the installed software version.
- Adjust the privacy settings for data sharing and vehicle position.

Changing display language

To adjust the language for the menu texts, select **Languages** and then select the desired language.

Note

If the selected display language is supported by the embedded speech recognition, the language of the speech recognition will be changed accordingly; if not, embedded speech recognition will be not available.

Adjusting time and date

Select Setting the time-date.

←	SETTING TH	IE TIME-DATE			
Tim	10:55		PM	AM	PM
	a Zone T (UTC + 1:00) Cer				
Т	ime format:			12h	24h
D	aylight saving Time	e (+1 hour)		OFF	ON
S	ynchronization with	OFF	ON		
✓	l Dat	e		Time	

Changing time and date formats

To change the time and date formats, select the respective tabs and then select the desired formats.

Setting time and date

By default the displayed time and date is automatically adjusted by the system.

To manually adjust the displayed time and date:

Select the Time tab.

Set **Synchronization with GPS (UTC)** to **OFF** and then select the **Time** field to set the desired time.

Select the **Date** tab and then select the **Date**: field to set the desired date.

Adjusting the screen

Select Screen configuration.

Text scroll function

Select the Animation tab.

If long texts on the screen should be scrolled automatically, activate **Automatic scrolling**.

If **Automatic scrolling** is deactivated, long texts are truncated.

Adjusting the brightness Select Brightness and set the brightness of the screen to the desired level.

Storing your personal settings

Select Setting of the profiles.

← SETTI	NG OF THE PROFILES	
1	 Profile 1 Reset profile 	
✓ Profile	1 Profile 2 Profile 3	Common profile

You can store a multitude of settings in a personal profile. For example, all current tone settings, all radio presets, one phone book, the map settings and your preferred addresses. In case you share the vehicle with other people, this enables you to restore your personal settings from your profile at any time.

A maximum of three personal profiles may be stored.

Additionally, a **Common profile** is available. All settings done at any time are automatically stored in that profile. If no personal profile is activated, the **Common profile** is active.

Storing your personal profile

After performing all your personal settings:

Select one of the personal profile tabs.

Select the input field
rightarrow and enter the desired name of your personal profile.

If you want to add a photo to the profile:

Connect a USB device with the desired photo stored on it to the USB port \diamondsuit 28, touch the photo frame and then select the desired photo.

Confirm your selection to download the selected photo to the system.

Finally, confirm your inputs to store them in your personal profile.

Activating your personal profile

Press 🎝 and then select the tab with the name of your personal profile.

Activating the Common profile

If a personal profile is currently active:

Press **‡** and then select **Deactivate profile**.

Resetting a personal profile

You can at any time reset a personal profile to restore the default factory settings on that profile.

Select the respective profile and then select **Reset profile**.

Resetting the Common profile

You can at any time reset the **Common profile** to restore the default factory settings on that profile.

Select **Common profile** and then select **Reset the common profile**.

Radio

Usage	23
Radio data system	25
Digital audio broadcasting	25

Usage

Activating the radio

Press AUDIO / 「]. The audio main menu last selected is displayed. If the radio main menu is not active, select SOURCES and then select Radio.



The station last played will be received.

Selecting a waveband

Repeatedly select **Band** to toggle between the different wavebands.

Searching for stations

Automatic station search

Briefly touch $\langle \text{ or } \rangle$ to play the previous or next receivable station.

Manual station search

Press and hold $\langle \text{ or } \rangle$. Release when the required frequency has almost been reached.

A search is made for the next station that can be received and it is played automatically.

Station tuning

If you exactly know the reception frequency of a radio station, you may enter that frequency manually.

Select **OPTIONS**, select **Radio stations** and then select the desired waveband.

Select **Freq.**, enter the reception frequency and confirm your input.

If a station is receivable on that frequency, the respective station is played.

Station lists

In the station lists, all receivable radio stations within the current reception area are available for selection.

To display the station list of the waveband currently active, select **List**.

Select the desired station.

Update station lists

If the stations stored in the wavebandspecific station list can no longer be received, the AM and the DAB station lists must be updated. The FM station list is updated automatically.


Select **OPTIONS**, select **Radio stations** and then select the desired waveband.


To start an update for the selected waveband, select Ω .

Storing favourite stations

Up to 15 radio stations of all wavebands can be stored as favourites in the **Presets** list.

Select **Presets** to display the preset buttons.

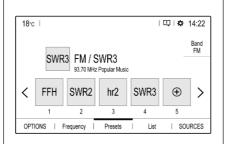

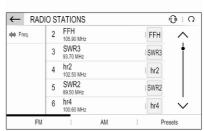

Storing the currently active station

Touch and hold the desired button for a few seconds. The respective frequency or station name is displayed on the button.

If a station is already stored on a preset button, that station will be overwritten by the new one.

Storing a station from a station list Select OPTIONS, select Radio stations and then select the desired waveband.

Select **Add to favourites** and then touch and hold for a few seconds on the list row where you want to store the station.

If a station is already stored on a list row, that station will be overwritten by the new one.

Retrieving stations

In the radio main menu select **Presets** and then briefly touch the preset button of the desired station.

Radio data system

Radio data system (RDS) is a service of FM stations that considerably facilitates the finding of the desired station and its fault-free reception.

Advantages of RDS

- On the display, the programme name of the station appears instead of its frequency.
- During a station search, the Infotainment system tunes in to RDS stations only.
- The Infotainment system always tunes into the best receivable broadcasting frequency of the set station by means of AF (alternative frequency).
- Depending on the station that is received, the Infotainment system displays radio text that can contain e.g. information on the current programme.

RDS configuration

In the radio main menu select OPTIONS and then select Radio settings to open the menu for RDS configuration.

Activating RDS

Select **General** and then activate **Alternative frequency**.

If **Alternative frequency** is activated, **RDS** is displayed in the bottom line of the radio main menu.

Radio text

If RDS is activated, information on the radio programme currently active or the music track currently playing are displayed below the programme name.

To show or hide the information, activate or deactivate **Display radio** text.

Traffic announcements

Many RDS stations broadcast traffic news. If the traffic announcements function is activated, radio or media playback is interrupted for the duration of a traffic announcement. Select Announcements and then activate or deactivate Traffic announcement.

If **Traffic announcement** is activated, **TA** is displayed in the bottom line of the radio main menu.

Digital audio broadcasting

Digital audio broadcasting (DAB) broadcasts radio stations digitally.

DAB stations are indicated by the programme name instead of the broadcasting frequency.

General information

- With DAB, several radio programmes (services) can be broadcast on a single ensemble.
- Besides high-quality digital audio services, DAB is also able to transmit programme-associated data and a multitude of other data services including travel and traffic information.

26 Radio

- As long as a given DAB receiver can pick up the signal sent out by a broadcasting station (even if the signal is very weak), sound reproduction is ensured.
- In the event of poor reception, the volume is reduced automatically to avoid the output of disagreeable noises.

If the DAB signal is too weak to be picked up by the receiver, reception is interrupted completely. This incident can be avoided by activating DAB-FM auto tracking, see below.

- Interference caused by stations that are on nearby frequencies (a phenomenon that is typical of AM and FM reception) does not occur with DAB.
- If the DAB signal is reflected by natural obstacles or buildings, the reception quality of DAB is improved, whereas AM or FM reception is considerably impaired in such cases.
- When DAB reception is enabled, the FM tuner of the Infotainment system remains active in the

background and continually searches for the FM stations with the best reception. If **Traffic announcement** ⇔ 25 is activated, traffic announcements of the FM station with the best reception are issued. Deactivate **Traffic announcement** if DAB reception should not be interrupted by FM traffic announcements.

DAB Announcements

Besides their music programmes, a lot of DAB stations also broadcast announcements of various categories. If you activate some or all categories, the currently received DAB service is interrupted when an announcement of these categories is made.

In the radio main menu select **OPTIONS**, select **Radio settings** and then select **Announcements**.

Activate the desired announcement categories, e.g., **News** or **Weather**. Different announcement categories can be selected at the same time.

FM-DAB Linking

This function enables switching from an FM station to a corresponding DAB station and vice versa.

Switching from FM to DAB occurs as soon as a corresponding DAB station is available. Therefore, it is recommended to store favourite stations as DAB stations to reduce frequent switching.

Switching from DAB to FM occurs if the signal is too weak to be picked up by the receiver.

Activation

Precondition is that **Alternative frequency** is activated before FM-DAB Linking can be activated.

To activate FM-DAB Linking, go to OPTIONS I Radio settings I General and select FM-DAB Followup.

The following symbol will be displayed when FM-DAB Linking is activated:

DAB 🔁 FM

Deactivation

To deactivate FM-DAB Linking, go to OPTIONS * Radio settings * General and deselect FM-DAB Follow-up.

FM-DAB Linking will automatically be deactivated when **Alternative frequency** is deactivated.

External devices

General information	28
Playing audio	29
Displaying pictures	30
Using smartphone applications	31

General information

A USB port is located in the centre console.

Caution

To protect the system, do not use a USB hub.

Note

The USB ports must always be kept clean and dry.

USB ports

An MP3 player, USB device, SD card (via USB connector / adapter) or smartphone can be connected to the USB port.

The Infotainment system can play audio files or show picture files contained in USB devices.

When connected to a USB port, various functions of the devices mentioned above can be operated via the controls and menus of the Infotainment system.

Note

Not all auxiliary devices are supported by the Infotainment system.

Connecting / disconnecting a device

Connect one of the devices mentioned above to a USB port. If required, use the appropriate connection cable. The music function starts automatically.

Note

If a non-readable USB device is connected, a corresponding error message appears and the Infotainment system automatically switches to the previous function.

To disconnect a USB device, select another function and then remove the USB device.

Caution

Avoid disconnecting the device during playback. This may damage the device or the Infotainment system.

Bluetooth audio streaming

Streaming allows you to listen to music from your smartphone.

For a detailed description on how to establish a Bluetooth connection $rac{1}{\diamond}$ 48.

If audio playback does not start automatically, it may be necessary to start the playback on the smartphone.

First adjust the volume on your smartphone (to a high level). Then adjust the volume of Infotainment system.

File formats

The audio equipment supports different file formats.

Playing audio

Activating the music function

Connecting the USB or Bluetooth device \Rightarrow 28.

If device already connected, but playback of stored music files not active: Press AUDIO / 「], select SOURCES and then select the respective

source.

Playback of the audio tracks starts automatically.



Playback functions

Interrupting and resuming playback Touch **↓** to interrupt playback. The screen button changes to **▶**.

Touch ▶ to resume playback.

Playing the previous or next track Touch \langle or \rangle .

Fast forwarding and rewinding

Touch and hold \langle or \rangle . Release to return to normal playback mode.

Alternatively, you can move the slider showing the current track position to the left or right.

Playing tracks randomly

Touch button repeatedly to toggle between the available random modes.

 \overline{ON} : play tracks of currently selected list (album, artist, etc.) in random order.

λικ: play all tracks stored on connected device in random order.

OFFC: play tracks of currently selected list (album, artist, etc.) in normal playback mode.

Repeating tracks

Touch button repeatedly to switch repeat mode on or off.

unter tracks of currently selected list (album, artist, etc.).

OFF_: play tracks of currently selected list (album, artist, etc.) in normal playback mode.

Browse music functions

(only available for devices connected via USB)

You can have your music files sorted according to different criteria. Two options are available for browsing the music files stored on the connected USB device.

Browsing via main menu

If you want to change the currently active USB source, select **SOURCES** and then select the desired source. The respective main menu is displayed.

Select the button showing the currently selected sorting criteria, e.g. **Sort: Album** or **Sort: Artist**, and then select the desired new sorting criteria. A sorting process is performed.

Select **List** and then select the desired track.

Playback of the selected track is started.

Browsing via device menu Select OPTIONS and then select Music files. If you want to change the currently active USB source, select **Other**.

Select the desired sorting criteria, e.g. **Albums** or **Artists**, and then select the desired track.

Playback of the selected track is started.

Displaying pictures

You can view pictures stored on a USB device.

Activating the picture viewer

Connecting the USB device \diamondsuit 28.

If device already connected, but picture viewer not active:

Press AUDIO / , select OPTIONS and then select Managing photos.

Select the desired picture.

A slide show of all stored picture files starts automatically.



Touch the screen to display the menu bar.

Viewing the previous or next picture

Touch ◀◀ or ▶▶.

Starting or stopping a slide show

Select ► to view the pictures stored on the USB device in a slide show. Touch I to end the slide show.

Using smartphone applications

Phone projection

The phone projection applications Apple CarPlay and Android Auto display selected apps from your smartphone on the Info Display and allow their operation directly via the Infotainment controls.

Check with the device's manufacturer if this function is compatible with your smartphone and if this application is available in the country you are in.

Preparing the smartphone

iPhone[®]: Make sure Siri[®] is activated on your phone.

Android phone: Download the Android Auto app to your phone from the Google Play™ Store.

Connecting the smartphone iPhone

Connect the phone to the USB port \Rightarrow 28.

If the phone is already connected via Bluetooth, upon connecting to the USB port and launching Apple CarPlay, the Bluetooth connection will disconnect.

Android phone

Connect the phone via Bluetooth \Rightarrow 48 and then connect the phone to the USB port \Rightarrow 28.

Starting phone projection

Press 🗄 and then touch **Apple CarPlay** or **Android Auto**.

The phone projection screen displayed depends on your smartphone and software version.

Returning to the Infotainment screen

Press, e.g., the **AUDIO** / \square button on the control panel.

Navigation

General information 32	2
Usage 33	3
Destination input 37	7
Guidance	1

General information

This chapter is about the embedded navigation system which guides to desired destinations.

The current traffic situation is taken into account in the route calculation. For this purpose, the Infotainment system receives traffic announcements in the current reception area via RDS-TMC.

The navigation system cannot, however, take into account traffic incidents, traffic regulations changed at short notice and hazards or problems that arise suddenly (e.g. road works).

Caution

The usage of the navigation system does not release the driver from the responsibility for a correct, vigilant attitude in road traffic. The relevant traffic regulations must always be followed. If a navigation instruction contradicts traffic regulations, the traffic regulations always apply.

Functioning of the navigation system

The position and movement of the vehicle are detected by the navigation system using sensors. The travelled distance is determined by the vehicle's speedometer signal, turning movements on bends by a sensor. The position is determined by the GPS (Global Positioning System) satellites.

By comparing the sensor signals with the digital maps, it is possible to determine the position with an accuracy of approx. 10 m.

The system will also work with poor GPS reception. However, the accuracy of the determination of the position will be reduced.

After the entry of the destination address or point of interest (nearest petrol station, hotel, etc.), the route is calculated from the current location to the destination selected.

Route guidance is provided by voice output and an arrow, as well as with the aid of a multi-colour map display.

Important information

TMC traffic information system and dynamic route guidance

The TMC traffic information system receives all current traffic information from TMC radio stations. This information is included in the calculation of the overall route. During this process, the route is planned so that traffic problems related to preselected criteria are avoided.

To be able to use TMC traffic information, the system must receive TMC stations in the relevant region.

Live navigation

When data sharing and the vehicle position are activated, the navigation system will show online traffic information as well as online information for parking, fuel prices and weather. The services can be stopped at anytime by deactivating data sharing and the vehicle position.

Data sharing and the vehicle position can be activated or deactivated via the privacy menu in the **System settings**. Network and connected services \Rightarrow 12.

The privacy menu and the menu for connected services are also accessible via the message icon on the screen.

Map data

All required map data is stored within the Infotainment system.

Map updates are available at an Opel Service Partner or at the myOpel customer portal. To download the map updates from the Opel customer portal, a myOpel account and a USB stick with at least 16 GB memory and FAT 32 / MBR formatting are necessary.

Download and save the map data on a computer and unpack the data onto the USB stick.

To update the map data in the Infotainment system, connect the USB stick to the Infotainment system, select the navigation function and follow the steps on the Info Display. The installation of the map update will take up to 1 hour. Do not switch off the engine during the installation process.

Some functions of the Infotainment system, e.g. the navigation function, are not available during the installation process.


Usage

Information on the map display

Press **NAV** / ^N to display the navigation map showing the area around the current location.

34 Navigation

Route guidance not active

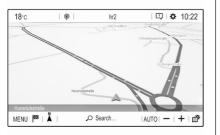

- The map view is displayed.
- The current location is indicated by an arrow.
- The name of the street you are currently in is displayed at the bottom left of the map view.
- Public charging stations are indicated (electric vehicles).

Route guidance active



- The map view is displayed.
- The active route is indicated by a coloured line.
- The moving vehicle is marked by an arrow pointing into the direction of travel.
- The next turning manoeuvre is shown in a separate field at the top left of the map view.

Depending on the situation information on lane guidance or the second next turning manoeuvre may be displayed additionally.

• The arrival time and the remaining distance to the destination is shown at the top right of the map view.

Customise the map display

Map views

Different map views are available.


Touch \blacktriangle to toggle between the different map views.

Depending on the map view, the remaining range is displayed as a circle (electric vehicles).

Map colours

Depending on the external lighting conditions, the colouring of the map screen (light colours for the day and dark colours for the night) can be adapted.

Touch display a menu on the right side of the screen.

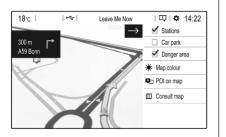

Select **Map colour** repeatedly to toggle between light and dark colours.

POI (Points of Interest) icons on the map

POIs are points of general interest, e.g. petrol stations or car parks.

The display of POI categories shown on the map may be personally adapted.

Activate the desired POI categories. The map view changes accordingly.

Alternatively, select **POI on map** to display a menu with a multitude of POI categories and subcategories to choose from. Activate the desired POI categories.

Traffic events

Traffic events may be indicated on the map. Additionally, information on these events may be displayed in a list.

Select **Consult map** to switch to an alternative map display with new menu options.



The map view is switched to **North orientation** mode and and may display a greater part of the route. Touch the traffic jam icon to show traffic events on the map. Touch i to show a list with information on these traffic events.

Touch the charging station icon to display a circle that indicates the remaining range (electric vehicles).

If you want to display a different map section:

Touch $\textcircled{\mbox{\footnotesize only }}$ to show the area around the current location.

Touch A to show the entire route.

Touch $\textcircled{\mbox{\footnotesize \ e }}$ to show the area around the destination.

To return to the default navigation view, touch \leftarrow .

36 Navigation

Autozoom function



If the autozoom function is activated (**AUTO** is displayed below the map view), the zoom level changes automatically when approaching a turning manoeuvre during active route guidance. This way, you always get a good overview of the respective manoeuvre.

If the autozoom function is deactivated, the selected zoom level remains the same during the whole route guidance process.

To activate or deactivate the function:

Select **MENU**, select **Settings** and then select the **Aspect** tab.


Activate or deactivate **Automatic zoom setting**.

Map manipulation

Moving visible map section

Place your finger anywhere on the screen and move it in the desired direction.

The map moves accordingly, displaying a new section. A new button bar is shown.

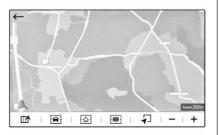

: show area around current location again.

슈: show area around home address.

■: show area around destination. To return to the default navigation view, select ←.

Centring visible map section

Touch the desired location on the screen to centre the map around this location.

A red \mathbf{Q} is displayed at the respective location and the corresponding address is shown on a label.

Manual zooming

To zoom in on a selected map location, place two fingers on the screen and move them away from each other.

Alternatively, touch + below the map view.

To zoom out and display a larger area around the selected location, place two fingers on the screen and move them towards each other.

Alternatively, touch - below the map view.

Showing an overview of the route

Touch \mathbb{B} , select **Consult map** and then touch \mathbb{B} .

The map view is switched to **North** orientation and shows an overview of the current route.



To return to the default navigation view, touch \leftarrow .

Voice guidance

The route guidance process can be supported by voice prompts given out by the system.

To activate or deactivate the function:

Select **MENU** in the navigation main menu, select **Settings** and then select the **Vocal** tab.

Activate or deactivate **Activate navigation messages**.

Navigation settings

Select **MENU** in the navigation main menu, and then select **Settings** to display the respective menu with a variety of navigation related settings.

← SETTINGS	
- North orientation	
- Vehicle orientation	
- Perspective view	
🗹 Building 🗹 Terrain	
Automatic zoom setting	★ Map colour
🗸 Aspect Map Alerts	Vocal Mapping

Please explore the different settings. Some have already been described above, others are described in the following sections.

Destination input

The navigation system provides various options to set a destination for route guidance.

Press **NAV** / ^N⊲ to display the navigation main menu.



Selecting an address from the map

Touch the desired location on the map. The map centres around this location.

A red **Q** is displayed at the respective location and the corresponding address is shown on a label.

To start route guidance, select **A**.

For a detailed description on route guidance \diamondsuit 41.

38 Navigation

Quick address or POI search

Select **Search...** A menu with a list of recent destinations and a keyboard is displayed.

←	Searc	h							
	Stahl: Rüssels	straße ^{sheim}							
	Alte U Mainz, S	Universit	ätsstraß	le 1a					\sim
Q	W	Е	R	Т	Y	U	Ι	0	Р
А	S	D	F		G	Н	J	К	L
Z	Х	С	V	В	Ν	Μ	-		
:::::	Aa	0#		S	pace		q	6	$\langle X$
v ī		Addr	ess				POI		

To refine the area for your address or POI search, select \square and then select the desired option.

To hide the keyboard and show the entire list, select . To show the keyboard again, select .

If you want to search for POIs (Points of Interest) only, select the **POI** tab.

Enter an address or search term. As soon as characters are entered an address search is performed and the list of found addresses is updated continuously.

Select the desired list item.

Depending on the current situation and your selection, the navigation system may react differently:

 If the selected list item is a valid destination address and route guidance is currently not active:

The navigation main menu is displayed again and route guidance is started.

For a detailed description on route guidance \diamondsuit 41.

 If the selected list item is a valid destination address but route guidance is already active:

A message is displayed and you need to decide first if the old destination should be replaced, or if you want to add the selected address as an intermediate destination to a waypoint trip. Detailed description on waypoint trips, see below. Select the desired option.

 If the navigation system needs more detailed information for route calculation:

Enter a further search term to refine your search.

Detailed address entry

Select **MENU** and then select **Enter address** to display a keyboard for address entry.

\leftarrow	Rüss	selshe	im							DE
		OPĘ							_	
< 0	pelplatz	Wil	helmst	raße Op	elwerk	Fritzs	traße Ope	lwerk A	kußerhalt	An >
Q	W	E		R	Т	Υ	U	1	0	Ρ
A	S		D	F	G		Н	J	К	L
Z	Х	С	٧	В	Ν	Μ	-			'
	Aa	0	#		Spa	се		q	•	$\langle X \rangle$
 I 										

As soon as characters are entered, an address search is started. Every additional character is considered in the matching process and a list of matching addresses is displayed. Select the desired address or change your input to initiate a new search.

Continue with the address entry until the entire address you are searching for is found.

Note

Make sure that the correct country is selected. To change the country, touch the country code in the upper right corner.

To start route guidance to the respective address, confirm your input.

For a detailed description on route guidance \diamondsuit 41.

Storing your favourite addresses

If you want to store the entered address, select 🕒.

← SAVE AS	
- New contact	
- Home	
- Work	
Preferred address	
✓	

 MY DESTINATIONS
 Image: Constraint of the second s

You may store the address as, e.g., your **Home** address or your **Work** address.

Select the desired option, confirm your selection and then enter a name for the address.

The stored address can then be easily selected as destination address via the destination lists **Preferred** or **Contacts**, see below.

Destination lists

Select **MENU** and then select **My** destinations.

Select **Recent** to display a list of all recently entered destinations.

Select **Preferred** to display all destinations which were stored before as home address, work address or preferred address.

Select **Contacts** to display a list with contact names and all related addresses stored before as personal contacts.

To start route guidance to the respective address, select a list entry.

For a detailed description on route guidance $rac{1}{>}$ 41.

40 Navigation

Points of interest

A point of interest (POI) is a specific location that might be of general interest, e.g. a petrol station, a parking area or a restaurant.

The data stored within the navigation system contains a great number of predefined POIs, which are indicated on the map (if activated, \Rightarrow 33).

Selecting a POI from the map

Touch the desired POI icon on the map. The map centres around this location.

Touch the icon again.

A red **Q** is displayed at the respective location and the corresponding address is shown on a label.

To start route guidance, select **A**.

For a detailed description on route guidance \diamondsuit 41.

Showing a list of POIs around a location

Touch the desired location on the map. The map centres around this location.

A red **Q** is displayed at the respective location and the corresponding address is shown on a label.

Touch and hold **Q**.

A list of POIs around the location is displayed.

Select the desired POI to start route guidance.

For a detailed description on route guidance $rac{1}{2}$ 41.

Searching for POIs via categories Select MENU and then select Points of interest.

← FIND	A POINT OF INTEREST		
O Search	Airport 1/1	\ +	
	Bus station		Ī
	Camping 1/1	4	
	Car dealer	A	
	Car rental	5	\sim
Travel	Leisure Commercial	Public	Geographic

Select a POI main category, e.g., **Travel** and then select a subcategory, e.g. **Airport**. A new menu is displayed.

Select a search area, e.g., **Around the vehicle** to refine the search.

After the POI search is performed, select the desired POI.

To search for POIs at another location, select **Address**.

To search for POIs via keyword (see below), select **Search**.

Searching via keyword

Select **MENU**, select **Search**, enter a keyword, e.g., "Station", enter or select a city name and confirm your input.

After the POI search is performed, select the desired POI.

Waypoint trips

A waypoint is an intermediate destination that is considered in the calculation of a route to its final destination. To create a waypoint trip, you may add one or several waypoints. Enter or select the final destination of your waypoint trip and start route guidance.

While under active route guidance, select **MENU** and then select **Route / Waypoints**.

← ROUT	E AND WAYPOINTS	_ †
Add waypoint	BNJ Bonn-Hangelar 128 Richthofenstraße, Hangelar	L P ₁
Overview	CGN Köln Bonn Airport: Terminal Kennedystraße, Grengel	12 I P2
Finish	Rüsselsheim Stahlstraße	β ≊
w	avpoints R	oute

Select Add waypoint and then select an option for address entry, e.g. Find POI.

Enter or select a new address. The address is inserted into the list of waypoints.

If desired, enter further waypoints as described above.

If you want to change the order of the waypoints:

Touch ι^{\dagger} and then touch the displayed arrows to move the list entries up or down.

Select **Calculate** to recalculate the route according to the changed order.

To return to the navigation main menu, select **Finish**.

To display a detailed route list of the waypoint trip, select the **Route** tab.

← R	OUTE AN	ID WAYPOINTS		1 🛈
Add waypoin	t 60 m	Alexanderstraße	×۲	\wedge
Overvie	w 400 m	B1/B5 Alexanderstraße	+	Ī
Finish	8 km	Wexstraße, Tegel	1	
	8 km	A100, Magdeburg Bear left	Ξų	
	9 km	A100	1	\sim
	Waypoir	its	Route	

Guidance

Route guidance is provided by the navigation system through visual instructions and voice prompts (voice guidance).

Visual instructions

Visual instructions are provided on the display.



Note

When route guidance is active and you are not within the navigation application, turning manoeuvres are shown on the instrument cluster display.

Voice guidance

Navigation voice prompts announce which direction to follow, when approaching an intersection at which you need to turn.

42 Navigation

To activate or deactivate the voice prompts function select **MENU** in the navigation main menu, select **Settings**, select the **Vocal** tab and then activate or deactivate **Activate navigation messages**.

If voice prompts are activated you can additionally specify whether street names should be spoken or not.

To replay the last voice guidance instruction, touch the turn arrow on the left side of the screen.

Settings for route guidance

Select **MENU** in the navigation main menu and then select **Guidance criteria** to display the respective menu.

\leftarrow	GUIDANCE CR	ITERIA			
-	Fast ₱ 576 km 09:20			Compromise ₱ 531 km 09:56	
	Short P 528 km 10:21		-	Ecological 1981 563 km 09:59	
	Motorway:	Tol	t	Ferry:	
	OFF ON	OFF	ON	OFF ON	
Take	account of traffic	🖃 Automa	tic		
v 1	TTI See on map				

When the menu is opened, several optional routes are automatically calculated by the navigation system, e.g. the fastest route or the most ecological route.

To show the different optional routes on a map, select **See on map**.

If you want, e.g., avoid motorways on your route, set the respective option to **OFF**.

Take account of traffic

Traffic events are taken into consideration when the system determines a route to a destination.

During active route guidance, the route can be modified according to incoming traffic messages.

Three options are available for **Take** account of traffic:

If you want the system to automatically modify the route according to new traffic messages, select **Automatic**.

If you want to be consulted when a route is modified, select **Manual**.

If you do not want routes to be modified, select **None**.

Starting, cancelling, resuming route guidance

To start route guidance, enter or select a destination address \diamondsuit 37. Depending on the situation, route guidance may start automatically, or you may have to follow some instructions on the screen.

To cancel route guidance, select **MENU** in the navigation main menu and then select **STOP NAVIGATION**.

To resume a cancelled route guidance, select **MENU** in the navigation main menu and then select **RESUME GUIDANCE**.

Turn list

The next turning manoeuvre is displayed on the left side of the screen.

To display a list of all upcoming turns on the active route, select **MENU** in the navigation main menu, select **Route / Waypoints** and then select the **Route** tab.

	- ROU	TE AN	ID WAYPOINTS		1
⊕	Add waypoint	60 m	Alexanderstraße	×۲	
۵	Overview	400 m	B1/B5 Alexanderstraße Turn right	++	Ī
÷	Finish	8 km	Wexstraße, Tegel Turn right	1	
		8 km	A100, Magdeburg Bear left	Ч	
		9 km	A100	1	\checkmark
	١	Naypoir	its	Route	

To display a turning manoeuvre on the map, touch the turn arrow icon next to the desired list entry. The map jumps to the respective location on the map.



To display the previous or next turning manoeuvre on the map, touch \langle or \rangle .

To avoid the route section currently displayed on the map, touch $\vec{\epsilon}$.

If desired, further route sections may be selected to be avoided.

Confirm your selection(s).

Speech recognition

General information	44
Usage	45

General information

Embedded speech recognition

The embedded speech recognition of the Infotainment system enables you to operate various functions of the Infotainment system via voice input. It recognises commands and numeric sequences independently of the relevant speaker. The commands and numeric sequences can be spoken without a voice pause between the individual words.

In the event of incorrect operation or commands, the speech recognition gives visual and / or acoustic feedback and requests you to reenter the desired command. Apart from this, the speech recognition acknowledges important commands and will enquire if necessary.

In general, there are different ways to speak commands for performing the desired actions.

Note

To ensure that conversations inside the vehicle do not lead to unintentional triggering of the system functions, the speech recognition does not start until it has been activated.

Important information Language support

- Not all languages available for the display of the Infotainment system are also available for the speech recognition.
- If the display language currently selected is not supported by the speech recognition, speech recognition is not available.

In such a case, you need to select another language for the display if you want to control the Infotainment system via voice input. To change the display language \diamondsuit 20.

Address input of destinations in foreign countries

In case you want to enter the address of a destination located in a foreign country via voice input, you need to change the language of the Info-Display to the language of the foreign country. E.g., if the display is currently set to English and you want to enter the name of a city located in France, you need to change the display language to French.

For changing the display language, see "Language" in chapter "System settings" ⇔ 20.

Input order for destination addresses

The order in which the parts of an address need to be entered using the speech recognition system is dependent on the country where the destination is located.

If the speech recognition system rejects your address entry, repeat the command with a different order of the address parts.

Voice pass-thru application

The voice pass-thru application of the Infotainment system allows access to the speech recognition commands on your smartphone.

Voice pass-through is available via the phone projection applications Apple CarPlay and Android Auto \Rightarrow 31.

Usage

Embedded speech recognition

Activating speech recognition

Note

Speech recognition is not available during an active phone call.

Press $(\sqrt{2})$ on the steering wheel.

The audio system mutes, a voice output message prompts you to say a command, and help menus with the most important commands currently available are shown on the display.

The speech recognition is ready for voice input, after a beep has been given.

You can now say a voice command to initiate a system function (e.g. playing a preset radio station).

Adjusting the volume of voice prompts

Press volume button on the steering wheel upwards (increase volume) +_____ or downwards (decrease volume) -_____.

Interrupting a voice prompt

As an experienced user, you can interrupt a voice prompt by briefly pressing % on the steering wheel.

Alternatively you can say "Set dialogue mode as expert".

A beep is heard immediately, and a command can be stated without having to wait.

Cancelling a dialogue sequence

To cancel a dialogue sequence and to deactivate the speech recognition, press & on the steering wheel.

If you do not say any command for a certain period of time, or if you say commands that are not recognised by the system, a dialogue sequence is automatically cancelled.

46 Speech recognition

Operation via speech commands

Follow the instructions given by voice output and shown on the display. For best results:

- Listen for the voice prompt and wait for the beep before saying a command or replying.
- Read the example commands on the display.
- The voice prompt can be interrupted by pressing ^(k)/₂ again.
- Wait for the beep and then speak the command naturally, not too fast, not too slow.

Usually commands can be spoken in a single command.

Voice pass-thru application

Activating speech recognition

Press and hold (k_{Σ}^{\prime}) on the steering wheel until a speech recognition session is started.

Adjusting the volume of voice prompts

Turn \bigcirc on the control panel or press volume button on the steering wheel upwards (increase volume) $\stackrel{+}{\rightharpoonup}$ or downwards (decrease volume) $\stackrel{-}{\frown}$.

Deactivating speech recognition

Press & on the steering wheel. The speech recognition session is ended.

Phone

General information	47
Bluetooth connection	48
Operation	49
Mobile phones and CB radio	
equipment	52

General information

The phone function provides you with the possibility of having mobile phone conversations via a vehicle microphone and the vehicle loudspeakers as well as operating the most important mobile phone functions via the Infotainment system in the vehicle. To be able to use the phone function, the mobile phone must be connected to the Infotainment system via Bluetooth.

Not all phone functions are supported by every mobile phone. The usable phone functions depend on the relevant mobile phone and network provider. You can find further information on this in the operating instructions for your mobile phone, or you can enquire about them with your network provider.

Important information for operation and traffic safety

▲Warning

Mobile phones have effects on your environment. For this reason safety regulations and directions have been prepared. You should be familiar with the related directions before you use the telephone function.

▲Warning

Use of the hands-free facility while driving can be dangerous because your concentration is reduced when telephoning. Park your vehicle before you use the handsfree facility. Follow the stipulations of the country in which you find yourself at present.

Do not forget to follow the special regulations that apply in specific areas and always switch off the mobile phone if the use of mobile phones is prohibited, if

48 Phone

interference is caused by the mobile phone or if dangerous situations can occur.

Bluetooth

The phone function is certified by the Bluetooth Special Interest Group (SIG).

You can find further information about the specification on the internet at http://www.bluetooth.com.

Bluetooth connection

Bluetooth is a radio standard for the wireless connection of e.g. mobile phones, smartphones or other devices.

Pairing a device

During the pairing process, PIN code exchange between the Bluetooth device and the Infotainment system and connection of the Bluetooth devices to the Infotainment system are carried out.

Important information

Two paired Bluetooth devices can be connected to the Infotainment system at the same time. One device in hands-free mode, the other in audio streaming mode, see description on Bluetooth profile settings below.

However, two devices cannot be used in hands-free mode at the same time.

- Pairing only needs to be carried out once, unless the device is deleted from the list of paired devices. If the device has been connected previously, the Infotainment system establishes the connection automatically.
- Bluetooth operation considerably drains the device's battery. Therefore, connect the device to the USB port for charging.

Pairing a new device

- Activate the Bluetooth function of the Bluetooth device. For further information, see the operating instructions for the Bluetooth device.
- 2. If another Bluetooth device is already connected:

Press &, select **OPTIONS**, select **Bluetooth connection** and then touch \bigcirc **Search**.

If no Bluetooth device is currently connected:

Press & and then touch **Bluetooth search**.

A search for all Bluetooth devices in the near environment is performed.

- 3. Select the Bluetooth device you wish to pair from the displayed list.
- 4. Confirm the pairing procedure:
 - If SSP (secure simple pairing) is supported:

Confirm the messages on the Infotainment system and the Bluetooth device.

• If SSP (secure simple pairing) is not supported:

On the Infotainment system: a message is displayed asking you to enter a PIN code on your Bluetooth device.

On the Bluetooth device: enter the PIN code and confirm your input.

5. Activate the functions you want the paired smartphone to perform and confirm your settings. You can change these Bluetooth profile settings at any time, see below.

The Infotainment system and the device are paired.

6. The phone book is downloaded automatically to the Infotainment system. Depending on the phone, the Infotainment system must be allowed access to the phone book. If required, confirm the messages displayed on the Bluetooth device.

If this function is not supported by the Bluetooth device, a corresponding message is displayed.

Operations on paired devices

Press &, select **OPTIONS** and then select **Bluetooth connection**.

A list of all paired devices is displayed.

Changing the Bluetooth profile settings

Touch $\mathcal{Q}_{\underline{-}}$ next to the desired paired device.

Activate or deactivate the profile settings as desired and confirm your settings.

Connecting a paired device

Devices which are paired but not connected are identified by \gtrsim .

Select the desired device to connect it.

Disconnecting a device

The currently connected device is identified by ≵.

Select the device to disconnect it.

Deleting a paired device

Touch the in the upper right corner of the screen to display the icons next to each paired device.

Touch in next to the Bluetooth device you want to delete and confirm the displayed message.

Operation

As soon as a connection via Bluetooth has been set up between your mobile phone and the Infotainment system, you can operate many functions of your mobile phone via the Infotainment system.

Note

In the hands-free mode, mobile phone operation is still possible, e.g. taking a call or adjusting the volume. After setup of a connection between the mobile phone and the Infotainment system, mobile phone data is transmitted to the Infotainment system. This can take some time depending on the mobile phone and the amount of data to be transferred. During this period, operation of the mobile phone via the Infotainment system is possible only to a limited extent.

Note

Not every mobile phone fully supports the phone function. Therefore, deviations from the range of functions described below are possible.

Phone main menu

Press \mathcal{C} to display the phone main menu.



Note

The phone main menu is only available if a mobile phone is connected to the Infotainment system via Bluetooth. For a detailed description \diamondsuit 48.

Many functions of the mobile phone can now be controlled via the phone main menu (and associated submenus), and via the phonespecific controls on the steering wheel.

Initiating a phone call

Entering a phone number

Enter a phone number using the keypad in the phone main menu.

18°c		- I •	~	L	eave Me Now	I 🗔 I 🌣 14:22
		017		$\langle X \rangle$	← SUGG	ESTIONS
1		2	. 3	3	Peter Adams 01793456789	
4		^{abc}		5	Mila Baum 01784567890	
^{ghi}		jki O	m	, 	Bea Classe 01785678901	
pqrs	•	O tuv	w	eyz.	Anne Jones 01776789012	
0	·	Ô	. ‡	#	Michael Richa 01797890123	ards
OPTIONS	6		Cont	acts	1	Calls

As soon as figures are entered, matching entries from the contacts list are displayed in alphabetical order.

Touch the desired list entry to initiate a phone call.

Using the contacts list

The contacts list contains all phone book entries from the connected Bluetooth device and all contacts from the navigation system. Select **Contacts** and then select the desired list type.



Searching for a contact

The contacts are ordered by the first name or surname. To change the order, touch $\underline{\bullet} \equiv$.

To scroll through the list, use the scroll bar, \land or \checkmark .

To search for a contact via keyboard, touch **Search**.

Modifying or deleting a contact

Select and the contact and then select the desired option.

If you want to add a photo to the contact:

Connect a USB device with the desired photo stored on it to the USB port \Rightarrow 28, touch the photo frame and then select the desired photo.

Confirm your selection to download the selected photo to the system.

Using the call history

All incoming, outgoing, or missed calls are registered.

Select **Calls** and then select the desired list.

Select the desired list entry to initiate a call.

Incoming phone call

If an audio mode, e.g. the radio or USB mode, is active at the moment a call comes in, the audio source is muted and stays muted until the call ends.

A message with the caller's phone number or name is displayed.



To answer the call, touch **C**.

To reject the call, touch **~**.

To put the call on hold, touch \blacksquare . To resume to the call, touch \blacktriangleright .

During the ongoing call, the following menu is displayed.



To mute the microphone of the Infotainment system, touch **Micro OFF**.

To continue conversation via the mobile phone (private mode), touch ×∜ **Private**. To reactivate the conversation via the Infotainment system, touch ⊮∕⊱ **Private**.

Note

If you leave the vehicle and lock it while you are still in a private mode phone conversation, the Infotainment system may remain switched on until you leave the Bluetooth reception area of the Infotainment system.

Put incoming calls always on hold

For safety reasons the phone function can put all incoming calls on hold by default.

To activate this function, select **OPTIONS**, select **Security** and then select **Put incoming calls on hold**.

Quick messages

Different quick messages can be sent to contacts via the Infotainment system.

Select **OPTIONS** and then **Quick messages** to display a list of quick messages sorted by different categories.

To send a quick message, select the respective message and choose the contact.

Mobile phones and CB radio equipment

Installation instructions and operating guidelines

The vehicle specific installation instructions and the operating guidelines of the mobile phone and hands-free manufacturer must be observed when installing and operating a mobile telephone. Failure to do so could invalidate the vehicle type approval (EU directive 95/54/ EC).

Recommendations for fault-free operation:

- Professionally installed exterior antenna to obtain the maximum range possible
- Maximum transmission power 10 W
- Installation of the phone in a suitable spot, consider relevant Note in the Owner's Manual, section Airbag system.

Seek advice on predetermined installation points for the external antenna or equipment holder and ways of using devices with a transmission power exceeding 10 W.

Use of a hands-free attachment without external antenna with mobile telephone standards GSM 900/1800/1900 and UMTS is only permitted if the maximum transmission power of the mobile telephone is 2 W for GSM 900 or 1 W for the other types.

For reasons of safety, do not use the phone while driving. Even use of a hands-free set can be a distraction while driving.

∆Warning

Operation of radio equipment and mobile telephones which fail to meet above mentioned mobile telephone standards is only permitted using an antenna located outside of the vehicle.

Caution

Mobile telephones and radio equipment may lead to malfunctions in the vehicle electronics when operated inside the vehicle with no exterior antenna, unless the above mentioned regulations are observed.

Index

Activating Bluetooth music.29Activating phone.49Activating radio.23Activating the navigation system.33Activating USB audio.29Activating USB picture.30Address book.37Adjust time and date.20Audio files.28) 3 3) 7) 3
Audio files	

В

Balance	
Bluetooth connection	8
Bluetooth music menu	9
Connecting device28	8
General information28	8
Pairing 48	8
Phone	9
Bluetooth connection 48	8

С

Call	
_	

Functions during a call	19
Incoming call	
Initiating a phone call	
Ring tone	
Call history	
5	

Change display language
Control elements overview 8
D DAB FM-DAB Linking25
Date
adjust
adjust brightness
E
Equaliser 19
F Factory default settings

General information 28, 32, 44,	
Bluetooth	
DAB	. 25
Infotainment system	6
Navigation	. 32
Phone	. 47
Smartphone applications	. 28
USB	. 28
Guidance	

Μ

Maps	. 33
Menu operation	. 16
Mobile phones and CB radio	
equipment	. 52
Mute	

Ν

Navigation	
Contacts 3	57
Current location 3	3
Destination input 3	57
Map display	3
Map manipulation 3	3
Map update 3	52
Recent destinations 3	57
Route guidance 4	1

TMC stations 32	2, 41
Traffic incidents	41
Turn list	41
Waypoint trip	37
Network settings	12

0

-	
Operation	49
External devices	28
Menu	16
IVIEITU	10
Navigation system	33
u	
Phone	49
Radio	23

Ρ

•	
Pairing	48
Personal settings	20
Phone	
Bluetooth	47
Bluetooth connection	48
Call history	49
Contacts	49
Entering a number	49
Functions during a call	49
General information	47
Incoming call	49
Phone book	49
Phone main menu	49
Phone book	49
Phone projection	31
Picture files	

Playing audio POIs	
Presets	
Retrieving stations	23
Storing stations	23
Privacy settings	20
Profile settings	20

R Radio

F

Kaŭlo	
Activating	
Configuring DAB	25
Configuring RDS	
DAB announcements	25
Digital audio broadcasting	
(DAB)	25
Presets	23
Radio data system (RDS)	25
Regional	25
Regionalisation	25
Retrieving stations	23
Selecting the waveband	23
Station search	
Station tuning	23
Storing stations	
Usage	23
Radio data system	25
RDS	
Regional	25
Regionalisation	
5	

Retrieving stations2	3
Ring tone4	9
Ring tone volume1	9
Route guidance4	1

S

Smartphone	28
Phone projection	31
Speech output volume1	
Speech recognition4	14
Storing stations	23
Switching the Infotainment	
system on 1	2
System settings2	20

Т

Theft-deterrent feature	7
Time	
adjust	
TMC stations	. 32
Tone settings	. 19
Touch beep volume	. 19
Traffic incidents	. 41
Turn list	. 41

U

Update software	
Usage 12, 23, 33, 45	
Bluetooth	
Menu 16	
Navigation system	

Phone
Radio23
USB
USB
Connecting device
General information
USB audio menu
USB picture menu
Using smartphone applications
V
Voice guidance
Voice recognition
Volume
Auto volume 19
Mute function 12
Ring tone volume 19
Setting the volume
Speech output
Speed compensated volume 19
Touch beep volume
Volume settings 19
W
Waveband selection
Waypoint trip
Wi-Fi 12

Multimedia

Introduction	. 58
Basic operation	. 65
Radio	. 70
External devices	. 74
Speech recognition	. 77
Phone	. 80
Index	. 86

Introduction

General information	58
Theft-deterrent feature	59
Control elements overview	60
Usage	62

General information

Note

This manual describes all options and features available for the various Infotainment systems. Certain descriptions, including those for display and menu functions, may not apply to your vehicle due to model variant, country specifications, special equipment or accessories.

Note

The Infotainment system includes certain third party software. For the associated notices, licenses and any other information regarding this software see http://www.psa-peugeotcitroen.com/oss.

Important information on operation and traffic safety

∆Warning

Drive safely at all times. Only operate the Infotainment system if the traffic conditions allow a safe usage.

In the interest of safety, it might be appropriate to stop the vehicle before operating the Infotainment system.

∆Warning

The usage of a navigation app does not release the driver from the responsibility for a correct, vigilant attitude in road traffic. Always follow the applicable traffic rules.

Radio reception

Radio reception may be disrupted by static, noise, distortion or loss of reception due to:

- changes in distance from the transmitter
- multi-path reception due to reflection
- shadowing

Theft-deterrent feature


The Infotainment system is equipped with an electronic security system for the purpose of theft deterrence.

The Infotainment system therefore functions only in your vehicle and is worthless to a thief.

60 Introduction

Control elements overview

Control panel - Multimedia

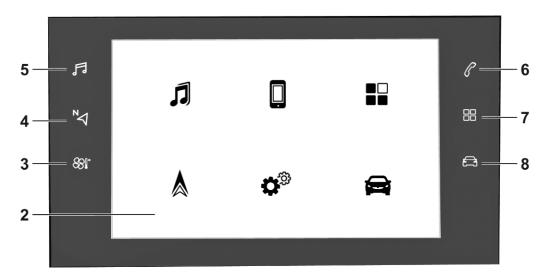



1	ம் 6	2
---	------	---

If switched off: switch power on / off

If switched on: mute system

Turn: adjust volume

2 Info Display

Home menu will be displayed by a 3-finger touch on screen

3 SSI.

Open climate menu if available, see Owner's Manual

4 ∾⊲

5 月

Open audio menu:

Radio 70
External devices (USB,
Bluetooth)74

C


6

7

8

Open vehicle settings menu, see Owner's Manual

Steering wheel controls

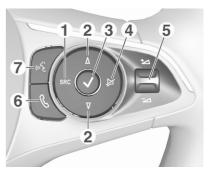

1 SRC (Source)

Select audio source, confirm selection with \checkmark 62

Long press: mute system

2 ∆/∇

62 Introduction

or select next / previous entry in station list, media list, call / contacts list when operation started via steering wheel controls

Confirm selection with \checkmark

3

Confirm selected item

or open station list, media list

4 🎽

5 + / -

Turn upwards / downwards: increase / decrease volume

6 🕓

Short press: accept incoming call

Long press: reject incoming call, hang up call 82

or open call / contacts list 82

If phone call active: open call in progress menu

7 (2

(with embedded speech recognition)

Short press: activate embedded speech recognition

Long press: activate speech recognition in Apple CarPlay™ or Android™ Auto if phone connected via USB port78

(without embedded speech recognition)

Short press: activate speech recognition in Apple CarPlay™ or Android™ Auto if phone connected via USB port

Usage

Control elements

The Infotainment system is operated via function buttons, a touch screen and menus that are shown on the display.

Inputs are made optionally via:

- the control panel on the Infotainment system ▷ 60
- the touch screen ⇔ 65
- audio controls on the steering wheel ♀ 60
- the speech recognition ⇔ 77

Switching the Infotainment system on or off

Press (). After switching on, the last selected Infotainment source becomes active.

Note

Some functions of the Infotainment system are only available if ignition is switched on or engine is running.

Automatic switch-off

If the Infotainment system has been switched on pressing () while the ignition is switched off, it will switch off again automatically when the Eco mode becomes active.

Setting the volume

Turn . The current setting is shown on the display.

When the Infotainment system is switched on, the last selected volume is set.

Speed compensated volume

When the speed compensated volume is activated \diamondsuit 67, the volume is adapted automatically to make up for the road and wind noise as you drive.

Mute

Press $\mathop{\scriptstyle (\!\!\!\!\)}$ to mute the Infotainment system.

To cancel the mute function, press () again. The last selected volume is set again.

Modes of operation

Audio-Media

Press f to display the main menu of the last selected audio mode.



Changing the media source Select SOURCES to display the

menu for media source selection.

Note

For a detailed description of menu operation via touch screen r > 65.

Select the desired media source.

For a detailed description of:

- Radio functions ▷ 70
- External devices ▷ 75

Phone

Before the phone function can be used, a connection has to be established between the Infotainment system and the mobile phone.

For a detailed description of preparing and establishing a Bluetooth connection between the Infotainment system and a mobile phone \Rightarrow 80.

If the mobile phone is connected, press \mathscr{C} to display the main menu of the phone function.

18°c			0		big FM	14:22 🌣 الب
1		2 abc		∝ 3 def		
4 ^{ghi}		5 ∞		6 mno	MyProvider	.com
pars *		8 ^{bv}		9 ^{wxyz} #		MyPhone
TEL 📱	К	+ eypad		Recent ca	lls Conta	•

For a detailed description of mobile phone operation via the Infotainment system ♀ 82.

64 Introduction

Apps


To show specific apps of your smartphone on the display of the Infotainment system, connect your smartphone.

Press \mathcal{C} and touch **Apple CarPlay** or **Android Auto**. A menu with different selectable apps is displayed.

For a detailed description \diamondsuit 76.

Settings

Press , select **OPTIONS** and then select **Audio settings** to display the respective menu.

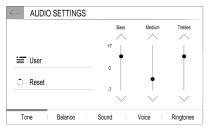

For a detailed description ▷ 65.

Touch the top bar 🎝 of the screen to display a menu for various system-related settings.

<u> </u>		
		Ô
	10 Par	
	System configuration	Language
		L ₀₁
	Screen configuration	Date and time

For a detailed description \diamondsuit 65.

Vehicle settings

Select 🗁 to open a menu for various vehicle-related settings.

Vehicle settings are described in the Owner's Manual.

Settings center

The **Settings center** provides quick access to the following settings:

- dark screen
- brightness
- profiles
- system configuration
- privacy settings

Touch the top bar 🍄 of the screen to display the **Settings center**.

Basic operation

Basic operation	65
Tone settings	67
Volume settings	67
System settings	68

Basic operation


The display of the Infotainment system has a touch-sensitive surface that allows direct interaction with the displayed menu controls.

Caution

Do not use pointed or hard items like ballpoint pens, pencils or similar for touch screen operation.

Menu operation

Selecting or activating a screen button or menu item

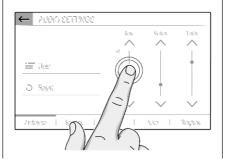

Touch a screen button or menu item.

The corresponding system function is activated, a message is shown, or a submenu with further options is displayed.

\longleftarrow , X and \checkmark / OK screen buttons


When operating the menus, touch \leftarrow or \times in the respective submenu to return to the next higher menu level.

When no \longleftarrow or X screen button is displayed, you are on the top level of the respective menu.

On some screens ✓ / OK needs to be touched for confirmation after selecting menu items or changing settings. Otherwise all performed selections or settings will be lost.

66 Basic operation

Scrolling a list

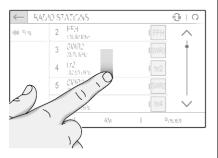

If there are more items available than presentable on the screen, the list must be scrolled.

To scroll through a list of menu items, you may optionally:

 Place your finger anywhere on the screen and move it upwards or downwards.

Note

Constant pressure must be applied and the finger must be moved at a constant speed.

 Touch ∧ or ∨ at the top or bottom of the scroll bar.

- Touch anywhere on the guiding line of the scroll bar.
- Move the slider of the scroll bar up and down with your finger.

Updating a list

Touch Ω to manually update lists, e.g. the station list.

Input fields and keyboards

Input fields are indicated by 🆍.

Touch the input field to open a keyboard for text or number input.

Depending on the application or function currently active, different keyboards are displayed.

Keyboards for text input

Keyboards for text input may contain several input fields. To enable a field for text input, touch it.

To enter a character, touch the respective screen button. The character is entered upon release.

Touch and hold a letter screen button to display associated letters in a letter pop-up menu. Release and then select the desired letter. To switch to the symbol keyboard, touch **0..#**.

To switch back to the letter keyboard or to switch between capital and small letters, touch **Aa**.

To switch the letter keyboard between normal order and alphabetical order, touch

To delete the most recently entered character or symbol, touch $\langle \times |$.

Adjusting a setting


←	AUDIO S	SET	TINGS					
Defau	ılt ringer volu	me:						
<								- >
	Ambience	1	Palanaa	1	Sound	Voice	1	Ringtone

To adjust a setting like the illustrated example, you may optionally:

- Touch < or >.
- Touch anywhere on the line.
- Move the slider with your finger.

Tone settings

Press ♬, select **OPTIONS** and then select **AUDIO SETTINGS**.

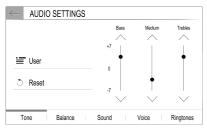

Several predefined settings are available to optimise the tone for a specific style of music (e.g. **Pop-Rock** or **Classical**).


To adjust the tone individually, select **User**. Change the settings as desired.

Note

If you change the settings of a predefined setting, e.g. **Pop-Rock**, this settings will be applied to the **User** or **Personalised** setting.

Balance and fader

Select the **Balance** tab.

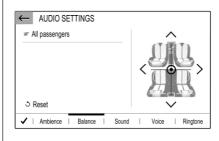

Several predefined settings are available to adjust the volume distribution inside the vehicle (e.g. **All passengers** or **Front only**).

To change the current setting, e.g. **All passengers**, select that setting and then select the desired new setting from the displayed list.

You may individually adjust the predefined settings.

To define the point in the passenger compartment where the volume is at its highest level, move the cursor in the illustration on the right side of the screen to the desired point.

To return to the default factory settings, select \bigcirc .

Volume settings

Press , select **OPTIONS** and then select **AUDIO SETTINGS**. Then select the **Sound** tab.

Audible touch feedback

If the audible touch feedback function is activated, each touch of a screen button or menu item is indicated by a beeping sound.

To adjust the touch beep volume, activate **Touch tones** and then adjust the setting.

Speed compensated volume

Activate or deactivate Volume linked to speed.

68 Basic operation

If activated, the volume of the Infotainment system is adapted automatically to make up for the road and wind noise as you drive.

Speech output

Select the Voice tab.

Adjust the volume for all speech outputs of the system.

Ringtone

Select the Ringtones tab.

Adjust the ringtone volume of incoming calls.

System settings

Touch the top bar **‡** of the screen to display the **Settings center**.

The configuration menu is accessible via the **Settings center**.

* **	Æ.	
System configuration	Language	
Screen configuration	Date and time	

Configuring the system

Select **System configuration** to perform some basic system configurations, e.g.:

- Adjust the display of units for temperature or fuel consumption.
- Reset the system configuration to factory defaults.
- Update the installed software version.
- Adjust the privacy settings for data sharing and vehicle position.

Changing display language

To adjust the language for the menu texts, select **Language** and then select the desired language.

Note

If the selected display language is supported by the embedded speech recognition, the language of the speech recognition will be changed accordingly; if not, embedded speech recognition will be not available.

Adjusting time and date

Select Date and time.

\leftarrow	ADJUST DATE AND TIM	E	
Time		Time Zone	
	9 10:55	= (UTC+1:00) Central - W	
24	\$h	24H 12H	_
D	aylight saving / Summer time (+ 1	I hour) OFF ON	-
G	PS Synchronisation:	OFFON	-
	Time	Date	

Changing time and date formats

To change the time and date formats, select the respective tabs and then select the desired formats.

Setting time and date

By default the displayed time and date is automatically adjusted by the system.

To manually adjust the displayed time and date:

Select the Time tab.

Set **GPS Synchronisation:** to **OFF** and then select the **Time** field to set the desired time.

Select the **Date** tab and then select the desired date format.

Adjusting the screen

Select Screen configuration.

Text scroll function Select the Animation tab.

If long texts on the screen should be scrolled automatically, activate **Automatic scrolling**.

If **Automatic scrolling** is deactivated, long texts are truncated.

Adjusting the brightness

Select **Brightness** and set the brightness of the screen to the desired level.

Storing your personal settings

To go to the profile settings, touch the top bar of the screen **‡** and then select **Profiles**.

You can store a multitude of settings in a personal profile. For example, all current tone settings, all radio presets and a phone book.

In case you share the vehicle with other people, this enables you to restore your personal settings from your profile at any time.

A maximum of three personal profiles may be stored.

Additionally, a **Common profile** is available. All settings done at any time are automatically stored in that profile. If no personal profile is activated, the **Common profile** is active.

Storing your personal profile

After performing all your personal settings:

Select one of the personal profile tabs.

Select the input field
 and enter the desired name of your personal profile.

Finally, confirm your inputs to store them in your personal profile.

Activating your personal profile

Touch the top bar **t** of the screen, then select **Profiles** and then select the tab with the name of your personal profile.

Activating the Common profile

If a personal profile is currently active:

Go to the **Common profile** tab and then select **Activate profile**.

Resetting a personal profile

You can at any time reset a personal profile to restore the default factory settings on that profile.

Activate the respective profile and then select **Reset the profile**.

Resetting the Common profile

You can at any time reset the **Common profile** to restore the default factory settings on that profile.

Select **Common profile** and then select **Reset the common profile**.

Radio


Usage
Radio data system71
Digital audio broadcasting72

Usage

Activating the radio

Press 5. The audio main menu last selected is displayed.

If the radio main menu is not active, select **SOURCES** and then select **Radio**.

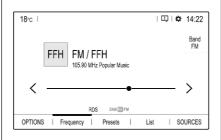

The station last played will be received.

Selecting a waveband

Select **OPTIONS** and repeatedly touch (a) to toggle between the different wavebands.

Searching for stations

Automatic station search

Briefly touch \lt or > to play the previous or next receivable station.

Manual station search

Press and hold $\langle \text{ or } \rangle$. Release when the required frequency has almost been reached.

A search is made for the next station that can be received and it is played automatically.

Station lists

In the station lists, all receivable radio stations within the current reception area are available for selection.

To display the station list of the waveband currently active, select **List**.

Select the desired station.

Update station lists


If the stations stored in the wavebandspecific station list can no longer be received, the station lists must be updated.

To start an update for the currently active waveband, select Ω .

Storing favourite stations

Up to 24 radio stations of all wavebands can be stored as favourites in the **Presets** list.

Select **Presets** to display the preset buttons.

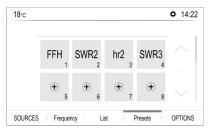

Storing the currently active station

Touch and hold the desired button in the **Presets** list for a few seconds. The respective frequency or station name is displayed on the button.

If a station is already stored on a preset button, that station will be overwritten by the new one.

Alternatively, touch \bigstar Mem in the radio main menu to store the currently active station.

Storing a station from a station list Select **OPTIONS** and then select the desired waveband.

To store a station from the station list, briefly touch \bigstar next to the desired station. The station is stored and the number of the preset button will be displayed. To delete a station, touch \bigstar again.

Alternatively, touch and hold the name of the station until it is stored. To delete the station, touch and hold the name of the station again until a corresponding message is displayed.

Retrieving stations

In the radio main menu select **Presets** and then briefly touch the preset button of the desired station.

Radio data system

Radio data system (RDS) is a service of FM stations that considerably facilitates the finding of the desired station and its fault-free reception.

Advantages of RDS

- On the display, the programme name of the station appears instead of its frequency.
- During a station search, the Infotainment system tunes in to RDS stations only.
- The Infotainment system always tunes into the best receivable broadcasting frequency of the set station by means of AF (alternative frequency).
- Depending on the station that is received, the Infotainment system displays radio text that can contain e.g. information on the current programme.

Activating RDS

In the radio main menu, select **OPTIONS** and activate **RDS**.

If **RDS** is activated, **RDS** is displayed in the bottom line of the radio main menu.

Radio text

If RDS is activated, information on the radio programme currently active or the music track currently playing are displayed below the programme name.

To show or hide the information, go to the **OPTIONS** menu and activate or deactivate **Information**.

Traffic announcements

Many RDS stations broadcast traffic news. If the traffic announcements function is activated, radio or media playback is interrupted for the duration of a traffic announcement.

To activate traffic announcements, go to the **OPTIONS** menu and activate **TA**.

If **TA** is activated, **TA** is displayed in the bottom line of the radio main menu.

Digital audio broadcasting

Digital audio broadcasting (DAB) broadcasts radio stations digitally.

DAB stations are indicated by the programme name instead of the broadcasting frequency.

General information

- With DAB, several radio programmes (services) can be broadcast on a single ensemble.
- Besides high-quality digital audio services, DAB is also able to transmit programme-associated data and a multitude of other data services including travel and traffic information.
- As long as a given DAB receiver can pick up the signal sent out by a broadcasting station (even if the signal is very weak), sound reproduction is ensured.
- In the event of poor reception, the volume is reduced automatically to avoid the output of disagreeable noises.

If the DAB signal is too weak to be picked up by the receiver, reception is interrupted completely. This incident can be avoided by activating DAB-FM auto tracking, see below.

- Interference caused by stations that are on nearby frequencies (a phenomenon that is typical of AM and FM reception) does not occur with DAB.
- If the DAB signal is reflected by natural obstacles or buildings, the reception quality of DAB is improved, whereas AM or FM reception is considerably impaired in such cases.
- When DAB reception is enabled, the FM tuner of the Infotainment system remains active in the background and continually searches for the FM stations with the best reception. If Traffic announcement ▷ 71 is activated, traffic announcements of the FM station with the best reception are issued. Deactivate Traffic announcement if DAB reception should not be interrupted by FM traffic announcements.

FM-DAB Linking

This function enables switching from an FM station to a corresponding DAB station and vice versa. Switching from FM to DAB occurs as soon as a corresponding DAB station is available. Therefore, it is recommended to store favourite stations as DAB stations to reduce frequent switching.

Switching from DAB to FM occurs if the signal is too weak to be picked up by the receiver.

Activation

Precondition is that **RDS** is activated before FM-DAB Linking can be activated.

To activate FM-DAB Linking, select **OPTIONS** in the radio main menu and then select **FM-DAB Follow-up**.

The following symbol will be displayed when FM-DAB Linking is activated:

DAB 🔁 FM

Deactivation

To deactivate FM-DAB Linking, select **OPTIONS** in the radio main menu and then deselect **FM-DAB Follow-up**.

FM-DAB Linking will automatically be deactivated when **RDS** is deactivated.

73

External devices

General information74
Playing audio75
Displaying pictures75
Using smartphone applications 76

General information

A USB port is located in the centre console.

Caution

To protect the system, do not use a USB hub.

Note

The USB ports must always be kept clean and dry.

USB ports

An MP3 player, USB device, SD card (via USB connector / adapter) or smartphone can be connected to the USB port.

The Infotainment system can play audio files or show picture files contained in USB devices.

When connected to a USB port, various functions of the devices mentioned above can be operated via the controls and menus of the Infotainment system.

Note

Not all auxiliary devices are supported by the Infotainment system.

Connecting / disconnecting a device

Connect one of the devices mentioned above to a USB port. If required, use the appropriate connection cable. The music function starts automatically.

Note

If a non-readable USB device is connected, a corresponding error message appears and the Infotainment system automatically switches to the previous function.

To disconnect a USB device, select another function and then remove the USB device.

Caution

Avoid disconnecting the device during playback. This may damage the device or the Infotainment system.

Bluetooth audio streaming

Streaming allows you to listen to music from your smartphone.

For a detailed description on how to establish a Bluetooth connection $rac{rac}{81}$.

If audio playback does not start automatically, it may be necessary to start the playback on the smartphone.

First adjust the volume on your smartphone (to a high level). Then adjust the volume of Infotainment system.

File formats

The audio equipment supports different file formats.

Playing audio

Activating the music function

Connecting the USB or Bluetooth device rightarrow 74.

If device already connected, but playback of stored music files not active: Press ♬, select **SOURCES** and then select the respective source.

Playback of the audio tracks starts automatically.

Playback functions

Interrupting and resuming playback Touch **I** to interrupt playback. The screen button changes to **▶**.

Touch ▶ to resume playback.

Playing the previous or next track Touch \langle or \rangle .

Fast forwarding and rewinding Touch and hold \langle or \rangle . Release to return to normal playback mode.

Alternatively, you can move the slider showing the current track position to the left or right.

Playing tracks randomly Select OPTIONS and touch the Random icon repeatedly:

oN⊄: play tracks of currently selected list (album, artist, etc.) in random order.

LC: play all tracks stored on connected device in random order.

OFFC: play tracks of currently selected list (album, artist, etc.) in normal playback mode.

Repeating tracks

Select **OPTIONS** and touch the **Repeat** icon Trepeatedly to select one of the following options:

on tracks of currently selected list (album, artist, etc.)

 f_{x} : repeat tracks of currently selected list (album, artist, etc.) once

of currently selected list (album, artist, etc.) in normal playback mode

Displaying pictures

You can view pictures stored on a USB device.

Activating the picture viewer

Connecting the USB device \diamondsuit 74.

If device already connected, but picture viewer not active:

Press 🗄, select **Photos** and choose the desired folder and picture.



Touch the screen to display the menu bar.

Viewing the previous or next picture

Touch ◀◀ or ▶▶.

Starting or stopping a slide show

Select ► to view the pictures stored on the USB device in a slide show. Touch I to end the slide show.

Using smartphone applications

Phone projection

The phone projection applications Apple CarPlay and Android Auto display selected apps from your smartphone on the Info Display and allow their operation directly via the Infotainment controls.

Check with the device's manufacturer if this function is compatible with your smartphone and if this application is available in the country you are in.

Preparing the smartphone

iPhone[®]: Make sure Siri[®] is activated on your phone.

Android phone: Download the Android Auto app to your phone from the Google Play[™] Store.

Connecting the smartphone iPhone

Connect the phone to the USB port \Rightarrow 74.

If the phone is already connected via Bluetooth, upon connecting to the USB port and launching Apple CarPlay, the Bluetooth connection will disconnect. After disconnecting the USB connection, the phone will be connected via Bluetooth again.

Android phone

Connect the phone via Bluetooth \diamondsuit 81 and then connect the phone to the USB port \diamondsuit 74.

Starting phone projection

If phone projection is not starting automatically, press \mathcal{C} and then touch **Apple CarPlay** or **Android Auto**.

The phone projection screen displayed depends on your smartphone and software version.

Returning to the Infotainment screen

Press, e.g., the 🎵 button on the control panel.

Speech recognition

General information	77
Usage	78

General information

Embedded speech recognition

The embedded speech recognition of the Infotainment system enables you to operate various functions of the Infotainment system via voice input. It recognises commands and numeric sequences independently of the relevant speaker. The commands and numeric sequences can be spoken without a voice pause between the individual words.

In the event of incorrect operation or commands, the speech recognition gives visual and / or acoustic feedback and requests you to reenter the desired command. Apart from this, the speech recognition acknowledges important commands and will enquire if necessary.

In general, there are different ways to speak commands for performing the desired actions.

Note

To ensure that conversations inside the vehicle do not lead to unintentional triggering of the system functions, the speech recognition does not start until it has been activated.

Important information Language support

- Not all languages available for the display of the Infotainment system are also available for the speech recognition.
- If the display language currently selected is not supported by the speech recognition, speech recognition is not available.

In such a case, you need to select another language for the display if you want to control the Infotainment system via voice input. To change the display language \diamondsuit 68.

Voice pass-thru application

The voice pass-thru application of the Infotainment system allows access to the speech recognition commands on your smartphone.

78 Speech recognition

Voice pass-through is available via the phone projection applications Apple CarPlay and Android Auto ⇔ 76.

Usage

Embedded speech recognition

Activating speech recognition

Note

Speech recognition is not available during an active phone call.

Activation via the 16 button on the steering wheel

Press $\overline{\mathbb{A}}$ on the steering wheel.

The audio system mutes, a voice output message prompts you to say a command, and help menus with the most important commands currently available are shown on the display.

The speech recognition is ready for voice input, after a beep has been given.

You can now say a voice command to initiate a system function (e.g. playing a preset radio station).

Adjusting the volume of voice prompts

Press volume button on the steering wheel upwards (increase volume) +_____ or downwards (decrease volume) -____.

Interrupting a voice prompt

As an experienced user, you can interrupt a voice prompt by briefly pressing & on the steering wheel.

Alternatively you can say "Set dialogue mode as expert".

A beep is heard immediately, and a command can be stated without having to wait.

Cancelling a dialogue sequence

To cancel a dialogue sequence and to deactivate the speech recognition, press & on the steering wheel.

If you do not say any command for a certain period of time, or if you say commands that are not recognised by the system, a dialogue sequence is automatically cancelled.

Operation via speech commands

Follow the instructions given by voice output and shown on the display.

For best results:

- Listen for the voice prompt and wait for the beep before saying a command or replying.
- Read the example commands on the display.
- The voice prompt can be interrupted by pressing (c²/₂ again.
- Wait for the beep and then speak the command naturally, not too fast, not too slow.

Usually commands can be spoken in a single command.

Voice pass-thru application

Activating speech recognition

Press (without embedded speech recognition) or press and hold (with embedded speech recognition) (1/2 on the steering wheel until a speech recognition session is started.

Adjusting the volume of voice prompts

Turn \bigcirc on the control panel or press volume button on the steering wheel upwards (increase volume) $\stackrel{+}{\rightharpoonup}$ or downwards (decrease volume) $\stackrel{-}{\frown}$.

Deactivating speech recognition

Press & on the steering wheel. The speech recognition session is ended.

General information	80
Bluetooth connection	81
Operation	82
Mobile phones and CB radio	
equipment	84

General information

The phone function provides you with the possibility of having mobile phone conversations via a vehicle microphone and the vehicle loudspeakers as well as operating the most important mobile phone functions via the Infotainment system in the vehicle. To be able to use the phone function, the mobile phone must be connected to the Infotainment system via Bluetooth.

Not all phone functions are supported by every mobile phone. The usable phone functions depend on the relevant mobile phone and network provider. You can find further information on this in the operating instructions for your mobile phone, or you can enquire about them with your network provider.

Important information for operation and traffic safety

∆Warning

Mobile phones have effects on your environment. For this reason safety regulations and directions have been prepared. You should be familiar with the related directions before you use the telephone function.

∆Warning

Use of the hands-free facility while driving can be dangerous because your concentration is reduced when telephoning. Park your vehicle before you use the handsfree facility. Follow the stipulations of the country in which you find yourself at present.

Do not forget to follow the special regulations that apply in specific areas and always switch off the mobile phone if the use of mobile phones is prohibited, if

interference is caused by the mobile phone or if dangerous situations can occur.

Bluetooth

The phone function is certified by the Bluetooth Special Interest Group (SIG).

You can find further information about the specification on the internet at http://www.bluetooth.com.

Bluetooth connection

Bluetooth is a radio standard for the wireless connection of e.g. mobile phones, smartphones or other devices.

Pairing a device

During the pairing process, PIN code exchange between the Bluetooth device and the Infotainment system and connection of the Bluetooth devices to the Infotainment system are carried out.

Important information

Two paired Bluetooth devices can be connected to the Infotainment system at the same time. One device in hands-free mode, the other in audio streaming mode, see description on Bluetooth profile settings below.

However, two devices cannot be used in hands-free mode at the same time.

- Pairing only needs to be carried out once, unless the device is deleted from the list of paired devices. If the device has been connected previously, the Infotainment system establishes the connection automatically.
- Bluetooth operation considerably drains the device's battery. Therefore, connect the device to the USB port for charging.

Pairing a new device

- Activate the Bluetooth function of the Bluetooth device. For further information, see the operating instructions for the Bluetooth device.
- 2. Press \mathcal{C} and then touch **Bluetooth** search.

A search for all Bluetooth devices in the near environment is performed.

- 3. Select the Bluetooth device you wish to pair from the displayed list.
- 4. Confirm the pairing procedure:
 - If SSP (secure simple pairing) is supported:

Confirm the messages on the Infotainment system and the Bluetooth device.

• If SSP (secure simple pairing) is not supported:

On the Infotainment system: a message is displayed asking you to enter a PIN code on your Bluetooth device.

On the Bluetooth device: enter the PIN code and confirm your input.

The Infotainment system and the device are paired.

5. The phone book is downloaded automatically to the Infotainment system. Depending on the phone, the Infotainment system must be allowed access to the phone book. If required, confirm the messages displayed on the Bluetooth device.

If this function is not supported by the Bluetooth device, a corresponding message is displayed.

Operations on paired devices

Press \mathcal{C} , select TEL and then select **Bluetooth connection**.

A list of all paired devices is displayed.

Changing the Bluetooth profile settings

Touch 🏟 next to the desired paired device.

Activate or deactivate the profile settings as desired and confirm your settings.

Connecting a paired device

Devices which are paired but not connected are identified by \gtrsim .

Select the desired device to connect it.

Disconnecting a device

The currently connected device is identified by 3%.

Select the device to disconnect it.

Deleting a paired device

Touch in the upper right corner of the screen to display in icons next to each paired device.

Touch in next to the Bluetooth device you want to delete and confirm the displayed message.

Operation

As soon as a connection via Bluetooth has been set up between your mobile phone and the Infotainment system, you can operate many functions of your mobile phone via the Infotainment system.

Note

In the hands-free mode, mobile phone operation is still possible, e.g. taking a call or adjusting the volume.

After setup of a connection between the mobile phone and the Infotainment system, mobile phone data is transmitted to the Infotainment system. This can take some time depending on the mobile phone and the amount of data to be transferred. During this period, operation of the mobile phone via the Infotainment system is possible only to a limited extent.

Note

Not every mobile phone fully supports the phone function. Therefore, deviations from the range of functions described below are possible.

Phone main menu

Press $\ensuremath{\mathcal{C}}$ to display the phone main menu.

18°c	0	big Ff	M
1 4 7 ⊁	2 abc 5 jki 8 tuv 0	CX 3 def 6 mno 9 wwyz #	MyProvider.com MyPhone
TEL 🔋	Keypad	Recent calls	Contacts OPTIONS

Note

The phone main menu is only available if a mobile phone is connected to the Infotainment system via Bluetooth. For a detailed description \diamondsuit 81.

Many functions of the mobile phone can now be controlled via the phone main menu (and associated submenus), and via the phonespecific controls on the steering wheel.

Initiating a phone call

Entering a phone number

Enter a phone number using the keypad in the phone main menu.

As soon as figures are entered, matching entries from the contacts list are displayed in alphabetical order.

Touch the desired list entry to initiate a phone call.

Using the contacts list

The contacts list contains all phone book entries from the connected Bluetooth device.

Select **Contacts** to see the contacts list.

18ºc		
Q	Richards Michael	
•O _A	Jones Anne	±
	Baum Mila	1
	Classe Bea	1
	Adams Peter	
TEL 🛯 K	eypad Recent calls	Contacts OPTIONS

Searching for a contact

The contacts are ordered by the first name or surname. To change the order, touch **OPTIONS** and then $\underline{\bullet} \equiv$.

To scroll through the list, touch \land or \checkmark .

To search for a contact via keyboard, touch \mathcal{O} .

To search for a contact via the first letter, touch $\mathcal{O}_{A_{\dots}}$ and select the desired letter.

Modifying or deleting a contact

Select and the contact and then select the desired option.

Using the call history

All incoming, outgoing, or missed calls are registered.

Select **Recent calls** to see the call history.

Select the desired list entry to initiate a call.

Incoming phone call

If an audio mode, e.g. the radio or USB mode, is active at the moment a call comes in, the audio source is muted and stays muted until the call ends.

A message with the caller's phone number or name is displayed.



To answer the call, touch **C**.

To reject the call, touch **n**.

To put the call on hold, touch \blacksquare . To resume to the call, touch \blacktriangleright .

To mute the microphone of the Infotainment system, touch **Micro OFF** and \checkmark will appear. To cancel the mute function, press \checkmark again.

To continue conversation via the mobile phone (private mode), touch . To reactivate the conversation via the Infotainment system, touch again.

Note

If you leave the vehicle and lock it while you are still in a private mode phone conversation, the Infotainment system may remain switched on until you leave the Bluetooth reception area of the Infotainment system.

Put incoming calls always on hold

For safety reasons the phone function can put all incoming calls on hold by default.

To activate this function, select **OPTIONS** and then touch ζ " until the function is activated.

Mobile phones and CB radio equipment

Installation instructions and operating guidelines

The vehicle specific installation instructions and the operating guidelines of the mobile phone and hands-free manufacturer must be observed when installing and operating a mobile telephone. Failure to do so could invalidate the vehicle type approval (EU directive 95/54/ EC).

Recommendations for fault-free operation:

- Professionally installed exterior antenna to obtain the maximum range possible
- Maximum transmission power 10 W
- Installation of the phone in a suitable spot, consider relevant Note in the Owner's Manual, section **Airbag system**.

Seek advice on predetermined installation points for the external antenna or equipment holder and ways of using devices with a transmission power exceeding 10 W.

Use of a hands-free attachment without external antenna with mobile telephone standards GSM 900/1800/1900 and UMTS is only permitted if the maximum transmission power of the mobile telephone is 2 W for GSM 900 or 1 W for the other types.

For reasons of safety, do not use the phone while driving. Even use of a hands-free set can be a distraction while driving.

▲Warning

Operation of radio equipment and mobile telephones which fail to meet above mentioned mobile telephone standards is only permitted using an antenna located outside of the vehicle.

Caution

Mobile telephones and radio equipment may lead to malfunctions in the vehicle electronics when operated inside the vehicle with no exterior antenna, unless the above mentioned regulations are observed.

Index

Α

Activating Bluetooth music	75
Activating phone	82
Activating radio	70
Activating USB audio	75
Activating USB picture	75
Adjust time and date	
Audio files	
Auto volume	67

В

. 67 . 65
. 81
. 75
. 74
. 74
. 81
. 82
. 81

C Coll

82
82
82
82
82
68
82

Control elements Infotainment system Steering wheel Control elements overview	60
DAB FM-DAB Linking	72
Date adjust Digital audio broadcasting Display	68
adjust brightness change language Displaying pictures Display settings	68 75
E Equaliser	67
F Factory default settings Fader File formats Audio files Picture files.	67 74 74
G General information	74

8	87

Infotainment system
l Infotainment control panel60
M Menu operation
0
Operation
P
Pairing
Bluetooth80Bluetooth connection81Call history82Contacts82Entering a number82Functions during a call82

General information Incoming call Phone book Phone main menu Phone book Phone projection Picture files Playing audio Presets	. 82 . 82 . 82 . 82 . 82 . 76 . 74
Retrieving stations	
Storing stations	
Privacy settings Profile settings	
R Radio	
Activating	. 70
Configuring DAB	. 72
Configuring RDS	. 71
DAB announcements	. 72
Digital audio broadcasting	70
(DAB) Presets	
Radio data system (RDS)	
Regional	
Regionalisation	
Retrieving stations	
Selecting the waveband Station search	
Station search	
0.0.001 0.0119	0

Storing stations	70
Usage	70
Radio data system	71
RDS	71
Regional	71
Regionalisation	71
Retrieving stations	70
Ring tone	82
Ring tone volume	67

S

Smartphone	74
Phone projection	
Speech output volume	67
Speech recognition	
Storing stations	70
Switching the Infotainment	
system on	62
System settings	
T Theft-deterrent feature Time adjust Tone settings Touch beep volume	68 67
U Update software	78

Menu6	65
Phone	32
Radio	70
USB	
USB	
Connecting device	74
General information	
USB audio menu	
USB picture menu	
Using smartphone applications	
V	
Voice recognition	77
Volume	
Auto volume	67
Mute function	
Ring tone volume6	
Setting the volume	
Speech output	
Speed compensated volume	
Touch beep volume	
Volume settings	
W	
Waveband selection	70

Radio (Infotainment system)

Introduction9	0
Basic operation9	4
Audio 9	6
Speech recognition9	8
Phone	9
Index 10	2

Introduction

Note

This manual describes all options and features available for the various Infotainment systems. Certain descriptions, including those for display and menu functions, may not apply to this vehicle due to model variant, country specifications, special equipment or accessories.

For additional information including some videos, visit us online.

Important information on operation and traffic safety

∆Warning

The Infotainment system must be used so that the vehicle can be driven safely at all times. If in doubt, stop the vehicle and operate the Infotainment system while the vehicle is stationary.


Radio reception

Radio reception may be disrupted by static, noise, distortion or loss of reception due to:

- changes in distance from the transmitter
- multipath reception due to reflection
- shadowing

Introduction

Control panel - Radio

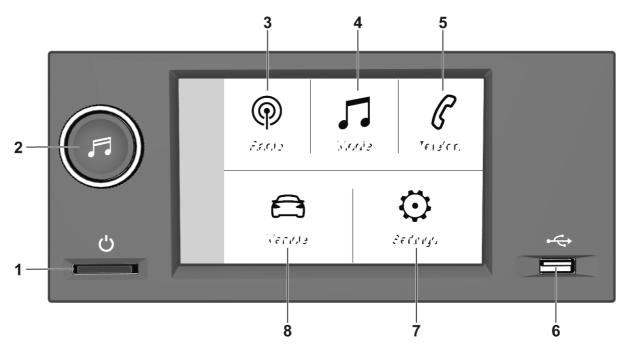

92 Introduction

1 🕛

Press: switch power on / off

2 月

Turn: adjust volume

3 🔍

Display the radio menu

4 🎜

Display the media menu for external devices

5

P

Display the phone menu if a mobile phone is connected

Display a list of all paired devices if no phone is connected

6 🚓

USB port for external devices


7 😳

Display the system settings menu

8 🛱

Display the vehicle settings menu

Steering wheel controls

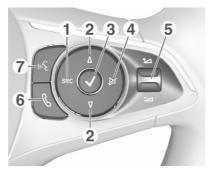

SRC (Source)

Select audio source, confirm selection with \checkmark

Long press: mute system

2 ∆/∇

Select next / previous preset radio station when radio active

or select next / previous track / picture when external devices active or select next / previous entry in station list, media list, call / contacts list when operation started via steering wheel controls

Confirm selection with \checkmark

3

Confirm selected item

or open station list, media list

4 ≱

Activate / deactivate mute function

5 ½/2

Turn upwards / downwards: increase / decrease volume

6 📞

Short press: accept incoming call

Long press: reject incoming call, hang up call

or open call / contacts list

If phone call active: open call in progress menu

7 "

Short press: activate speech recognition

Top bar

The top bar on the screen indicates the following information:

- time
- temperature

Basic operation


Screen operations

The display of the Infotainment system has a touch-sensitive surface that allows direct interaction with the displayed menu controls.

Caution


Do not use pointed or hard items like ballpoint pens, pencils or similar for touch screen operation.

Use the following finger gestures to control the Infotainment system.

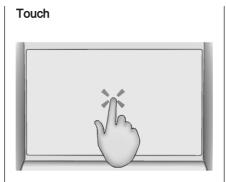

Touch is used to open a menu or select an option.

Touch and hold

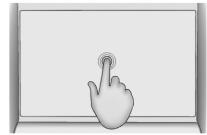

Touch and hold can be used to save radio stations.

Returning to the previous screen

To return to the previous screen, touch \leftarrow in the upper left corner of the screen.

Returning to the home screen

To return to the home screen, touch \clubsuit .

System settings

To display the system settings menu, go to the home screen and select \bigcirc .


The following submenus are available:

- **Display**: Adjust the display brightness and the text scrolling or turn the screen off.
- **Date/Time**: Adjust the date and the time.
- **System**: Adjust the privacy settings for data sharing and vehicle position, reset the system to the factory settings, adjust the units and see the system information.
- Languages: Change the system language.
- **Bluetooth**: Display a list of all paired devices.
- Audio: Activate / deactivate speed compensated volume and touch tones and adjust sound distribution, ambience, bass and treble.

96 Audio

Audio

Overview

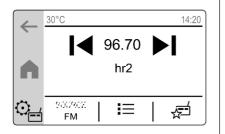

- Touch to go to the previous station / song or touch and hold for rewinding.
- 96.70 : Touch to enter a frequency.
- Touch to go to the next station / song or touch and hold for fast forwarding.
- Adjust the audio settings.
- SOURCE : Select the audio source.

- Display the station list / tracklist.
 - : Display the favourites list.

Sources

Ð

Touch **SOURCE** and select the desired audio source. The currently active audio source will be indicated.

When an external device will be connected, the Infotainment system automatically selects the external device as the audio source. When the external device will be disconnected, the previous audio source will be selected.

Station tuning

To tune into a certain radio station, open the station list \blacksquare and touch **ABC**. All receivable radio stations are sorted by the first letter.

To tune into a specific frequency, touch the frequency indication on the radio main screen. A new screen will be displayed with a number pad. A frequency can be entered.

Station list

To display the station list, touch **E**.

The currently active radio station will be indicated by u|u|u.

Favourite radio stations will be indicated by \bigstar .

To update the station list, touch \bigodot and select Update list.

Favourites

Up to 16 radio stations can be saved as favourites. Touch ∉ to display the favourites list.

To save the currently active radio station as a favourite, touch and hold the desired row in the favourites list.

Traffic announcement

Traffic announcement is a service of FM radio stations. When traffic programme is activated, the currently playing audio source will be interrupted when an FM radio station is broadcasting traffic news. The audio source will be switched back when the traffic news are over. Traffic announcements can be activated or deactivated in the radio settings \bigodot .

RDS switching

When RDS switching is activated, the Infotainment system always tunes into the best receivable broadcasting frequency of the currently active radio station.

RDS switching can be activated or deactivated in the radio settings 🔅.

External devices

A USB port for the connection of external devices is located next to the Info Display.

When an external audio source (via USB or Bluetooth) is connected and selected as audio source, the following symbols will be displayed on the audio screen:

- : Interrupt playback.
- : Resume playback.
- : Display the tracklist.
- Display the library (folders, artists, albums, playlists, songs).

In the library O, the tracks can be sorted by artist, album etc.

When a folder is selected in the library .O. only the tracks of the

corresponding folder are displayed in the tracklist Ξ .

The following playback functions can be activated in the media settings \bigodot :

- **Repeat** : Repeat the tracks of the current list.
- Shuffle : Play tracks in random order.

Audio settings

To adjust the audio settings, touch () on the audio screen and select **Audio settings**. The following settings can be adjusted:

- Activate / deactivate speed compensated volume
- Activate / deactivate touch tones
- Adjust sound distribution
- Adjust ambience, bass and treble

Speech recognition

The voice pass-thru application of the Infotainment system allows access to the speech recognition commands on a smartphone. See the smartphone manufacturer's operating instructions to find out whether the smartphone supports this feature.

In order to use the voice pass-thru application, the smartphone must be connected via Bluetooth \diamondsuit 100.

Activating speech recognition

Press and hold (% on the steering wheel until a speech recognition session is started.

Adjusting the volume of voice prompts

Turn \bigcirc on the control panel or press the volume button on the steering wheel upwards (increase volume) $\stackrel{+}{\rightharpoonup}$ or downwards (decrease volume) $\stackrel{-}{\rightharpoondown}$.

Deactivating speech recognition


 $\mathsf{Press} \ \&$ on the steering wheel. The speech recognition session is ended.

General information	99
Bluetooth connection 1	00

General information

Not every mobile phone fully supports the phone function. Therefore, deviations from the range of functions described below are possible.

Phone main menu

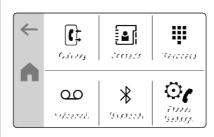

- Display the call list.
- Display the contact list.
- : Display the number pad.
- oo: Call the answering machine if a voicemail number is set.
- ⊁ : Display a list of all paired devices.
- \odot : Adjust the phone settings.

Note

On some mobile phones, access permissions for contact and call lists may have to be set when connecting the mobile phone to the Infotainment system.

Making a phone call

To make a phone call, either choose a contact from the contact list or dial a phone number via the number pad.

Phone settings

To go to the phone settings menu, go to the phone menu and select .

The following settings are adjustable:

- Putting phone calls automatically on hold.
- Setting a voicemail number.

Bluetooth connection

Pairing a phone

To pair a mobile phone, proceed as follows:

- 1. Enable Bluetooth on the mobile phone and ensure it is visible for other devices.
- 2. On the Info Display, select **Telephone I Manage devices**.
- 3. Touch Add.

Mobile phones are being searched.

- 4. Select the desired mobile phone.
- 5. Select the Infotainment system from the Bluetooth device list on the mobile phone.
- Compare and confirm the shown code on the mobile phone and on the Info Display. Touch OK on the Info Display.

Alternatively, a number pad might appear on the Info Display. Enter the code that is shown on the mobile phone. Some mobile phones require access to certain phone features, follow the instructions.

7. Determine whether the mobile phone is to be connected for the phone function and music streaming.

Once the mobile phone is successfully paired, it will be connected automatically and shown as connected.

If the mobile phone is connected for the phone function, \mathcal{C} will be displayed in the list of paired devices.

If the mobile phone is connected for music streaming, rightarrow will be displayed in the list of paired devices.

Disconnecting and connecting a mobile phone

- 1. In the phone menu on the Info Display, select **Bluetooth**.
- 2. To disconnect the currently connected mobile phone, touch the corresponding mobile phone and select **Yes**.

The mobile phone is disconnected.

3. To connect another paired mobile phone, touch the corresponding mobile phone and select **Yes**.

The mobile phone is connected.

Deleting a paired mobile phone

- In the phone menu on the Info Display, select Bluetooth ♥ Manage devices.
- 2. Touch Delete.
- 3. Select the desired mobile phone.
- 4. Touch Yes.

The mobile phone is deleted.

Phone 101

Index

A Audio	P Pairing Phone Phone
B Basic operation	Playing R Radio
C Connecting a phone100 Control elements90	Sound
D Deleting a phone	Speech Steerin Systen T
G General information	Traffic V
H Home screen90	Voice r
l Info Display	
M Main menu90 Making a phone call99	

P
Pairing a phone 100
Phone menu
Phone settings
Playing audio96
R
Radio96
S
Sound settings
Speech recognition
Steering wheel controls
System settings
т
Traffic programme96
V
Voice recognition

www.opel.com

Copyright by Opel Automobile GmbH, Rüsselsheim, Germany.

The information contained in this publication is effective as of the date indicated below. Opel Automobile GmbH reserves the right to make changes to the technical specifications, features and design of the vehicles relative to the information in this publication as well as changes to the publication itself.

Edition: January 2020, Opel Automobile GmbH, Rüsselsheim.

Printed on chlorine-free bleached paper.

ID-OCRFIBSE2001-en

