

OPEL MOKKA

Infotainment System



Wir leben Autos.



Contents

Navi 950 / CD 600	5
CD 400	77

Navi 950 / CD 600

Introduction	6
Basic operation	16
Radio	24
CD Player	30
External devices	32
Navigation	38
Speech recognition	56
Phone	60
Frequently asked questions	69
Index	72

Introduction

General information	6
Theft-deterrent feature	7
Control elements overview	8
Usage	14

General information

The Infotainment system provides you with state-of-the-art in-car infotainment.

The radio can easily be used by registering a large number of FM, AM and DAB (Digital Audio Broadcasting) radio stations with the 1...6 preset buttons.

You can connect external data storage devices, e.g. iPod, USB devices, or other auxiliary devices to the Infotainment system as further audio sources; either via cable or via Bluetooth.

Using the controls and menus of the Infotainment system, you can operate approved smartphone applications.

In addition, the Infotainment system is equipped with a phone application that allows for comfortable and safe use of your mobile phone in the vehicle.

Optionally, the Infotainment system can be operated using the instrument panel controls, the controls on the steering wheel or the speech recognition function.

The well-thought-out design of the control elements and the clear displays enable you to control the system easily and intuitively.

Note

This manual describes all options and features available for the various Infotainment systems. Certain descriptions, including those for display and menu functions, may not apply to your vehicle due to model variant, country specifications, special equipment or accessories.

Important information on operation and traffic safety

Warning

The Infotainment system must be used so that the vehicle can be driven safely at all times. If in

doubt, stop the vehicle and operate the Infotainment system while the vehicle is stationary.

Warning

The usage of the navigation system does not release the driver from the responsibility for a correct, vigilant attitude in road traffic. The related traffic regulations must always be followed.

Only make entries (e.g. addresses) with the vehicle stationary.

If a navigation instruction contradicts traffic regulations, the traffic regulations always apply.

Warning

Areas such as one-way streets and pedestrian zones are not marked on the navigation system map. In such areas, the system

may issue a warning that must be accepted. Therefore, pay particular attention to one-way streets and other roads and entrances that must not be driven into.

Radio reception

Radio reception may be disrupted by static, noise, distortion or loss of reception due to:

- changes in distance from the transmitter,
- multi-path reception due to reflection,
- shadowing.


Theft-deterrent feature




 




The Infotainment system is equipped with an electronic security system for the purpose of theft deterrence.

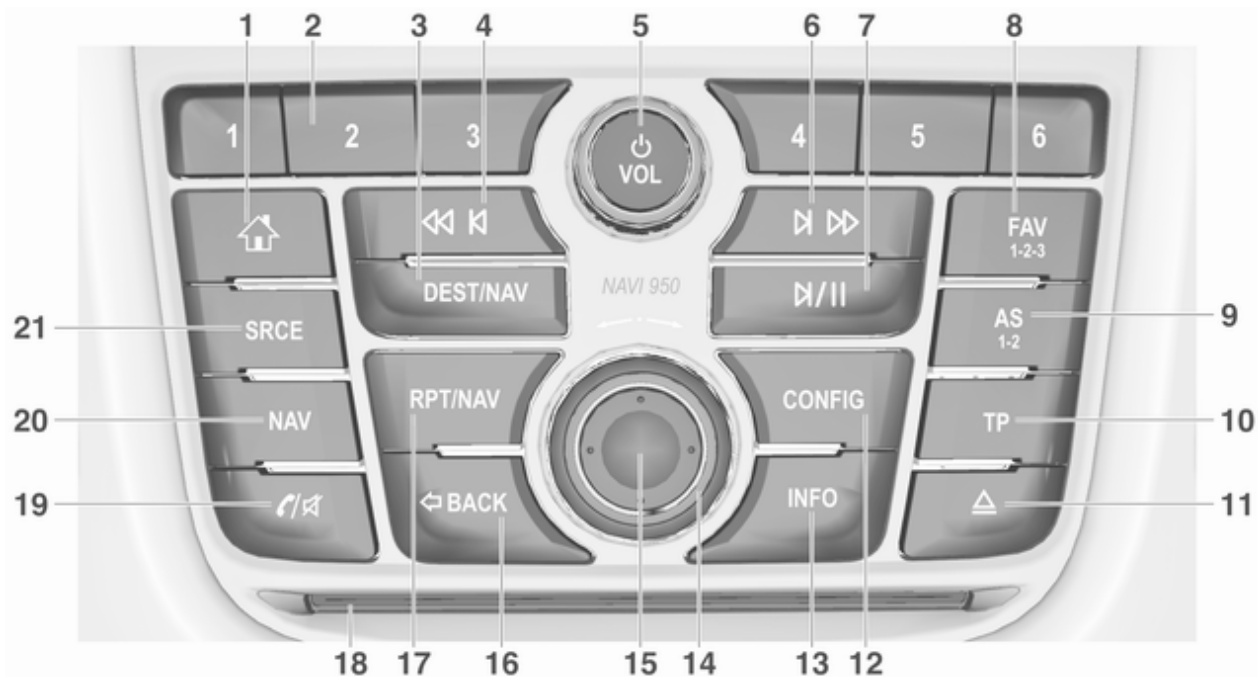
The Infotainment system therefore functions only in your vehicle and is worthless to a thief.

Control elements overview

Navi 950










-
- | | | |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>1  button</p> <p>Access Home Page 16</p> <p>2 Station buttons 1...6</p> <p>Short press: select station 26</p> <p>Long press: save station 26</p> <p>3 DEST / NAV button</p> <p>Open navigation destination menu 43</p> <p>4   button</p> <p>Radio: search backwards 24</p> <p>CD/MP3/WMA: skip track backwards 31</p> <p>External devices: skip track backwards 34</p> <p>5  VOL knob</p> <p>Press: switch on/off Infotainment system 14</p> <p>Turn: adjust volume 14</p> <p>6   button</p> <p>Radio: search forwards 24</p> | <p>CD/MP3/WMA: skip track forwards 31</p> <p>External devices: skip track forwards 34</p> <p>7  button</p> <p>CD/MP3/WMA: start/pause playback 31</p> <p>External devices: start/pause playback 34</p> <p>8 FAV 1-2-3 button</p> <p>Open favourites list 26</p> <p>9 AS 1-2 button</p> <p>Short press: open autostore list 25</p> <p>Long press: save autostore stations automatically 25</p> <p>10 TP button</p> <p>Activate or deactivate radio traffic service 27</p> <p>11  button</p> <p>Eject CD 31</p> | <p>12 CONFIG button</p> <p>Open settings menu 21</p> <p>13 INFO button</p> <p>Radio: information on current station</p> <p>CD/MP3/WMA, external devices: information on current track</p> <p>Navigation: information, e.g. on current location</p> <p>14 Multifunction knob</p> <p>Turn: mark menu options or set alphanumeric values .. 16</p> <p>Press (outer ring): select/activate the marked option; confirm set value; switch function on/off; open audio or navigation menu 16</p> <p>15 Eight-way switch</p> <p>Navigation: move display window in map view 39</p> |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

16 BACK button	FM	24
Menu: one level back	DAB	24
Input: delete last character or entire entry		
17 RPT / NAV button		
Repeat last navigation message		51
18 CD slot		31
19  button		
Take phone call or activate/deactivate mute		63
20 NAV button		
Display map		39
21 SRCE (Source) button		
Press to toggle through the different audio sources		
CD/MP3 player		30
USB		32
AUX		32
Bluetooth		32
AM		24

CD 600




-
- | | | |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>1  button</p> <p>Access Home Page 16</p> <p>2 Station buttons 1...6</p> <p>Long press: save station 26</p> <p>Short press: select station 26</p> <p>3  button</p> <p>Radio: search backwards 24</p> <p>CD/MP3/WMA: skip track backwards 31</p> <p>External devices: skip track backwards 34</p> <p>4  VOL knob</p> <p>Press: switch on/off Infotainment system 14</p> <p>Turn: adjust volume 14</p> <p>5  button</p> <p>Radio: search forwards 24</p> <p>CD/MP3/WMA: skip track forwards 31</p> <p>External devices: skip track forwards 34</p> | <p>6 FAV 1-2-3 button</p> <p>Open favourites list 26</p> <p>7 AS 1-2 button</p> <p>Short press: open autostore list 25</p> <p>Long press: save autostore stations automatically 25</p> <p>8 TP button</p> <p>Activate or deactivate radio traffic service 27</p> <p>9  button</p> <p>Eject CD 31</p> <p>10 CONFIG button</p> <p>Open settings menu 21</p> <p>11 INFO button</p> <p>Radio: information on current station</p> <p>CD/MP3/WMA, external devices: information on current track</p> | <p>12 Multifunction knob</p> <p>Turn: mark menu options or set alphanumeric values .. 16</p> <p>Press: select/activate the marked option; confirm set value; switch function on/off; open audio menu 16</p> <p>13 BACK button</p> <p>Menu: one level back 16</p> <p>Input: delete last character or entire entry 16</p> <p>14 Tone button</p> <p>Open tone settings 19</p> <p>15 CD slot 31</p> <p>16  button</p> <p>Take phone call or activate/deactivate mute 63</p> <p>17  button</p> <p>CD/MP3/WMA: start/pause playback 31</p> <p>External devices: start/pause playback 34</p> |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

18 SRCE (Source) button

Press to toggle through the different audio sources

CD/MP3 player	30
USB	32
AUX	32
Bluetooth	32
AM	24
FM	24
DAB	24

Steering wheel audio controls

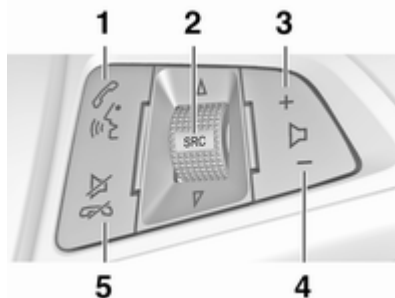

1 button

Short press: take phone call . 63
or dial number in call list 63
or activate speech
recognition 56

Long press: show call list 63
or activate voice pass-thru
(if supported by phone) 56

2 **SRC** (Source) button

Press: select audio source 24

If radio is active: turn up/
down to select next/
previous preset radio
station 24

If CD player is active: turn
up/down to select next/
previous CD/MP3/WMA
track 31

If external device is active:
turn up/down to select
next/previous track 34

If phone is active: turn up/
down to select next/
previous entry in call list 63

If phone is active and calls
waiting: turn up/down to
switch between calls 63

3 + button

Increase volume 14

4 - button

Reduce volume 14

5 button

Short press: end/decline
call 63

or close call list	63
or activate/deactivate mute ...	14
or deactivate speech recognition	56

Usage

Control elements

The Infotainment system is operated via function buttons, a multifunction knob and menus that are shown on the display.


Inputs are made optionally via:

- the central control unit on the instrument panel ⇨ 8
- controls on the steering wheel ⇨ 8
- the speech recognition system ⇨ 56.


Note

Only the most direct ways for menu operation are described in the subsequent chapters. In some cases, there may be other options.


Switching the Infotainment system on or off

Press the  knob briefly. After switching on, the last selected Infotainment source becomes active.

Automatic switch-off

If the Infotainment system is switched on using the  knob while the ignition is switched off, it switches off again automatically after 10 minutes.

Setting the volume

Turn the  knob. The current setting is shown in a pop-up at the bottom of the screen.

When the Infotainment system is switched on, the last selected volume is set, provided that the volume is lower than the maximum start-up volume.


The following volume settings can be set separately:



- the maximum start-up volume ⇨ 20
- the volume of the traffic announcements ⇨ 20
- the volume of the navigation messages ⇨ 39.

Auto volume

When auto volume is activated ↗ 20, the volume is adapted automatically to compensate for the road and wind noise as you drive.

Mute

Press the  button (if Phone portal is available: press for a few seconds) to mute the audio sources.

To cancel mute again: turn the  VOL knob or press the  button again (if Phone portal is available: press for a few seconds).

Volume limitation at high temperatures

At very high temperatures inside the vehicle, the Infotainment system limits the maximum adjustable volume. If necessary, the volume is decreased automatically.

Modes of operation

Audio players

Repeatedly press the **SRCE** button to toggle between the AM, FM, CD, USB, AUX, Bluetooth or DAB main menus.

For detailed descriptions of:

- CD/MP3 player ↗ 30
- USB port ↗ 32
- AUX input ↗ 32
- Bluetooth audio ↗ 32
- AM radio ↗ 24
- FM radio ↗ 24
- DAB radio ↗ 29.


Navigation

Press the **NAV** button to display the map of the navigation application.

Press the multifunction knob to open a submenu with options for the input of destinations and the structuring of a route.

For a detailed description of the navigation functions ↗ 38.

Phone

Press the  button to display the phone main menu with options for the input or selection of numbers.

For a detailed description of the mobile phone functions ↗ 60.

Note

Short information on the audio sources and the current navigation session may be displayed via the **Quick Info** application.

Basic operation

Basic operation	16
Tone settings	19
Volume settings	20
System settings	21

Basic operation

Multifunction knob

The multifunction knob is the central control element for the menus.

Turn the multifunction knob:

- To mark a menu option.
- To set an alphanumeric value.

Press the multifunction knob
(Navi 950: press the outer ring):

- To select or activate the marked option.
- To confirm a set value.
- To switch a system function on/off.
- To open the audio or navigation menu within the respective application.

button

Press the  button to access the **Home Page**.



Using the multifunction knob, you may then access the different applications.

Turn the multifunction knob to select the **More** screen button at the bottom of the screen.



Press the multifunction knob (Navi 950: press the outer ring) to display the second **Home Page** with further applications.

Using the multifunction knob, you may then access the different applications.

Note

Most of the applications or application menus may also be directly accessed via the buttons on the instrument panel.

BACK button

Press the **BACK** button to:

- Exit a menu or screen.
- Return from a submenu to the next higher menu level.
- Delete the last character in a character sequence.

Press and hold the **BACK** button for a few seconds to delete the entire entry.

Examples of menu operation

Selecting a screen element

Turn the multifunction knob to move the cursor (= coloured background) to the desired option.

Press the multifunction knob to select the marked icon, screen button or menu item.

Note

In subsequent chapters the operating steps for selecting and activating a screen button or menu item will be described as "...select the...screen button..." or "...select the...menu item...".

Scrolling lists




If there are more menu items available in a list than presentable on the screen, a scroll bar is displayed.

Turn the multifunction button clockwise to scroll downwards and anticlockwise to scroll upwards.

Note

In subsequent chapters the operating steps for scrolling a list will be described as "...scroll to...menu item...".

Adjusting a setting

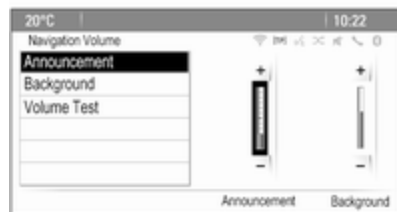

Turn the multifunction knob to change the current value of the setting.

Press the multifunction knob to confirm the set value.

Note

In subsequent chapters the operating steps for adjusting a setting will be described as "...adjust the...setting...".

Activating a menu item

Turn the multifunction knob to move the cursor (= coloured background) to the desired option.

Press the multifunction knob to activate the menu item. A checkmark or a point appear within the box or ring beside the respective menu item.



Note

In subsequent chapters the operating steps for activating a menu item will be described as "...activate the...menu item...".

Entering a character sequence

Turn the multifunction knob to select the desired character.

Press the multifunction knob to enter the respective character in the entry field at the top of the screen.

The last character in the character sequence can be deleted using the **Del** screen button or the **BACK** button. Pressing and holding the **BACK** button deletes the entire entry.

Press the multifunction knob to confirm the selected character.

Note

In subsequent chapters the operating steps for entering characters will be described as "...enter the desired characters...".


Messages


Before a system function is executed, you are sometimes prompted with a message. If requested, select one of the options.



The selection and activation of a screen button in a message function are the same as described for selecting an option in a menu.

Tone settings

Press the  button and then select the **More** screen button at the bottom of the screen. On the second **Home Page**, select the **Tone** icon. The tone settings menu is displayed.

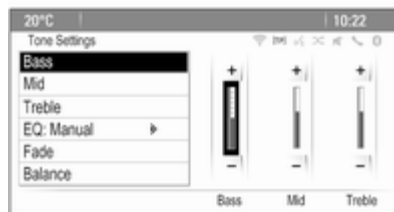

Bass

Use this setting to enhance or attenuate the deep frequencies of the audio sources.

Adjust the setting as desired.

Mid

Use this setting to enhance or attenuate the midrange frequencies of the audio source.

Adjust the setting as desired.

Treble

Use this setting to enhance or attenuate the high frequencies of the audio sources.

Adjust the setting as desired.

EQ mode

(EQ: Equaliser)

Use this setting to optimise the tone for a specific style of music, e.g.

Rock or **Classical**.

Select the **EQ** menu item. A submenu with predefined sound styles is displayed.

Select the desired sound style.

If one of the predefined sound styles is selected, **Bass**, **Mid** and **Treble** are preadjusted by the system.

If you manually adjust one of the settings described above, **EQ** is set to **Manual**.

Fade and Balance

When **Fade** or **Balance** are selected, an illustration is displayed on the right side of the screen.



To adjust the volume distribution between the front and rear speakers in the vehicle, select the **Fade** menu item. Adjust the setting as desired.

To adjust the volume distribution between the left and right speakers in the vehicle, select the **Balance** menu item. Adjust the setting as desired.

Volume settings

Adjusting the Audio Cue Volume

When the system is turned on or off, music sounds are played.

Press the **CONFIG** button and then select the **Radio Settings** menu item. Select the **Audio Cue Options** menu item.

Select or deselect **Audio Cues** to activate or deactivate startup and shutdown sounds.

Select **Audio Cue Volume** to display the respective submenu. Adjust the setting as desired.

Adjusting the Auto Volume

Press the **CONFIG** button and then select the **Radio Settings** option.

Select **Auto Volume** to display the respective menu.

To adjust the degree of volume adaptation, set **Auto Volume** to **Off**, **Low**, **Medium** or **High**.

Off: no enhancement of volume with increasing vehicle speed.

High: maximum enhancement of volume with increasing vehicle speed.

Adjusting the Startup Volume

Press the **CONFIG** button and then select the **Radio Settings** menu item.

Select **Startup Volume** to display the respective menu.

Adjust the setting as desired.

Adjusting the volume of traffic announcements

The volume of traffic announcements can be preset to a level independent of the "normal" volume level.

Press the **CONFIG** button and then select the **Radio Settings** menu item.

Select **RDS Options** and then **Traffic Volume** to display the respective menu.

Adjust the setting as desired.

Note

While an announcement is given out, the volume may simply be adjusted using the \odot knob.

Adjusting the Chime Volume

When operating the controls in the vehicle, beeping sounds confirm your actions. The volume of the beeping sounds may be adjusted.

Press the **CONFIG** button and then select the **Vehicle Settings** menu item.

Select **Comfort and Convenience** and then **Chime Volume** to display the respective submenu. Select **Normal** or **High**.

Adjusting the Navigation Volume

Press the **CONFIG** button and then select the **Navigation Settings** menu item.

Select the **Navigation Volume** menu item. The respective submenu is displayed.

To adjust the volume of the announcements, select **Announcement** and then adjust the setting as desired.

To adjust the volume of the audio source possibly playing in the background, select **Background** and then adjust the setting as desired.

Select **Volume Test** to get an audio example of the settings.

Note

While an announcement is given out, the volume may simply be adjusted using the \odot knob.

System settings

Various Infotainment system settings may be adjusted via the **Config** application.




Language settings

Press the **CONFIG** button and then select the **Languages** menu item. A list of all languages available is displayed.

Select the desired language.

Time and date settings

Press the **CONFIG** button and then select the **Time and Date** menu item to display the respective submenu.

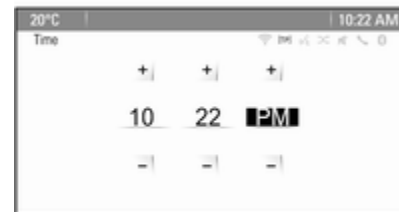

Note

If **RDS Auto Time Adjust** is activated \Rightarrow 27, time and date are automatically set by the system.

Set time

To adjust the time settings, select the **Set Time** menu item. Adjust the settings as desired.

Set date

To adjust the date settings, select the **Set Date** menu item. Adjust the settings as desired.

Time format

To choose the desired time format, select the **12 hr / 24 hr Format** menu item. A submenu is displayed. Activate **12 Hour** or **24 Hour**.

Software information

Press the **CONFIG** button and then select the **Radio Settings** menu item.

Scroll through the list and select **Software Versions Menu** to display the respective submenu.

Software version information

To display a list of all software versions installed, select **Software Version Information**.

By default, all versions are activated.

Software update

To update your system software, contact your Opel Service Partner.

Log file

To generate a log file of your current software version, select the **Create Log File** menu item.

Licensing information

To display information on the manufacturer of the Infotainment system, select **Licensing Information**.

Factory defaults

To reset all Infotainment settings to their factory defaults, select **Clear and Reset Radio**.

Display settings

Press the **CONFIG** button and then select the **Display Settings** menu item to display the respective submenu.

Home Page

Select **Home Page Menu** to display the home page settings menu.

To access the menu from the **Home Page**, select the **Menu** screen button at the bottom of the screen.

The **Home Page** may be adjusted according to your personal preferences.

Customise

The application icons displayed on the first home page may be chosen as desired.

Select the **Customise** menu item to display a list of all applications installed in the system. Activate the menu items of those applications you wish to be displayed on the first home page.

The other applications are then arranged on the following pages.

Sort

Up to eight application icons may be arranged on each home page.

The positions of the icons can be changed as desired.

Select the **Sort** menu item to display the home pages in edit mode.

Select the icon you wish to move.

Scroll to the position on the home page where you wish the icon to be located. Press the multifunction knob to confirm.

The icon is moved to the new location. The icon that was located in that position before is now displayed in the position of the moved icon.

Home page defaults

To reset the **Home Page** to its factory defaults, select **Restore Home Page Defaults**.

Display Off

To turn the display off, select **Display Off**.

To turn the display back on, press any button on the instrument panel (except the **VOL** knob).

Radio

Usage	24
Station search	24
Autostore lists	25
Favourite lists	26
Radio data system (RDS)	27
Digital audio broadcasting	29

Usage

Activating radio

Press the  button and then select the **AM**, **FM** or **DAB** icon.

The station last selected is played.

Note

When an audio source is already active, you may toggle between the different audio sources by repeatedly pressing the **SRCE** button.

Station search

Automatic station search

Briefly press the **◀◀** or **▶▶** buttons to play the next station in the station memory.

Manual station search

Press and hold the **◀◀** or **▶▶** buttons. Release the button when the required frequency has almost been reached on the frequency display.

Manual station tuning

In the FM and DAB waveband, press the multifunction knob to open the respective menu and then select **Manual tuning**. The frequency currently active is displayed at the bottom of the screen.

Turn the multifunction knob to reach the desired frequency.

In the AM waveband, turn the multifunction knob to adjust the frequency.

Station lists

In the FM and DAB waveband, turn the multifunction knob to display the station list.


In the AM waveband, press the multifunction knob to display the respective waveband menu.

Select **AM Station List**.

A list of all receivable stations of the relevant waveband and in the current reception area is displayed.


Note

If no station list has been created beforehand, the Infotainment system performs an automatic station search.

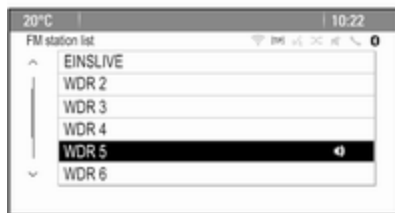



Select the desired station.

Note

The currently received station is marked by .

Category list

Numerous RDS  27 and DAB  29 stations broadcast a PTY code, which specifies the type of programme transmitted (e.g. news).

Some stations also change the PTY code depending on the content which is currently transmitted.

The Infotainment system stores these stations in the corresponding category list sorted by programme type.

Note

The category list submenu item is only available for the FM and the DAB wavebands.


To search for a programme type determined by the stations, select the waveband specific category list option.

A list of programme types currently available is displayed.

Select the desired programme type. A list of stations is displayed transmitting a programme of the selected type.

Select the desired station.

Note

The currently received station is marked by .

Updating the station lists

If the stations stored in the waveband-specific station list can no longer be received, the AM and the DAB station lists must be updated.

Note

The FM station list is updated automatically.

Select the corresponding list item in the waveband-specific menu to update a station list.

A station search is started. Once the search is finished, the station previously selected is played.

To cancel the station search, press the multifunction knob.

Note

If a waveband specific station list is updated the corresponding category list (if available) is also updated.

Autostore lists

The stations best received in a waveband can be stored in and selected from the autostore lists.



Each waveband has 2 autostore lists (**AS 1**, **AS 2**), in each of which 6 stations can be stored.

Note

The currently received station is highlighted.

Automatic station storing

Keep the **AS** button pressed until an autostore message is displayed. The 12 strongest stations in the current waveband are stored in the two autostore lists.

To cancel the autostore procedure, select the **Cancel** screen button.

Storing stations manually

Stations can also be stored manually in the autostore lists.

Set the station to be stored.

Press the **AS** button to open the autostore list or to switch to another autostore list.

To store the station in a list position: press the corresponding station button 1...6 until a confirmation message is displayed.

Note

Manually stored stations are overwritten in an automatic station storing process.

Retrieving a station

If required, press the **AS** button to open an autostore list or to switch to another autostore list.

Press one of the station buttons 1...6 to activate the station at the corresponding list position.

Favourite lists

Stations of all wavebands can be stored manually in the favourite lists.



6 stations can be stored in each favourite list. The number of available favourite lists can be set (see below).

Note

The currently received station is highlighted.

Storing a station

Set the station to be stored.

Briefly press the **FAV** button to open a favourite list or to switch to another favourite list.

To store the station in a list position: press the corresponding station button 1...6 until a confirmation message is displayed.

Retrieving a station

If required, briefly press the **FAV** button to open a favourite list or to switch to another favourite list. Press one of the station buttons 1...6 to activate the station stored in the respective location.

Defining the number of favourite lists

Press the **CONFIG** button and then select the **Radio Settings** menu item. Select **Number of Favourite Pages** to display the respective submenu.

Select the number of favourite pages you wish to be displayed.

Radio data system (RDS)

RDS is a service of FM stations that considerably facilitates the finding of the desired station and its fault-free reception.

Advantages of RDS

- On the display the programme name of the set station appears instead of its frequency.
- During station search the Infotainment system tunes in to RDS stations only.
- The Infotainment system always tunes in to the best receivable broadcasting frequency of the set station by means of AF (Alternative Frequency).
- Depending on the station that is received the Infotainment system displays radio text that can contain, for example, information on the current programme.

RDS Options menu

To open the menu for the RDS configuration, press the **CONFIG** button and then select the **Radio Settings** menu item.

Select **RDS Options** to display the respective submenu.



Activating the RDS function

Activate the **RDS** menu item.

Note

If **RDS** is deactivated, not all menu items of the **RDS Options** menu are displayed.

Regional

RDS stations sometimes broadcast regionally different programmes on different frequencies.

If **Regional** is activated, only alternative frequencies (AF) with the same regional programmes are selected.

If **Regional** is deactivated, alternative frequencies of the stations are selected without regard to regional programmes.

Text Scroll Freeze

Some RDS stations do not only show the programme service name on the display, but also additional information on the current programme. If additional information is displayed, the programme name is hidden.

To prevent additional information from being displayed, activate the **Text Scroll Freeze** menu item.

Radio Text

If RDS and the reception of an RDS station are activated, information on the radio programme currently active or the music track currently playing are displayed below the programme name.

To show or hide the information, activate or deactivate the **Radio Text** menu item.

Radio traffic service

(TP = Traffic Programme)

Radio traffic service stations are RDS stations that broadcast traffic news.

If the radio traffic service is switched on, radio or media playback is interrupted for the duration of the traffic announcement.

Switching the radio traffic service on and off

To switch the traffic announcement standby facility of the Infotainment system on and off, press the **TP** button.

- If the radio traffic service is switched on, [] is indicated on the display.
- If the current station is not a radio traffic service station, a search is started automatically for the next radio traffic service station.
- If a radio traffic service station has been found, [TP] is indicated on the display.

Traffic Volume

To adjust the volume of traffic announcements, select the **Traffic Volume** menu item. The respective submenu is displayed. Adjust the setting as desired.

Listening to traffic announcements only

Switch on the radio traffic service and completely turn down the volume of the Infotainment system.

Blocking out traffic announcements

To block out a traffic announcement, e.g. during CD/MP3 playback:

Press the **TP** button or select the **Cancel** screen button in the TP message.

The traffic announcement is cancelled, but the radio traffic service remains switched on.

Auto Time Adjust

The system constantly receives information on the current time and date.

If you wish the time and date settings to be updated automatically, activate the **RDS Auto Time Adjust** menu item.

If you wish to set time and date manually, deactivate the **RDS Auto Time Adjust** menu item.

Digital audio broadcasting

Digital audio broadcasting (DAB) is an innovative and universal broadcast system.

General information

- DAB stations are indicated by the programme name instead of the broadcasting frequency.
- With DAB, several radio programmes (services) can be broadcasted on a single frequency (ensemble).
- Besides high-quality digital audio services, DAB is also able to transmit programme-associated data and a multitude of other data services including travel and traffic information.

- As long as a given DAB receiver can pick up the signal sent out by a broadcasting station (even if the signal is very weak), sound reproduction is ensured.
- There is no fading (weakening of the sound) that is typical of AM or FM reception. The DAB signal is reproduced at a constant volume.
- Interference caused by stations that are on nearby frequencies (a phenomenon that is typical of AM and FM reception) does not occur with DAB.

If the DAB signal is too weak to be picked up by the receiver, the system switches over to the same programme on another DAB or FM station.

- If the DAB signal is reflected by natural obstacles or buildings, the reception quality of DAB is improved, whereas AM or FM reception is considerably impaired in such cases.
- When DAB reception is enabled, the FM tuner of the Infotainment system remains active in the

background and continually searches for the best receivable FM stations. If TP ⇨ 27 is activated, traffic announcements of the FM station which is currently best received are issued. Deactivate TP, if DAB reception should not be interrupted by FM traffic announcements.

DAB announcements

Besides their music programmes, lots of DAB stations also broadcast announcements of various categories.

While being in the DAB main menu, press the multifunction knob to open the **DAB menu** and then select **Announcements**.

If you activate some or all categories, the currently received DAB service is interrupted when an announcement of these categories is made.

Activate the desired categories.

CD Player

General information	30
Usage	31

General information

Important information about audio CDs and MP3/WMA CDs

The Infotainment system's CD player can play audio CDs and MP3/WMA CDs.

Caution

Under no circumstances place DVDs, single-CDs with a diameter of 8 cm or shaped CDs in the audio player.

You must not put any stickers on CDs. These discs can get jammed in the CD drive and ruin the drive. An expensive replacement of the device will then be necessary.

File formats

Audio CDs

The following CD formats can be used: CD-ROM Mode 1 and Mode 2; CD-ROM XA Mode 2, Form 1 and Form 2.

MP3 CDs

The following file formats can be used: ISO9660 Level 1, Level 2, (Romeo, Joliet).

MP3 and WMA files written in any format other than listed above may not play correctly, and their file names and folder names may not be displayed correctly.

The following restrictions apply for the data stored on an MP3/WMA CD:

Number of tracks: max. 999.

Number of folders: max. 255.

Folder structure depth:
max. 64 levels (recommended:
max. 8 levels).

Number of playlists: max. 15.

Number of songs per playlist:
max. 255.


Applicable playlist
extensions: .m3u, .pls, .asx, .wpl.

Usage

Starting CD playback

Push the CD with the labelled side facing upwards into the CD slot until it is pulled in.

CD playback starts automatically and the **CD** or **MP3 CD** main menu is displayed.

If there is already a CD inserted, but the **CD** or **MP3 CD** main menu is not active, press the  button and then select the **CD** icon.

The **CD** or **MP3 CD** main menu is displayed and CD playback is started.



Depending on the data stored on the audio **CD** or **MP3 CD**, more or less detailed information on the CD and the current music track are shown on the display.

Note

When an audio source is already active, you may toggle between the different audio sources by repeatedly pressing the **SRCE** button.

Removing a CD

Press the  button.


The CD is pushed out of the CD slot.

If the CD is not removed after ejection, it will be drawn back in again automatically after a few seconds.

Track List

Turn the multifunction knob to display a list of all tracks on the CD.



Note

The currently playing track is marked by .



Select the desired track.

Function buttons


Skipping to previous or next track

Press the  or  buttons once or several times to skip to the previous or next track.

Fast forwarding or rewinding

Press and hold the  or  buttons to fast forward or rewind the current track.


Pausing playback

Press the  button to pause playback.

Audio menu

Press the multifunction knob to display the CD or MP3 menu.

Note

Find a description of the functions in the MP3 menu  34.

Shuffle function

To play the tracks on the CD in random order, activate the **Shuffle** menu item.

To return to the normal playing order, deactivate the **Shuffle** menu item.

External devices

General information	32
Playing audio	34
Displaying pictures	35
Using apps	36

General information

Sockets for the connection of external devices are located in the centre console hidden behind a cover.

Note

The sockets must always be kept clean and dry.

AUX input

It is possible to connect e.g. an iPod, Smartphone or another auxiliary device to the AUX input. The Infotainment system can play music files contained in auxiliary devices.

When connected to the AUX input, the audio signal of the auxiliary device is transmitted via the speakers of the Infotainment system.

The volume can be adjusted via the Infotainment system. All other control functions must be operated via the auxiliary device.

Connecting a device

To connect the auxiliary device to the AUX input socket of the Infotainment system, use the following cable:

3-pole for audio source.

To disconnect the AUX device, select another function and then remove the AUX device.

USB port

An MP3 player, USB device, iPod or Smartphone can be connected to the USB port. The Infotainment system can play music files or display pictures contained in auxiliary devices.

When connected to the USB port, the devices mentioned above can be operated via the controls and menus of the Infotainment system.

Note

Not all MP3 player, USB drive, iPod models or Smartphones are supported by the Infotainment system.

Connecting/disconnecting a device

Connect the device to the USB port. For the iPod, use the appropriate connection cable.

Note

If a non-readable USB device or iPod is connected, a corresponding error message will appear and the

Infotainment system will automatically switch to the previous function.

To disconnect the USB device or iPod, select another function and then remove the USB storage device.

Caution

Avoid disconnecting the device during playback. This may damage the device or the Infotainment system.

Bluetooth

Bluetooth enabled audio sources (e.g. music mobile phones, MP3 players featuring Bluetooth, etc.), which support the Bluetooth music profiles A2DP and AVRCP can be connected wirelessly to the Infotainment system.

The Infotainment system can play music files contained in Bluetooth devices, e.g. iPod or Smartphone.

Connecting a device

For a detailed description of the Bluetooth connection ↗ 61.

File formats

Audio files

Only devices formatted in the FAT32, NTFS and HFS+ file systems are supported.

Note

Some files may not be played properly. This might be due to a different recording format or the condition of the file.

Files from online shops to which Digital Rights Management (DRM) has been applied cannot be played.

The playable audio file formats are .mp3, .wma, .aac and .m4a.

When playing a file with ID3 tag information, the Infotainment system can display information, e.g. on the track title and artist.

Picture files

The displayable picture file formats are .jpg, .jpeg, .bmp, .png and .gif.

The files must have a maximum size of 2048 pixels in width and 2048 pixels in height (4MP).

Gracenote

The Gracenote database contains information on media data currently available on the market.

When connecting external devices, the tracks or files are recognised by the Gracenote function.

If the Gracenote normalisation function is activated, spelling mistakes in MP3 tag data are automatically corrected. Due to this, media search results may be improved.

Press the **CONFIG** button and then select the **Radio Settings** menu item.

Select **Gracenote Options** to display the respective submenu.

Activate the Gracenote normalisation function.


Playing audio

Starting playback

If not connected, connect the device
➔ 32.

Press the  button and then select the **USB**, **AUX** or **Bluetooth** icon.

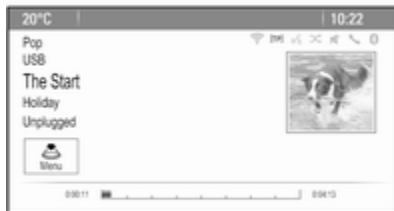

Example: USB main menu





Function buttons

The media files on the USB and Bluetooth devices may be operated using the buttons on the instrument panel.


Skipping to previous or next track

Press the  or  buttons once or several times to skip to the previous or next track.

Fast forwarding or rewinding

Press and hold the  or  buttons to fast forward or rewind the current track.

Pausing playback

Press the  button to pause playback.

Audio menus

To display the respective audio menu, press the multifunction knob.

Note

Not all menu items are available in all audio menus.



Shuffle function

Press the multifunction knob to display the USB or Bluetooth menu.

To play the tracks on the respective device in random order, activate the **Shuffle** menu item.

To return to the normal playing order, deactivate the **Shuffle** menu item.

Browsing

(only available in USB menus)

To search for a track within the structure, select one of the menu items, e.g. **Folders**, **Play Lists** or **Albums**.

Browse through the structure until you find the desired track.

Select the track to start playback.

Individual playlists

The system allows new playlists to be created via the Gracenote function. Similar tracks are put together on a list automatically generated by the system.

Select the track around which you wish to create a new playlist.


Select the **Play More Like This...** menu item in the respective audio menu. A new playlist is created and stored in the **Play Lists** menu.

To delete a playlist generated by the system, select the **Delete Automatic Playlist** menu item. A list of all generated playlists is displayed. Select the playlist you wish to delete. The playlist is deleted.

Displaying pictures

Viewing pictures

Connect a USB device ⇨ 32.

Press the  button and then select the **Pictures** icon to open the **Picture Viewer USB** menu.

A list of all pictures and picture folders found on the USB device is displayed.

Browse through the pictures and folders until you find the desired picture and select it. The picture is displayed.



Function buttons

Info button

Select the **Info** screen button at the bottom of the screen to display information on the picture stored on

the USB device, e.g. a name or number. The respective information is displayed above the picture.

Skipping to the previous or next picture

Select the < or > screen buttons at the bottom of the screen to display the previous or next picture.


Slide show

To start a slideshow of all pictures stored in the respective picture folder, select the ► screen button at the bottom of the screen. The slideshow is started.

When the slideshow is started, the ► screen button changes to ||.

Select the || screen button to pause the slideshow.

Rotating the picture

Select the  screen button at the bottom of the screen to rotate the picture.

Picture menu

To display the picture menu, select the **Menu** screen button at the bottom of the screen.

Picture Viewer Main

Select the **Picture Viewer Main** menu item to display a list of all picture folders, see above.

Slideshow Timer

To adjust the time sequence in which one picture is shown during a slide show, select the **Slideshow Timer** menu item. The respective submenu is displayed. Select the desired option.

Shuffle Images

To display the pictures of a slide show in random order, activate the **Shuffle Images** screen button.

Using apps

The Infotainment system supports the operation of apps via the controls on the Infotainment system.

Before an application can be operated using the controls and menus of the Infotainment system, the respective application has to be installed via a smartphone.

Activating the Tethering function on the smartphone


Activate the Tethering and the Bluetooth functions on the smartphone (see user guide of the smartphone).

Note

Tethering has to be set up correctly depending on the network provider.

Connect the smartphone to the Infotainment system via Bluetooth
⇄ 61.

Creating a new account

Press the  button and then select the **Apps** icon to display a welcome screen.

To setup a new account, select the respective screen button at the bottom of the screen. You are led through various setup screens.

First, a list of all phones paired to the system is displayed. Select the phone with which you want to establish an Internet connection to the app store.

Then a keyboard for the entry of an email address is displayed. Enter your email address.


In the menu displayed afterwards, a PIN code needs to be set. Select the New PIN entry field. A keyboard is displayed. Select the desired digits. To confirm the PIN code, select the Confirm New PIN entry field. The keyboard is redisplayed. Enter the PIN code again. Confirm your input.

A menu for country selection is displayed. Scroll through the list and select the desired country.

Last, the privacy policy of the app store is displayed. Select the **Agree** screen button to create the account.

The apps main menu is displayed.

Installing new apps

Press the  button and then select the **Apps** icon to display the apps main menu.

Select the **Apps** screen button at the bottom of the screen to display the apps menu.

All

To display a list of all apps available, select the **All** screen button at the bottom of the screen.

Scroll through the list and select the desired app. A submenu with detailed information on the respective app is displayed.


To install the app on the Infotainment system, select the **Install** screen button at the bottom of the screen. The app is installed.

When the installation process is finished, the **Install** screen button changes to **Launch**.

Note

Apps installed on the Infotainment system are displayed as icons on the home pages.



To search for a specific app, select the  screen button. A keyboard is displayed.

Enter the search name. A list of all apps found for the respective search name is displayed.

Select the desired app. A submenu with detailed information on the respective app is displayed.


To install the app on the Infotainment system, select the **Install** screen button at the bottom of the screen. The app is installed.

When the installation process is finished, the **Install** screen button changes to **Launch**.

Note

Apps installed on the Infotainment system are displayed as icons on the home pages.

My Apps

Press the  button and then select the **Apps** icon to display the apps main menu.


Select the **Apps** screen button at the bottom of the screen to display the apps menu.

To display a list of all apps installed on the Infotainment system, select the **My Apps** screen button at the bottom of the screen.

Select the desired options for e.g. starting or deleting an app.

Settings

The settings menu provides options for the management of the accounts.

Press the  button and then select the **Apps** icon to display the apps main menu.

Select the **Settings** screen button at the bottom of the screen to display the respective submenu.

Select the desired option.

Navigation

General information	38
Usage	39
Destination input	43
Guidance	51

General information

The navigation application will reliably guide you to your destination without the need to read maps.

The current traffic situation is taken into account in the route calculation. For this reason, the Infotainment system receives traffic announcements in the current reception area via RDS-TMC.

The navigation application cannot, however, take into account traffic incidents, traffic regulations changed at short notice and hazards or problems that arise suddenly (e.g. road works).

Caution

The usage of the navigation system does not release the driver from the responsibility for a correct, vigilant attitude in road traffic. The relevant traffic regulations must always be

followed. If a navigation instruction contradicts traffic regulations, the traffic regulations always apply.

Functioning of the navigation application

The position and movement of the vehicle are detected by the navigation application using sensors. The travelled distance is determined by the vehicle's speedometer signal and turning movements on bends by a gyro sensor. The position is determined by the GPS satellites (Global Positioning System).

By comparing the sensor signals with the digital maps, it is possible to determine the position with an accuracy of approx. 10 metres.

The system will also work with poor GPS reception, however, the accuracy of the determination of the position will be reduced.

After the entry of the destination address or point of interest (nearest petrol station, hotel, etc.) the route is calculated from the current location to the destination selected.

Route guidance is provided by voice commands and a direction arrow, as well as with the aid of a multi-colour map display.

Usage

Information on the map display

To display the map around the current location, you may optionally:

- Press the **NAV** button.
- Press the  button and then select the **Navigation** icon.

Route guidance not active



If route guidance is not active, the following information is displayed:

- In the top line: information on the audio source currently active and the time.
- Below the top line: **GPS** symbol.
- In the upper left corner: a compass that indicates the north direction.
- Map display of the area around the current position.
- Current position: indicated by a red triangle within a grey circle.
- Points of interest (POI), e.g. petrol stations, parking areas or restaurants: indicated by corresponding symbols (if activated).
- In the bottom line: street name of the current position.

Route guidance active



If route guidance is active, the following information is displayed:

- In the top line: information on the audio source currently active and the time.
- Below the top line: **GPS** symbol.
- Below the top line: name of the street to follow after the next intersection.
- In the upper left corner: a compass symbol that indicates the north direction.
- Map display of the area around the current position.

- Current position: indicated by a red triangle within a grey circle.
- Route: indicated by a blue line.
- Final destination: indicated by a black chequered flag.
- Waypoint (intermediate destination): indicated by a red diamond.
- Points of interest (POI), e.g. petrol stations, parking areas, or restaurants: indicated by corresponding symbols (if activated).
- Traffic incidents, e.g. traffic jam: indicated by corresponding symbols (if activated).
- On the left side: direction arrow and distance to the next manoeuvre.
- On the left side: remaining distance to the final destination or to the next waypoint.
- On the left side: estimated arrival time or remaining travel time.
- In the bottom line: street name of the current position.

Map manipulation

Moving the visible map section

The visible map section on the map display can be moved freely in all directions using the Eight-way switch.

The Eight-way switch in the middle of the multifunction knob may be tilted in all directions.

Tilt the switch to one side. The visible map section moves in the respective direction.

To redisplay the map around the current location, press the **BACK** button.

Changing the map scale

When the map is displayed, turn the multifunction knob to display a scale bar at the bottom of the screen.

Turn the multifunction knob again to adjust the scale as desired.

Changing the map mode

The map may be displayed in three (route guidance not active), respectively five (route guidance active) different modes, see "Map setup" below.

Repeatedly press the **NAV** button to toggle between the different map modes.

Map setup

Heading indicator

Press the multifunction knob to display the **Navigation Menu**. Select the **Heading Indicator** menu item to display the respective submenu.

The following options are available:

- **2D North Up:** 2D view, north facing upwards.
- **2D Heading Up:** 2D view, driving direction facing upwards.
- **3D Heading Up:** 3D view, driving direction facing upwards.

Select the desired option.

Map modes

Press the multifunction knob to display the **Navigation Menu**. Select the **Map Modes** menu item to display the respective submenu.

The following options are available:

- **Full Map** ("Normal" view described above): Full screen map view, all function and indication screen buttons displayed.
- **Full Glory**: Full screen map view, most functions and indication screen buttons hidden.
- **Split with Turn List**: Divided screen with map on the left and turn list on the right side.
- **Split with Turn Arrow**: Divided screen with map on the left side and turn arrow for the next turning manoeuvre on the right side.
- **Split with Media**: Divided screen with map on the left side and audio source currently active on the right side.

Select the desired option.

Map display

Press the multifunction knob to display the **Navigation Menu**. Select the **Map Settings** menu item and then **Map Display** to display the respective submenu.

Depending on the external lighting conditions, activate the **Day** or **Night** menu item.

For an automatic adaption by the system, activate **Automatic**.

Displaying POIs

Press the multifunction knob to display the **Navigation Menu**.

Select the **Show POIs** menu item to display the respective submenu.

If you wish all POIs available in the system to be displayed on the map, activate **Show all POIs**.

If you do not wish POIs to be displayed on the map, activate **Hide all POIs**.

To only display specific POIs, activate the **User Defined** menu item and then activate the POI categories you wish to be displayed.

Changing screen information

The route information displayed on the screen during active route guidance may be customised.

Press the multifunction knob to display the **Navigation Menu**. Scroll through the list and select the **Switch Route Time/Destination** menu item.

Time information

If you wish to change the time information displayed, select **Switch Arrival/Travel Time** to display the respective submenu.

Activate the information setting you wish to be displayed.

Destination information

If you are in a waypoint trip, you may want to display the route information for a waypoint instead of those for the final destination.

To change the setting, select **Switch Waypoint/Destination**. A list of all destinations in the waypoint trip currently active is displayed.

Activate the information setting you wish to be displayed.

Position information

Current position

Press the multifunction knob to display the **Navigation Menu**. Select the **Current Position Info** menu item.

On the right side of the screen, the current position is displayed on the map. On the left side, the GPS coordinates of the current position are shown.

Destination position

If route guidance is active, you may display information on the destination entered.

Press the multifunction knob to display the **Navigation Menu**. Select the **Destination Position Info** menu item.

On the right side of the screen, the destination is displayed on the map. On the left side, the address and the GPS coordinates of the destination are shown.

Saving a position

The current position or a destination position may be saved in the address book.

Select the **Save** screen button. Find a detailed description on saving addresses in the address book ⇨ 43.

Route simulation

The Infotainment system features a route simulation mode for test purposes.

To start the simulation mode, press the **CONFIG** button and then select the **Navigation Settings** menu item.

Scroll through the list and select **Route Simulation** to display the respective submenu.

Starting position

Since the simulation mode does not draw on the GPS signal providing the current position of the vehicle, a start position must be set manually.

Use Last Known Position

To set the last position provided by a GPS signal as starting point, select the **Use Last Known Position** menu item.

Use Previous Destination

To use one of the last destinations entered as starting point, select the **Use Previous Destination** menu item. The previous destinations list is displayed.

Select the desired address.

Use Specified Location

To use a specific location as starting point, select the **Use Specified Location** menu item.

Enter an address. Find a detailed description ⇨ 43.

Simulation mode is started.

Cancelling simulation mode

To leave the simulation mode, press the **CONFIG** button and then select the **Navigation Settings** menu item.

Scroll through the list and select **Route Simulation** to display the respective submenu.

Select the **Cancel Route Simulation** menu item.

Additional route simulation menu

When route guidance is active in the simulation mode, an additional menu is displayed in the **Navigation Menu**.

Press the multifunction knob to display the **Navigation Menu**. Scroll through the list and select the **Route Simulation** menu item to display the respective submenu.

To stop the simulated route guidance, select the **Stop Simulation** menu item. The guidance process is stopped, the route guidance mode remains active.

To display the next simulated turning manoeuvre on the map, select the **Next Manoeuvre** menu item.

Destination input

The **Destination** application provides different options to set a destination for route guidance.

Press the **DEST / NAV** button (when route guidance is not active) to display the **Destination Entry** menu.



Manual address entry

Address Entry menu

Press the **DEST / NAV** button to display the **Destination Entry** menu and then select the **Address Entry** icon to display a mask for address entry.



Select the Country entry field. A list is displayed. Select the desired country.

Select the City/Postal entry field to display a keyboard. Enter the desired city name or postal code (see below).

Select the Street entry field to redisplay the keyboard. Enter the desired street name (see below).

You may then enter a house number or junction.

Select the House number or Junction entry field. The keyboard is redisplayed. Enter the desired number or street name (see below).

Note

If a house number is not stored in the system database, the house number closest to the destination entered is used for route calculation.

If required, confirm your input.

A confirmation menu is displayed. Select the **Start Guidance** menu item to start route guidance.

Keyboard

Depending on the function selected, the keyboards may be displayed differently.



To change the letter arrangement on the letter keyboard, select the **ABC** screen button on the left side of the keyboard. The letters are now arranged in alphabetical order.

To enter a character sequence, successively select the desired characters.

Note

When entering an address, the keyboard uses an intelligent spelling function which automatically blocks out characters that cannot occur next in the respective character sequence.

To enter special characters not available on the letter keyboard, select the **ÄÖ** screen button at the right side of the letter keyboard. The special characters keyboard is displayed. Select the desired character.

To enter numbers or symbols, select the **Sym** screen button at the right side of the special characters keyboard. The symbols keyboard is displayed. Select the desired character.

To redisplay the letter keyboard, select the **ABC** screen button at the right side of the symbol keyboard. This way you may toggle between the three keyboards.

To delete characters already entered, select the **Delete** screen button at the right side of the respective keyboard or press the **BACK** button.

When entering an address, a list of matching entries is automatically displayed as soon as the number of matching entries found in the address memory is equal to or less than six.

To manually display a list of matching entries for the current input, select the respective **List** screen button at the bottom of the keyboard.

To display the last five entries made, select the **Last 5** screen button at the bottom of the keyboard.

Select the desired entry from the list.

If required, select the confirmation button displayed at the bottom of the keyboard.

Points of Interest

A point of interest is a specific location that might be of general interest, e.g. a petrol station, parking area or restaurant.

The data stored within the Infotainment system contain a great number of predefined POIs which are indicated by symbols on the map.


These POIs may be selected as destinations for route guidance.

Search menu

A POI may be selected using different search masks.

Press the **DEST / NAV** button to display the **Destination Entry** menu and then select the **Points of Interest** icon to display the **POI List** menu.

Select **Category:**, **Name:** or **Telephone number**. The respective search mask is displayed.

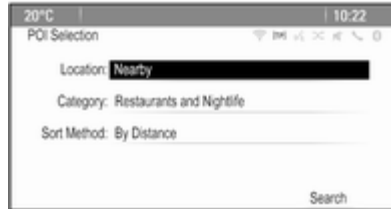

Fill out the entry fields in the respective search mask.

Category search mask

Select the Location entry field to display a list. Select the desired option.

Select the Category entry field to display a POI category list. Select the desired category and then a subcategory from the list.

Select the Sort Method entry field to display the respective submenu. Select **By Distance** or **By Name**.

Select the **Search** screen button at the bottom of the screen. A list of POIs or POI categories is displayed corresponding to the criteria entered. Select the desired menu item.

Name search mask

Select the Country entry field to display a list of all available countries. Select the desired country.

To specify the location, select the entry field for the city or postal code. A keyboard is displayed. Enter the desired name or number.

Select the Sort Method entry field to display the respective submenu. Select **By Distance** or **By Name**.

Select the **Search** screen button at the bottom of the screen. The keyboard is redisplayed.

Enter the name of the desired POI.

Telephone number search mask

Select the Country entry field to display a list of all available countries. Select the desired country.

Select the Sort Method entry field to display the respective submenu. Select **By Distance** or **By Name**.

Select the Number entry field to display a keypad. Enter the desired number.

When the respective search mask is filled out, a confirmation menu is displayed.

Select the **Start Guidance** menu item to start route guidance.

Category lists

Press the **NAV** button and then the multifunction knob to display the **Navigation Menu**. Select **Nearby POIs** or **POIs Along Route**. A POI category list is displayed.

Select the desired category, subcategories and then POI.

A confirmation menu is displayed. Select the **Start Guidance** menu item to start route guidance.

Previous Destinations

The last destinations selected or entered for route guidance are stored within the system.

Press the **DEST / NAV** button to display the **Destination Entry** menu and then select the **Previous Destinations** icon.

A list of the last destinations is displayed sorted in reverse chronological order.

Select the desired address from the list.

A confirmation menu is displayed. Select the **Start Guidance** menu item to start route guidance.


Address Book

The **Address Book** provides local storage space for addresses entered in the navigation application.

Storing addresses in the address book

To store an address in the address book, press the **DEST / NAV** button to display the **Destination Entry** menu.

Enter or select the desired address. The confirmation menu is displayed.

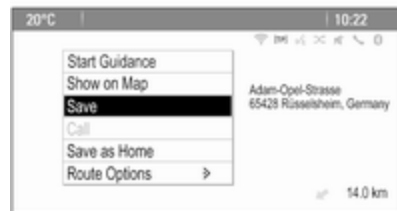

Select the **Save** screen button. The **Address Book Entry** mask is displayed.



Depending on the information available, the different entry fields are already filled.

To enter or modify the name of the respective location, select the Name entry field. A keyboard is displayed. Enter the desired name and confirm your input.

To modify the address, select the Address entry field. The address entry mask is displayed. Make your changes and confirm your input.

To enter or modify the phone number, select the Number entry field. A keypad is displayed. Enter the desired number.


If activated ⇨ 39, the address book entries are indicated on the map by POI icons. To change the icon indicating an address entry, select the Icon entry field. A list of all POI icons available within the system is displayed.

Scroll through the list and select the desired icon.

Select the **Done** screen button at the bottom of the entry mask. The address is stored.

Selecting addresses from the address book

Press the **DEST / NAV** button to display the **Destination Entry** menu and then select the **Address Book** icon. A list of all address book entries is displayed.

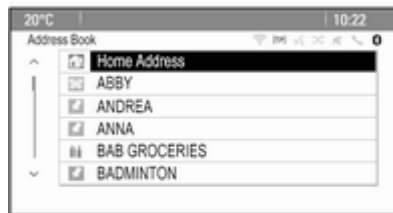

Select the desired entry.

A confirmation menu is displayed. Select the **Start Guidance** menu item to start route guidance.

Editing addresses in the address book

Press the **DEST / NAV** button to display the **Destination Entry** menu and then select the **Address Book** icon. A list of all address book entries is displayed.

Select the desired entry.

A confirmation menu is displayed. Select the **Edit** menu item to display the **Address Book Entry** mask.

Make your changes and confirm your input. The changes are stored in the address book.

Phone Book

Addresses stored in the phone book of the mobile phone connected may be selected as destinations.

Press the **DEST / NAV** button to display the **Destination Entry** menu and then select the **Phone Book** icon. The **Phone Book Search** menu is displayed.

Select the desired first letter range to display a preselection of the telephone book entries you wish to be

displayed. The phone book jumps to the position of the letter range selected.



Select the desired entry in the telephone book to display the address saved under this entry. Select the address.

Note


When the Infotainment system cannot find a valid address, you are prompted with a message.

A confirmation menu is displayed. Select the **Start Guidance** menu item to start route guidance.

Destination selection from the map

Destinations (addresses or POIs) may also be set via the map.

Press the **NAV** button to display the map.

Use the Eight-way switch to centre the map around the desired destination. A red  symbol is indicated on the map and the corresponding address is displayed on a label.



Press the multifunction knob to activate the **Go** screen button.

A confirmation menu is displayed. Select the **Start Guidance** menu item to start route guidance.

Note

If there is more than one POI located at the map position selected, this is indicated on the label. Activating the **Go** screen button then opens a list for selection.

My Home

You can permanently store your home address in the system.

Storing the home address

Press the **DEST / NAV** button to display the **Destination Entry** menu.

Enter your home address.

A confirmation menu is displayed. Select the **Save as Home** menu item.

You are prompted with a message. Confirm the message to save your home address.

Note

The home address is also stored in the address book.

Selecting the home address


Press the **DEST / NAV** button to display the **Destination Entry** menu and then select the **My Home** icon.

Route guidance to the home address is started immediately.

Waypoint routes

When a destination has been entered and route guidance is active, intermediate destinations (waypoints) may be added to the route.

To set up a waypoint route during active route guidance, press the **DEST / NAV** button to open the **Route Menu** and then select the **Destination List** menu item. A submenu is displayed.

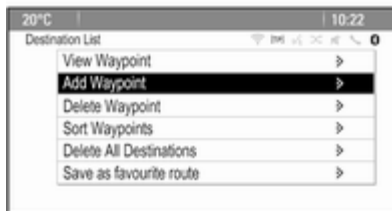

Adding waypoints

To add an intermediate destination, select the **Add Waypoint** menu item. The waypoint list is displayed.



Select the **Add** screen button at the position where you wish to add a waypoint. The **Destination Entry** menu is displayed.

Enter or select the desired destination. The confirmation menu is displayed.

Select the **Add** menu item. The route is recalculated and the waypoint list is redisplayed with the intermediate destination at the position selected.

Note

Up to four destinations may be stored in a waypoint list.

Deleting waypoints

To delete a waypoint, select the **Delete Waypoint** menu item. The waypoint list is displayed.

Select the **Delete** screen button next to the waypoint you wish to delete.

The waypoint is deleted and the waypoint list is redisplayed.

To delete the whole list and end route guidance, select the **Delete All Destinations** screen button.

Moving waypoints

To change the order of the waypoints in the route, select the **Sort Waypoints** screen button.

Select the **Move** screen button next to the waypoint you wish to move. The **Add Waypoint** menu is displayed.

Select the **Add** screen button at the position where you wish to drop the respective waypoint.

The route is recalculated and the order of the waypoints in the waypoint list is changed.

Favourite Routes

Storing waypoint routes

A waypoint route created (see above) may be saved as favourite route.

During an active waypoint route, press the **DEST / NAV** button to open the **Route Menu** and then select the **Destination List** menu item. A submenu is displayed.

Select **Save as favourite route**. A keyboard is displayed.

Enter a name for the favourite route and confirm your input.

The waypoint route is saved.

Creating new favourite routes


Press the **DEST / NAV** button to display the **Destination Entry** menu and then select the **Favourite Routes** icon to display the **Favourite Route** menu.

Select the **New Favourite Route** menu item. A keyboard is displayed.



Enter a name for the favourite route and confirm your input. The **Favourite Route** menu is redisplayed.

Select the desired favourite route. A menu is displayed.

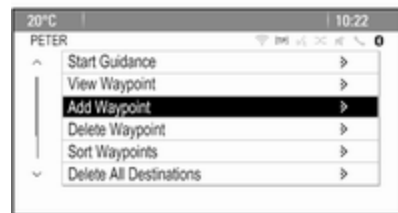

Create a waypoint route (see above).

To change the name of the respective favourite route, select the **Edit Name** menu item. The keyboard for name entry is displayed. Enter the desired name and confirm your input.

To delete the respective favourite route, select the **Delete Favourite** menu item. The favourite route is deleted and the **Favourite Route** menu is redisplayed.

Selecting a favourite route

Press the **DEST / NAV** button to display the **Destination Entry** menu and then select the **Favourite Routes** icon to display a list of the favourite routes saved.

Select the desired route from the list. The route confirmation menu is displayed.

To start route guidance, select the **Start Guidance** menu item.

Latitude / Longitude

The GPS coordinates of a desired location may be used to set a destination.

Press the **DEST / NAV** button to display the **Destination Entry** menu and then select the **Latitude** menu item.

Select the Latitude entry field to display the **Geolocation Entry** menu.



Repeatedly press the multifunction knob to adjust the first setting as desired.

Turn the multifunction knob to move to the next value to be set.

Proceed like this to set all values.

Select the **BACK** button to return to the next higher menu level.

Adjust the longitude values as described above.

When all GPS coordinates are entered, select the **Search** screen button at the bottom of the screen.

A confirmation menu is displayed.

To start route guidance, select the **Start Guidance** menu item.

Deleting saved destinations

To delete destinations stored in the system, press the **CONFIG** button, select the **Navigation Settings** menu item and then **Delete Saved Destinations**. A submenu is displayed.

Activate the menu items of the storage location you wish to be cleared.

Select the **Delete** screen button. The selected storage locations are cleared.

Guidance

Starting and cancelling route guidance

Starting route guidance

Enter or select the desired address.

A confirmation menu is displayed. Select the **Start Guidance** menu item to start route guidance.



Cancelling route guidance

When route guidance is active, press the **DEST / NAV** button to display the **Route Menu**.

Select the **Cancel Route** menu item to cancel the current navigation session.

Guidance instructions

Route guidance is provided by voice prompts and visual instructions on the map (if activated).

Voice prompts

Navigation voice prompts announce which direction to follow, when approaching an intersection at which you need to turn.

Press the **CONFIG** button and then select the **Navigation Settings** menu item.

Select the **Voice Prompt** menu item to display the respective submenu.

If you wish the system to audibly indicate the next turning manoeuvre, activate **Navigation Voice Prompts**.

If you wish traffic alerts to be read out, activate **Traffic Alert Prompts**.

To adjust the volume during voice prompts, select the **Navigation Volume** menu item. The respective submenu is displayed.

To adjust the volume of voice prompts, select **Announcement** and then adjust the setting as desired.

To adjust the volume of the audio source possibly playing in the background, select **Background** and then adjust the setting as desired.

Select **Volume Test** to get an audio example of the settings.

Guidance alerts

Guidance alerts show in a close-up view of the respective map section which direction to follow when approaching an intersection at which you need to turn.

Press the **CONFIG** button and then select the **Navigation Settings** menu item.

Select the **Guidance Alert** menu item to display the respective submenu.

If you wish the display to automatically show the map when approaching the next turning manoeuvre, activate **Guidance Alert in Primary**.

If you wish turning manoeuvres to be displayed in a close-up view, activate **Guidance Alert in Map**.

Traffic incidents

The TMC traffic information system receives all current traffic information from TMC radio stations. This information is included in the calculation of a route.

Traffic settings

Press the **CONFIG** button and then select the **Navigation Settings** menu item.

Select the **Traffic Settings** menu item to display the respective submenu.

To use the TMC traffic information system, activate the **Traffic Events** menu item.

Recalculation of an active route

If a traffic problem occurs during active route guidance, the route may be changed.

Select **Alert if better route is available** to display the respective submenu.


If you wish the route to be constantly adapted to the current traffic situation, activate **Route Based on Traffic Conditions**.

Choose between **Automatic Recalculation** and **Recalculation after Confirmation** of a corresponding message.

Traffic incidents on the map

Traffic incidents may be indicated on the map by corresponding symbols.

Select **Show Traffic Events on Map** to display the respective submenu.

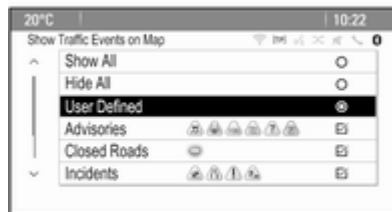

Select the desired option.

If **User Defined** is activated, scroll through the list and activate the traffic incidents categories you wish to be displayed.

TMC stations

The TMC stations broadcasting traffic information, may be set automatically or manually.

Select the **Traffic Stations** menu item to display a selection mask.

Select the Mode entry field to display the respective submenu. Select the desired option.

If **Manual Station Selection** is chosen, a TMC station needs to be set.

Select the Station entry field to display the **Traffic Station List**.

Select the desired station.

Traffic incidents lists

When route guidance is active, press the **NAV** button and then press the multifunction knob to display the **Navigation Menu**. Scroll through the list and select the **Traffic** menu item.

To display a list of all traffic events known for the area around the current vehicle location, select the **All Traffic Events** menu item.

To display a list of the traffic events concerning the current route, select the **Traffic Events on Route** menu item.

The traffic incidents lists may be sorted in different ways.

Select the **Traffic Settings** menu item in the **Traffic** menu and then **Sort Method**. The respective submenu is displayed.

Activate the desired option.

Route tracking

The bread crumbs function allows tracking of the roads already taken in a route.

Press the **CONFIG** button and then select the **Navigation Settings** menu item. Select the **Bread Crumbs** menu item to display the respective menu.

To start a tracking session, activate the **Record** menu item. The route taken is recorded and displayed as dotted line on the map.



To delete the bread crumbs already dropped in an active tracking session, select the **Delete** screen button. You are prompted with a message. Confirm the message to delete all bread crumbs.

To end the tracking session, deactivate the **Record** menu item. A keyboard is displayed.

Enter a name for the respective tracking session and select the **Done** screen button. The session is stored in the **Saved** list.

To display a list of all tracking sessions, select the **Saved** screen button. Select the desired tracking session to display the **Bread Crumb Details** menu.

To change the name of the respective tracking session, select the **Edit Name** menu item. A keyboard is displayed. Enter the desired name and select the **Done** screen button.

Select the **Load** menu item to display the bread crumb main menu. If you wish the respective tracking session to be constantly displayed on the map, activate the **Display** menu item.

To directly display the whole tracking session in the respective map section, select the **Show on Map** menu item.

To delete the respective tracking session, select the **Delete** menu item.


Routing

When a route has been calculated, you may manually change certain parts or recalculate the whole route.

Turn List

The **Turn List** displays all streets and turning manoeuvres on the calculated route starting from the current location.

Press the **DEST / NAV** button and then select the **Turn List** menu item. The turn list is displayed.

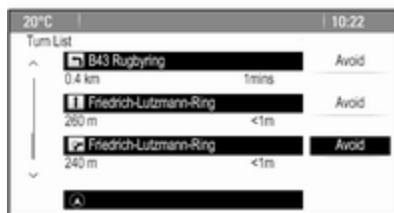

To exclude certain streets from the route, select the **Avoid** screen button next to the respective street.

The route is recalculated and the respective street is excluded.

Avoid List

When streets have been excluded from the original route, they are displayed in the **Avoid List**.

Press the **DEST / NAV** button and then select the **Avoid List** menu item to display the respective submenu.

To display all streets avoided, select the **View List** menu item.

To delete all avoidances and return to the original route, select the **Delete All Items** menu item.

Detour

Press the **DEST / NAV** button and then select the **Detour** menu item.

To change the route for a certain distance, select the **Detour By Distance** menu item. A menu listing different distances is displayed.

Select the desired distance. The route is recalculated accordingly.

To block the whole route, select the **Detour Complete Route** menu item. The original route is blocked and a new route to the desired destination is calculated.

Exit list

To display a list of the next exits and motorway stations while driving on a motorway, press the **NAV** button and then press the multifunction knob to display the **Navigation Menu**.

Scroll through the list and select the **Exit List** menu item.

Route options

When route guidance is active, press the **DEST / NAV** button and then select the **Route Options** menu item.

A list of route calculation options and road types is displayed.

To define by what criteria a route may be calculated, activate one of the options: **Fastest** for the fastest route (in time), **Shortest** for the shortest route (in distance) or **Eco** for the route with the lowest fuel consumption.

To define which road types may be included in the calculation of the route, activate the desired options: highways, tollroads, ferries, etc.

Speech recognition

General information	56
Usage	57

General information

Embedded speech recognition

The speech recognition of the Infotainment system enables you to operate various functions of the Infotainment system via voice input. It recognises commands and numeric sequences independently of the relevant speaker. The commands and numeric sequences can be spoken without a pause between the individual words.

In the event of incorrect operation or commands, the speech recognition gives visual and/or acoustic feedback and requests you to re-enter the desired command. Apart from this, the speech recognition acknowledges important commands and will enquire if necessary.

In general, there are different ways to speak commands for completing the tasks. Most of them, except destination entry and voice keypad, can be completed in a single command.

If the action takes more than one command to be performed, proceed as follows:

In the first command, you indicate the type of action to be performed, e.g. "Navigation destination entry". The system replies with prompts that lead you through a dialogue for entering the necessary information. For example, if a destination for route guidance is needed, say "Navigation" or "Destination entry".

Note

To ensure that conversations inside the vehicle do not lead to unintentional triggering of the system functions, the speech recognition does not start until it has been activated.

Language support

- Not all languages available for the display of the Infotainment system are also available for the speech recognition.
- If the currently selected display language is not supported by the speech recognition, speech recognition is not available.

In such a case you need to select another language for the display if you want to control the Infotainment system via voice input. Changing the display language, see "Language" in chapter "System settings" ⇨ 21.

Address input for destinations in foreign countries

In case you want to enter the address of a destination located in a foreign country via voice input, you need to change the language of the Infotainment display to the language of the foreign country.

E.g. if the display is currently set to English and you want to enter the name of a city located in France, you need to change the display language to French.

Exceptions: If you want to enter addresses in Belgium, you may optionally change the display language to French or Dutch. For addresses in Switzerland you may optionally change the display language to French, German, or Italian.

For changing the display language, see "Language" in chapter "System settings" ⇨ 21.

Input order for destination addresses

The order in which the parts of an address need to be entered using the speech recognition system is dependent on the country where the destination is located.

An example for the respective input order is given out by the system.

Voice pass-thru application

The voice pass-thru application of the Infotainment system allows access to the speech recognition commands on your smartphone. See the operating instructions for your smartphone to find out whether your smartphone supports this feature.


Usage


Embedded speech recognition

Activating speech recognition

Note

Speech recognition is not available during an active phone call.

Press the  button on the right side of the steering wheel.

The audio system mutes, the  symbol on the display is highlighted, and a voice output message prompts you to say a command.

As soon as the speech recognition is ready for voice input, a beep is heard.


You can now say a voice command to directly initiate a system function (e.g. playing a radio station), or to start a dialogue sequence with several dialogue steps (e.g. entering a destination address), see "Operation via speech commands" further below.

After a dialogue sequence is finished, the speech recognition is deactivated automatically. To initiate another dialogue sequence, you must activate the speech recognition again.

Adjusting the volume of voice prompts

Press the + or – buttons on the right side of the steering wheel.


Interrupting a voice prompt

As an experienced user, you can interrupt a voice prompt by briefly pressing the  button on the steering wheel.

A beep is heard immediately, and a command can be stated without having to wait.

Cancelling a dialogue sequence

There are several possibilities to cancel a dialogue sequence and to deactivate the speech recognition:

- Say "**Cancel**" or "**Exit**".
- Press the  button on the right side of the steering wheel.

In the following situations a dialogue sequence is automatically cancelled:



- If you do not say any commands for some time (by default you are prompted three times to say a command).
- If you say commands that are not recognised by the system (by default you are prompted three times to say a correct command).

Operation via speech commands

The speech recognition can understand commands that are either naturally stated in sentence form, or direct commands stating the application and the task.

For best results:

- Listen for the voice prompt and wait for the beep before saying a command or replying.
- Say "**Help**" if you want to listen again to the help prompt for the current dialogue step.

- The voice prompt can be interrupted by pressing the  button again. If you wish to directly speak your command, press the  button twice.
- Wait for the beep and then speak the command naturally. In most cases, recognition rates will be higher if pauses are kept to a minimum. Use short and direct commands.

Usually phone and audio commands can be spoken in a single command. For example, "Call David Smith at work", "Play" followed by the artist or song name, or "Tune to" followed by the radio frequency and the waveband.

Navigation destinations, however, are too complex for a single command. First, state "Navigation" and then, e.g. "Address" or "Point of Interest". The system responds with requesting more details.

After saying "Point of Interest", only major chains may be selected by name. Chains are businesses with at

least 20 locations. For other POIs, say the name of a category, e.g. "Restaurants", "Shopping centres", or "Hospitals".

Direct commands are easier understood by the system, e.g. "Call 01234567".

If you say "Phone", the system understands that a phone call is requested and responds with respective questions until enough details are gathered. If the phone number has been saved with a name and a place, the direct command should include both, for example "Call David Smith at work".

Selecting list items

When a list is displayed, a voice prompt asks to confirm or select an item from that list. A list item may be manually selected, or by speaking the line number of the item.

The list on a speech recognition screen functions the same as a list on other screens. Manually scrolling the list on a screen during a speech recognition session suspends the current speech recognition event and

plays a prompt like "Make your selection from the list using the manual controls, or press the back button on the faceplate to try again".


If no manual selection is made within 15 seconds, the speech recognition session terminates, you are prompted with a message, and the former screen is redisplayed.

The "Back" command

To return to the previous dialogue step, alternatively: say "Back", or press the **BACK** button on the instrument panel.


The "Help" command

After saying "Help", the help prompt for the current dialogue step is read aloud.

To interrupt the help prompt, press the  button again. A beep is heard. You may say a command.

Voice pass-thru application

Activating the voice pass-thru speech recognition


Press and hold the  button on the right side of the steering wheel until a speech recognition session is started.

Find further information on the operation in the operating instructions for your smartphone.

Adjusting the volume of voice prompts

Press the + or – buttons on the right side of the steering wheel.

Deactivating the voice pass-thru speech recognition

Press the  button on the right side of the steering wheel. The speech recognition session is ended.

Phone

General information	60
Bluetooth connection	61
Emergency call	62
Operation	63
Text messages	66
Mobile phones and CB radio equipment	68

General information

The Phone portal provides you with the possibility of having mobile phone conversations via a vehicle microphone and the vehicle loudspeakers as well as operating the most important mobile phone functions via the Infotainment system in the vehicle. To be able to use the Phone portal, the mobile phone must be connected with it via Bluetooth.

The Phone portal can be operated optionally via the speech recognition system.

Not all Phone portal functions are supported by every mobile phone. The possible phone functions depend on the relevant mobile phone and network provider. You will find further information on this in the operating instructions for your mobile phone or you can enquire about them with your network provider.

Important information for operation and traffic safety

Warning

Mobile phones have effects on your environment. For this reason safety regulations and directions have been prepared. You should be familiar with the related directions before you use the telephone function.

Warning

Use of the hands-free facility while driving can be dangerous because your concentration is reduced when telephoning. Park your vehicle before you use the hands-free facility. Follow the stipulations of the country in which you find yourself at present.

Do not forget to follow the special regulations that apply in specific areas and always switch off the mobile phone if the use of mobile

phones is prohibited, if interference is caused by the mobile phone or if dangerous situations can occur.

Bluetooth

The Phone portal is certified by the Bluetooth Special Interest Group (SIG).

You will find further information about the specification on the Internet at <http://www.bluetooth.com>

Bluetooth connection

Bluetooth is a radio standard for the wireless connection of e.g. mobile phones, iPod/iPhone models, or other devices.

To be able to set up a Bluetooth connection to the Infotainment system, the Bluetooth function of the Bluetooth device must be activated. For further information, please consult the user guide of the Bluetooth device.



Via the **Bluetooth** menu, pairing (PIN code exchange between Bluetooth device and Infotainment system) and connecting of the Bluetooth devices to the Infotainment system are carried out.

Important information

- Up to five devices can be paired to the system.
- Only one paired device can be connected to the Infotainment system at a time.
- Pairing normally only needs to be carried out once, unless the device is deleted from the list of paired devices. If the device has been connected previously, the Infotainment system establishes the connection automatically.
- Bluetooth operation considerably drains the device's battery. Therefore, connect the device to the power outlet for charging.

Bluetooth menu

To open the **Bluetooth** menu, you may optionally:

- Press the  button. Select the **Phone Settings** menu item and then **Bluetooth**.
- Press the **CONFIG** button. Select the **Phone Settings** menu item and then **Bluetooth**.
- Press the  button and select the **Config** icon. Select the **Phone Settings** menu item and then **Bluetooth**.

The menu items **Device list** and **Pair device** are displayed.

Pair device

To initiate the pairing process on the Infotainment system, select the **Pair device** menu item. A message with a four-digit Infotainment system code is displayed.

Initiate the pairing process on the Bluetooth device. If required, enter the Infotainment system code on the Bluetooth device.

A six-digit PIN code for the pairing process is displayed on the Infotainment system.

To confirm the pairing process:

- If SSP (secure simple pairing) is supported:

Compare the PIN codes displayed on the Infotainment system and on the Bluetooth device (if demanded) and confirm the message on the Bluetooth device.

- If SSP (secure simple pairing) is not supported:

Enter the PIN code on the Bluetooth device and confirm your input.

The devices are paired and the phone main menu is displayed.

The phone book and call lists (if available) are downloaded from the Bluetooth device.

If required, confirm the corresponding message on the Bluetooth device.

Device list

The device list contains all Bluetooth devices paired to the Infotainment system.



If a new device is paired, it is displayed in the device list.

Connecting a device

Select the device you wish to connect. A submenu is displayed.

Select the **Select** screen button.

The device previously connected is disconnected and this device is connected.

Deleting a device

Select the device you wish to delete. A submenu is displayed.

Select the **Delete** screen button.

The device is deleted.

Emergency call

⚠ Warning

Connection setup cannot be guaranteed in all situations. For this reason you should not rely exclusively on a mobile phone when a vitally important communication (e.g. a medical emergency) is concerned.

In some networks it may be necessary for a valid SIM card to be properly inserted in the mobile phone.

Warning

Bear in mind that you can make and receive calls with the mobile phone, if it is in a service area with a sufficiently strong signal. Under certain circumstances emergency calls cannot be made on all mobile phone networks; it is possible that they cannot be made when certain network services and/or telephone functions are active. You can enquire about this with the local network operators.

The emergency call number can differ depending on the region and country. Please enquire beforehand about the correct emergency call number for the relevant region.

Making an emergency call

Dial the emergency call number (e.g. 112).

The telephone connection to the emergency call centre is set up.

Answer when the service personnel questions you about the emergency.

Warning

Do not end the call until you are requested to do so by the emergency call centre.


Operation


As soon as a connection via Bluetooth has been set up between your mobile phone and the Infotainment system, you can also operate many functions of your mobile phone via the Infotainment system.

After setting up a connection between the mobile phone and the Infotainment system, the mobile phone data is transmitted to the Infotainment system. This can take some time depending on the phone model. During this period, operation of the mobile phone is possible via the Infotainment system only to a limited extent.

Not every telephone supports all functions of the phone application. Therefore, deviations from the range of functions described are possible.


Phone main menu

To display the phone main menu, press the  button. The following screen is displayed (if a mobile phone is connected).

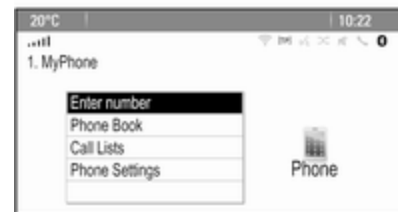

Initiating a phone call

Entering a number

Press the  button and then select the **Enter number** menu item. A keypad is displayed.



Enter the desired number.

Select the **Del** screen button or press the **BACK** button to delete the last digit entered.

Select the **►** or **◄** screen button to move the cursor within the number already entered.

To start dialling, select the **OK** screen button.

Note

You may access the phone book from the keypad by pressing the **PB** button.

Phone book

Press the **☞/☞** button and then select the **Phone Book** menu item. The **Phone Book Search** menu is displayed.



Select the desired first letter range to display a preselection of the telephone book entries you wish to be displayed. The phone book jumps to the position of the letter range selected.



Select the desired entry in the telephone book to display the numbers saved under this entry.

Select the desired number to start dialling.

Phone book sorting


The phone book may be sorted by last name or by first name.

To change the sorting order, select the **☞/☞** button and then the **Phone Settings** menu item.

Select **Sort Order** to display the respective submenu.

Activate the desired option.

Call lists

Press the  button and then select the **Call Lists** menu item. The **Call Lists** menu is displayed.



Select the desired call list. Depending on the list selected, the last incoming, outgoing or missed calls are displayed.

Select the desired entry in the call list to start dialling.

Incoming calls

When a call comes in, a message is displayed on the screen.



To take the call, select the **Answer** screen button.

To reject the call, select the **Decline** screen button.

Functions during a phone call

When a call is active, the in-call view is displayed.



Ending a phone call

To end the call, select the **Hang up** screen button.

Muting a call

To temporarily mute the microphone, activate the **Mute call** screen button.

Deactivate the **Mute call** screen button to unmute the microphone.

Transferring to handset

Select the **Transfer to Handset** menu item to transfer the call to the mobile phone. The **Private Call** menu is displayed.

To transfer the call back to the Infotainment system, select the **Transfer call** menu item in the **Private Call** menu.

Second phone call

Initiating a second phone call

While a call is active, select the **Enter number** menu item in the in-call view. The keypad is displayed. You may enter a number or select a number from the phone book, see above.

Second incoming phone call

When a second call comes in, a message is displayed at the bottom of the screen.

Select the desired option.

If the call is taken, the first call is put on hold and the second call becomes active.

Both calls are displayed in the in-call view.



To switch between the calls, select the **Switch calls** menu item.

Conference call

Select the **Merge calls** screen button to activate both calls at the same time.

The **Merge calls** screen button changes to **Detach call**.

To end a conference call, select the **Detach call** screen button.

Ending phone calls

In a conference call, select the **Hang up** screen button to end both phone calls.

Text messages

As soon as a connection via Bluetooth has been set up between your mobile phone and the Infotainment system, you can operate the messages inbox of your mobile phone via the Infotainment system.

Not every phone supports the text messages function of the Infotainment system.

Activating the messages application on the mobile phone

The transmission of text message data to the Infotainment system must be activated on the mobile phone.

In the Bluetooth menu of your mobile phone, select the name of the paired Infotainment system to display the respective submenu.

To display the text messages in the messages application of the Infotainment system, activate the respective function in the submenu on the mobile phone.

The **Messages** icon in the Home menu of the Infotainment system is then selectable.

Incoming text message

When a new text message is received, you are prompted with a message indicating the name or number of the sender.

Select one of the options in the message.

Listen

If you wish the system to read out the message, select the **Listen** screen button.

View

To display the message on the screen, select the respective screen button.

Note

Messages are only displayed on the screen when the vehicle is parked.

Dismiss

To dismiss the message, select the respective screen button.

Reply

To directly answer the message, select the **Reply** screen button. A list of predefined messages is displayed.

Select the desired message and confirm your input.

The message is sent.


Note

New predefined messages may be created in the settings menu.

Call

To call the sender of the text message, select the **Call** screen button.

Inbox

Press the  button and then select the **Messages** icon to display the respective menu.

Select the **Inbox** menu item to display a list of all inbox messages.




Select the desired message. The message is displayed on the screen.

Note

Messages are only displayed on the screen when the vehicle is parked.

If desired, select one of the options at the bottom of the screen (see above).

Settings

Press the  button and then select the **Messages** icon to display the respective menu.

Select the **Settings** menu item to display the respective submenu.

Adjust the settings as desired.

Mobile phones and CB radio equipment

Installation instructions and operating guidelines

The vehicle specific installation instructions and the operating guidelines of the mobile phone and handsfree manufacturer must be observed when installing and operating a mobile telephone. Failure to do so could invalidate the vehicle type approval (EU directive 95/54/EC).

Recommendations for fault-free operation:

- Professionally installed exterior antenna to obtain the maximum range possible,
- Maximum transmission power 10 watts,
- Installation of the phone in a suitable spot, consider relevant Note in the Owner's Manual, chapter **Airbag system**.

Seek advice on predetermined installation points for the external antenna or equipment holder and ways of using devices with a transmission power exceeding 10 watts.

Use of a handsfree attachment without external antenna with mobile telephone standards GSM 900/1800/1900 and UMTS is only permitted if the maximum transmission power of the mobile telephone is 2 watts for GSM 900 or 1 watt for the other types.

For reasons of safety, do not use the phone while driving. Even use of a handsfree set can be a distraction while driving.

Warning

Operation of radio equipment and mobile telephones which fail to meet above mentioned mobile telephone standards is only permitted using an antenna located outside of the vehicle.

Caution

Mobile telephones and radio equipment may lead to malfunctions in the vehicle electronics when operated inside the vehicle with no exterior antenna, unless the above mentioned regulations are observed.

Frequently asked questions

Frequently asked questions 69

Frequently asked questions


Speech recognition

❓ **The speech recognition function does not work very well. How can I improve its performance?**

- ❗ Wait for the beep and then try to speak the command naturally. Avoid long pauses, use little accentuation and speak at a moderate volume.

Detailed description ⇨ 57.

❓ **The voice prompts given out by the speech recognition system are too long. How can I interrupt them to directly speak a command?**

- ❗ To interrupt the voice prompt of the speech recognition system, press the  button on the steering wheel. Wait for the beep and then speak your command.

Detailed description ⇨ 57.

❓ **I cannot select a phone contact via speech recognition. What am I doing wrong?**

- ❗ The Infotainment system accesses the phone book entries as they are stored. If the sorting order is set to "last name, first name", the correct command for calling John Smith is "Smith, John".

Detailed description ⇨ 56.


❓ **I cannot enter an address located in another country via speech recognition. What am I doing wrong?**

- ❗ Via speech recognition, you can only enter addresses for destinations located in the country whose language is selected as the system language, e.g. if the system is set to German, you cannot enter a destination located in France.

Detailed description ⇨ 56.

Phone

② How can I pair my phone with the Infotainment system?

① In order to pair a phone, press the  button, select the **Phone Settings** menu item and then **Bluetooth**. Select **Pair device** and follow the instruction on the Infotainment system and your mobile phone. Make sure Bluetooth is enabled.

Detailed description ⇨ 61.

② How can I access my phone book or recent calls list via the Infotainment system?

① Depending on the phone, you must allow access to the respective data in the settings of your mobile phone. In general, the download of the phone book and recent calls list is not supported by all mobile phones.

Detailed description ⇨ 61.

② Although access to my phone book has been granted, not all contacts are available in the Infotainment system. Why is that?

① Depending on the phone, contacts stored on the SIM card cannot be read by the Infotainment system.

Detailed description ⇨ 61.

Navigation

② How can I toggle between total driving time or remaining driving time and total distance or partial distance?

① When the navigation application is active, press the multifunction knob to display the **Navigation Menu**. Select **Switch Route Time/Destination** and adjust the settings as desired.

Detailed description ⇨ 39.

② When pressing the DEST/NAV button, different menus are displayed sometimes. Why is that?

① If route guidance is active, the destination application is displayed for you to select a destination.

Detailed description ⇨ 43.

If route guidance is not active, the **Route Menu** is displayed.


Detailed description ⇨ 51.

Audio

② When playing media files from a device connected via Bluetooth, the track title and artist are not displayed in the Infotainment system and the media browse function is not available. Why is that?

① When connecting a device via Bluetooth, due to the Bluetooth protocol supported only restricted functions are available.

Detailed description ⇨ 34.

-
- ② The Infotainment system does not have a tone button on the faceplate. How can I change the tone settings?
- ① The tone settings menu is accessible via the **Home Page**. Press the  button and then select the **More** screen button to display the second **Home Page**. To access the tone settings menu, select the **Tone** icon.
- Detailed description ⇨ 19.

Index

A

Activating AUX.....	34
Activating Bluetooth music.....	34
Activating CD player.....	31
Activating radio.....	24
Activating the Infotainment system	14
Activating the navigation system. .	39
Activating the phone portal.....	63
Activating USB audio.....	34
Activating USB picture.....	35
Address book.....	43
Audio CUE volume.....	20
Audio files.....	32
Autostore lists.....	25
Retrieving stations.....	25
Storing stations.....	25
Auto volume.....	20
AUX.....	32

B

BACK button.....	16
Balance.....	19
Basic operation.....	16
Bass.....	19
Bluetooth connection.....	61
Bluetooth music.....	32
Bread crumbs.....	51

C

Category list.....	24
CD player.....	30
Chime volume.....	20
Control elements	
Infotainment system.....	8
Steering wheel.....	8
Control elements overview.....	8

D

DAB.....	29
Date.....	21
Destination input	43
Digital audio broadcasting.....	29
Display.....	21
Displaying pictures.....	35

E

Emergency call.....	62
EQ.....	19
Equaliser.....	19

F

Factory defaults.....	21
Fader.....	19
Favourite lists.....	26
Retrieving stations.....	26
Storing stations.....	26
File formats.....	30

Audio files.....	32
Picture files.....	32
Frequently asked questions.....	69

G

General information 30, 32, 38, 56, 60	
AUX.....	32
Bluetooth music.....	32
CD.....	30
Infotainment system.....	6
Navigation.....	38
Phone portal.....	60
Radio.....	24
USB.....	32
Guidance	51

H

Home address.....	43
Home Page.....	16, 21

I

Infotainment control panel.....	8
---------------------------------	---

K

Keyboard.....	43
---------------	----

L

Language.....	21
---------------	----

M

Maps.....	39
Maximum startup volume.....	20
Menu operation.....	16
Messages.....	16
Midrange.....	19
Mobile phones and CB radio equipment	68
Multifunction knob.....	16
Mute.....	14

N

Navigation	
Address book.....	43
Bread crumbs.....	51
Coordinates.....	43
Current location.....	39
Destination input.....	43
Favourite routes.....	43
General settings.....	39
Guidance alerts.....	51
Home address.....	43
Keyboard.....	43
Map display.....	39
Map manipulation.....	39
POIs.....	43
Recent destinations.....	43
Route guidance.....	51
Route options.....	51

Route simulation.....	39
Route tracking.....	51
TMC stations.....	51
Traffic incidents.....	51
Turn list.....	51
Voice prompts.....	51
Waypoint trip.....	43
Navigation system.....	38
Navigation volume.....	20

O

Operation.....	63
AUX.....	34
Bluetooth music.....	34
CD.....	31
Infotainment system.....	14
Menu.....	16
Navigation system.....	39
Phone.....	63
Radio.....	24
USB.....	34, 35

P

Pairing.....	61
Phone	
Bluetooth.....	60
Bluetooth connection.....	61
Conference call.....	63
Emergency calls.....	62
Functions during a call.....	63

Phone book.....	63
Recent calls.....	63
Text messages.....	66
Phone book.....	43, 63
Phone call	
Initiating.....	63
Taking.....	63
Picture files.....	32
Pictures.....	35
Playing audio.....	34
POIs.....	43

R

Radio	
Autostore lists.....	25
Category list.....	24
DAB.....	29
DAB announcements.....	29
Digital Audio Broadcasting.....	29
Favourite lists.....	26
Radio Data System.....	27
RDS.....	27
RDS Options menu.....	27
Regional.....	27
Retrieving stations.....	25, 26
Station list.....	24
Station search.....	24
Storing stations.....	25, 26
TP.....	27

Traffic Programme.....	27
Waveband selection.....	24
Radio data system (RDS)	27
Regionalisation.....	27
Route guidance.....	51
Route simulation.....	39

S

Software update.....	21
Speech recognition.....	56
Station list.....	24
Station search.....	24
Switching the Infotainment	
system on.....	14
System settings.....	21
Display.....	21
Home Page.....	21
Language.....	21
Software.....	21
Time and Date.....	21

T

TA.....	27
TA volume.....	20
Text messages.....	66
Theft-deterrent feature	7
Time.....	21
Time format.....	21
TMC.....	51
Tone settings.....	19

TP.....	27
Traffic incidents.....	51
Traffic programme.....	27
Treble.....	19
Turn list.....	51

U

Usage.....	14, 24, 31, 39, 57
AUX.....	34
Bluetooth music.....	34
CD.....	31
Infotainment system.....	14
Navigation system.....	39
Phone.....	63
USB.....	34, 35
USB.....	32
Using apps.....	36

V

Voice recognition.....	56
Volume	
Audio Cue volume.....	20
Auto volume.....	20
Chime volume.....	20
Maximum startup volume.....	20
Mute function.....	14
Navigation volume.....	20
Volume of traffic	
announcements.....	20
Volume settings.....	20

W

Waveband selection..... 24

Waypoint trip..... 43

CD 400

Introduction	78
Radio	90
Audio players	103
Phone	118
Index	134

Introduction

General information	78
Theft-deterrent feature	79
Control elements overview	80
Operation	82
Personalisation	86

General information

The Infotainment system provides infotainment in your vehicle, using the latest technology.

The radio can easily be used by registering up to 36 FM, AM and DAB (Digital Audio Broadcasting) radio stations with the **1 ~ 6** preset buttons per every six pages.

The integrated CD player can play audio CD and MP3 (WMA) discs, and the USB player can play connected USB storage devices or iPod products.

The Bluetooth phone connection function allows for the use of wireless handsfree phone calls, as well as a phone music player.

Connect a portable music player to the exterior sound input and enjoy the rich sound of the Infotainment system.

The digital sound processor provides a number of preset equaliser modes for sound optimisation.


The system can be easily adjusted with the carefully designed adjusting device, smart displayer, and multifunctional menu dial regulator.

- The "Overview" section provides a simple overview of the Infotainment system's functions and a summary of all regulatory devices.
- The "Operation" section explains the basic controls of the Infotainment system.

Note

This manual describes all options and features available for the various Infotainment systems. Certain descriptions, including those for display and menu functions, may not apply to your vehicle due to model variant, country specifications, special equipment or accessories.

Screen display

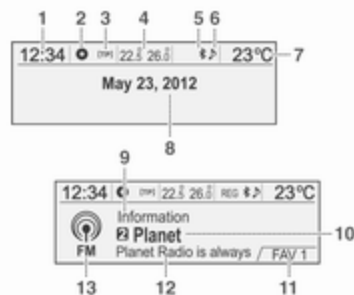

Start-up screen:

- (1) Clock
- (2) Disc loaded
- (3) RDS service
- (4) Inside air temperature (driver/passenger)
- (5) Bluetooth connected
- (6) Bluetooth music
- (7) Outside air temperature
- (8) Date
- Radio screen:
- (9) Category

- (10) Station name
- (11) Favourites page
- (12) Stations list
- (13) Band



CD/MP3 screen:

- (1) Playing time
- (2) Folder/track
- (3) Song title
- (4) Artist
- (5) Disc type

Settings screen:

- (6) Settings title
- (7) Selection bar
- (8) List indicator bar
- (9) Menu



- (8) List indicator bar
- (9) Menu

The screen display may differ from the manual display since most screen displays differ according to the device's setup and vehicle specification.


Theft-deterrent feature

The Infotainment system has an electronic security system installed to prevent theft.

The Infotainment system therefore functions only in your vehicle and is worthless to a thief.

Control elements overview

Overview

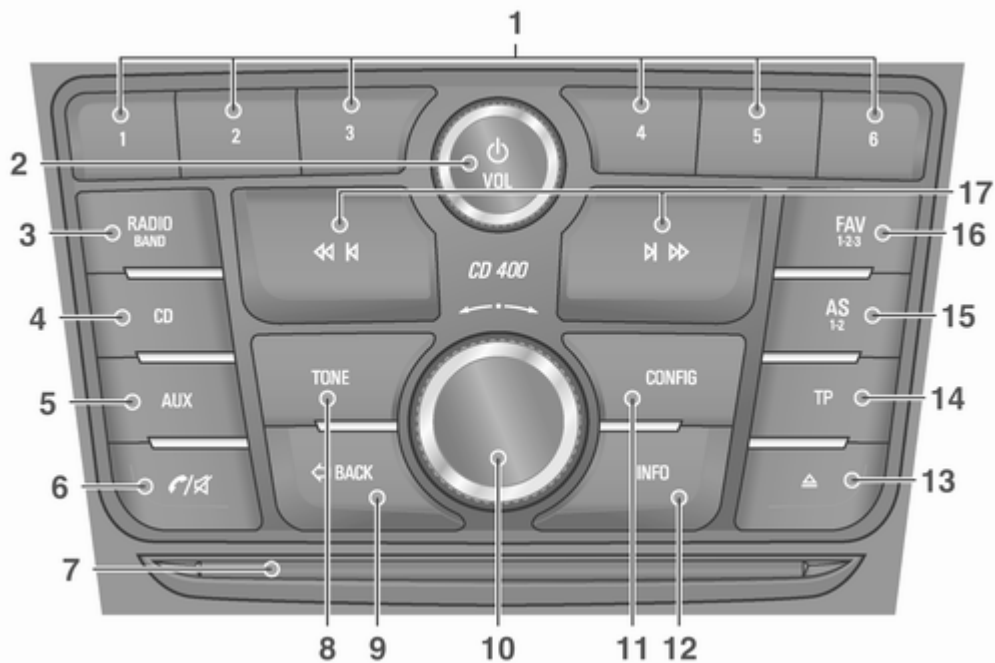

1. **1 ~ 6** preset buttons

- ◆ Hold down any of these buttons to add the current radio station to the current favourites page.
- ◆ Press any of these buttons to select the channel linked to that button.

2. **⏻** button with **VOL** control knob

- ◆ Press to turn the power on and off.
- ◆ Turn the control knob to adjust the overall volume.

3. **RADIO/BAND** button

Select the FM, AM band radio or DAB function.

4. **CD** button

Press to select the CD/MP3 disc play function.

5. **AUX** button

Press to select the AUX/USB/iPod/Bluetooth audio function.

6. **📶/🔇** button

- ◆ Press to activate the Bluetooth mode.
- ◆ Hold down to turn the mute/pause function for CD and USB/iPod on and off.

7. Disc slot

This is the slot in which compact discs are inserted or taken out.

8. **TONE** button

Press to adjust/select the sound setup mode.

9. **⏮** **BACK** button

Cancel the input content or return to the previous menu.

10. Multifunction knob

- ◆ Press to display the currently functioning menu or select the setup content and setup values.
- ◆ Turn the control knob to move/change the setup content and setup values.
- ◆ In the Bluetooth handsfree mode, take a call by pressing the button. You can turn the

control knob to answer or reject the call, then press button to confirm.

11. **CONFIG** button

Press to enter the system setup menu.

12. **INFO** button

- ◆ Press to view the file information when using the CD/MP3 and USB/iPod play modes.
- ◆ View information about a radio station and the currently playing song when using the radio function.

13. **▲** button

Press button and remove disc.

14. **TP** button

While using the FM RDS function, turn the **TP** (Traffic Programme) function on or off.

15. **AS 1-2** button

- ◆ Hold down to automatically store the radio stations to the AS station page 1 or 2.
- ◆ Press to select the AS station pages 1 or 2.


16. **FAV 1-2-3** button

Press to select the page of saved favourite files.

17. **◀◀ / ▶▶** buttons

- ◆ Press these buttons when using radio or DAB to automatically seek stations with clear reception. You can manually set the broadcasting frequency by holding down these buttons.
- ◆ Press these buttons while using the CD/MP3 and USB/iPod play modes to instantly play the previous or next track.
- ◆ You can hold down these buttons to quickly rewind/fast forward through the currently playing songs.

Steering wheel audio controls

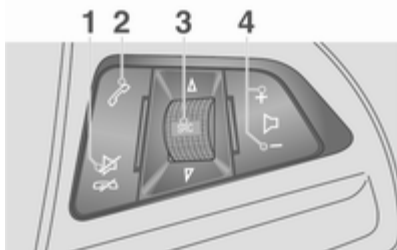1. **🔇** button

Press in any music play mode to turn the mute function on and off. In engaged mode you can press this button to reject calls or to finish the call.

2. **☎** button

- ◆ Press to answer the call or enter the redial mode.
- ◆ Hold down to enter the dialled call log or to move back and forth from hands-free mode and private call mode during a call.

3. **△ SRC ▽** button

- ◆ Press to select a sound play mode.
- ◆ Turn the control to change the current radio station or change the music being played.

4. **+ ▢ -** buttons

- ◆ Press the + button to increase the volume.
- ◆ Press the - button to decrease the volume.

Operation

Buttons and control devices


The Infotainment system is operated by using the function buttons, multifunction knob, and the menu indicated on the screen display.

The buttons and controls used in the system are the following:


- The Infotainment system buttons and control knob
- The steering wheel remote control buttons

System on and off




Press the  button to turn the system on.

 
Once the power is turned on, the previously used function will be executed after time, date, temperature, and function are ready.

Press the  button to turn the system off.

Turning off automatically

If you turn on the Infotainment system using the  button while the ignition switch (vehicle ignition key) is in the off position, the Infotainment system will automatically be turned off 10 minutes after the last user input.

Volume control



Turn the **VOL** control knob to adjust the volume.

- Using the steering wheel remote control, press the + and - buttons to adjust the volume.
- The current sound volume is indicated.
- Turning on the Infotainment system power will set the volume level to its previous selection (when it is less than the maximum startup volume).
- When turning on the power, the maximum startup volume value can be separately set (when the previous volume level is less than the maximum starting volume).

Auto volume control

Once the speed-compensating sound volume setup starts operating, the volume will automatically be controlled according to the vehicle's speed to offset the noise from the engine and tyres. (Refer to **Settings** → **Radio settings** → **Auto volume control**).


Volume limit at high temperatures

If the inside temperature of the radio is very high, the Infotainment system will limit the controllable maximum volume.

If necessary, the volume will automatically decrease.


Tone settings

From **Tone settings**, sound features can be setup differently according to the FM, AM or DAB radio and each audio player's functions.

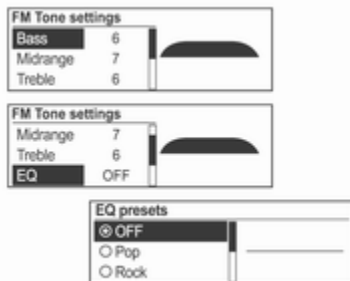

Press the **TONE** button when using the relevant functioning mode.

Turn the multifunction knob to select the desired tone control mode, and then press the multifunction knob.

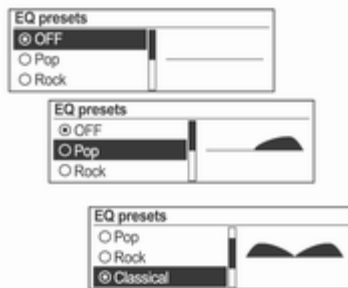

Turn the multifunction knob to select the desired tone control value, and then press the multifunction knob.

Tone settings menu

- **Bass:** Adjust the bass level from -12 to +12.
- **Midrange:** Adjust the midrange level from -12 to +12.

- **Treble:** Adjust the treble level from -12 to +12.
- **EQ (Equaliser):** Select or turn off the sound style (**OFF** ↔ **Pop** ↔ **Rock** ↔ **Classical** ↔ **Talk** ↔ **Country**).
- **Fader:** Adjust the front/rear speaker balance from front 15 to rear 15 in the six speaker system vehicle model.
- **Balance:** Adjust the left/right speaker balance from left 15 to right 15.

Select a function

FM, AM or DAB radio



Press the **RADIO/BAND** button to select FM, AM or DAB radio.

Press the multifunction knob to open the **FM menu**, **AM menu** or **DAB menu** that includes options for selecting broadcast stations.


CD/MP3 disk player



- (1) Audio CD
- (2) Audio CD with text
- (3) MP3/WMA CD

Insert an audio CD or MP3 (WMA) disc to be played with the printed surface facing upwards in the disk slot. When a disc is already inserted, press the **CD** button to select the CD/MP3 player.

From the steering wheel remote control, press **Δ SRC ∇** to select the CD/MP3 player.

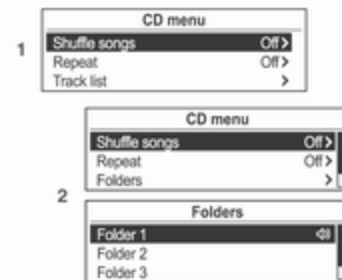

- (1) Audio CD
- (2) MP3/WMA CD

Press the multifunction knob to open the menu with options for the relevant function or the menu of the relevant device.


USB/iPod audio play or AUX input



Connect the USB/iPod with music files to be played to the USB connecting terminal or connect the audio output of the external audio equipment to be listened to the AUX input terminal.


When the USB, iPod or AUX device is already inserted, repeatedly press the **AUX** button to select the desired function (**AUX** → **USB** → Bluetooth audio → **AUX** → ...)

From the steering wheel remote control, press **Δ SRC ▽** to select the desired mode.

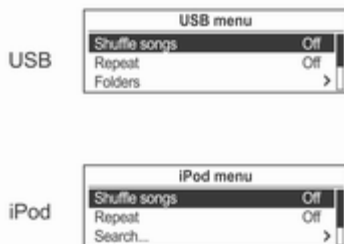

Press the multifunction knob to open the menu with options for the relevant function or the menu of the relevant device.

 Bluetooth handsfree phone device



Press the **📶/📞** button to select the Bluetooth handsfree phone function.
 Press the multifunction knob to open the **Bluetooth** menu with options for the relevant function.

Personalisation

Main buttons and controls

The buttons and controls used in the **Settings** are the following.

(11) **CONFIG** button

Press this button to enter the **Settings** menu.

(10) Multifunction knob

- Turn the control knob to select the desired menu or setup item.
- Press the button to select/enter the detailed control screen provided by the current menu or setup item.


(9) ⇐ **BACK** button

Cancel the input item or return to the previous screen or menu.

How to use the Settings menu for personalisation

- Setup menus and functions may differ according to the vehicle model.
- Reference: Table of information for the **Settings** menu below.

Example: Settings → Time Date → Set date: 23 Jan 2012

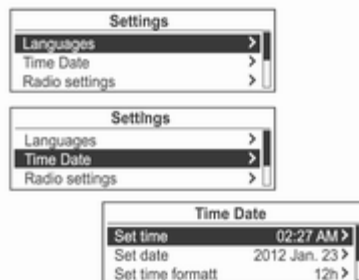


Press the **CONFIG** button for the **Settings** menu.

After referring to the table of information for the **Settings** menu below, turn the multifunction knob to move to the desired settings menu, and then press the multifunction knob.




- Indicates the detailed list for the relevant settings menu or functioning state.
- If there is another detailed list from the relevant detailed list, you can repeat this action.

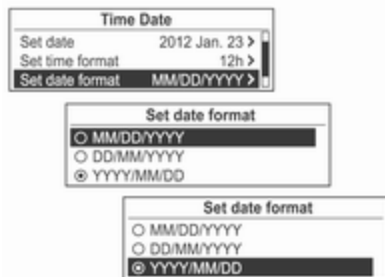

Turn the multifunction knob to attain the desired setup value or functioning state, and then press the multifunction knob.

- If the relevant detailed list is made of several items, then repeat this action.
- Set/enter the relevant setup value or the functioning state will change.

Table of information for Settings Languages

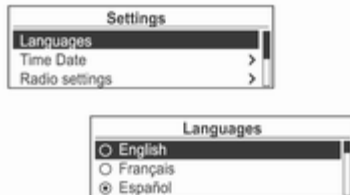


Select the desired language for the display.

Time Date



- **Set time:** Manually set the hours and minutes for the current time.
- **Set date:** Manually set the current year/month/date.
- **Set time format:** Select 12h or 24h time display.
- **Set date format:** Set the date display format.
 YYYY.MM.DD: 2012 Jan. 23
 DD/MM/YYYY: 23 Jan. 2012
 MM/DD/YYYY: Jan. 23, 2012
- **RDS clock synchronization:** Select On or Off.


Radio settings

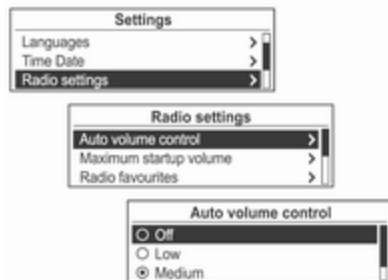

- **Auto volume control:** Set **Off/Low/Medium/High**.
- **Maximum startup volume:** Manually set the maximum limit for the startup volume.
- **Radio favourites:** Manually set the **Max. number of favourites pages**.
- **RDS options:** Set the RDS options.
 - **RDS:** Select **On** or **Off**.
 - **Regional:** Select **On** or **Off**.
 - **Text scroll freeze:** Select **On** or **Off**.
 - **Radio text:** Select **On** or **Off**.

- **TA volume:** Set the TA volume.
- **DAB settings:** Set the **DAB settings**.
 - **Auto ensemble linking:** Select **On** or **Off**.
 - **Auto linking DAB-FM:** Select **On** or **Off**.
 - **Dynamic audio adaption:** Select **On** or **Off**.
 - **Band selection:** Set **Both**, **L-Band** or **Band III**.

Bluetooth settings

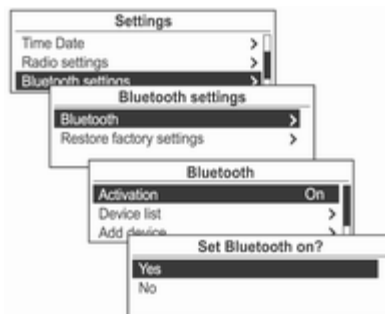

- **Activation:** Select **On** or **Off**.
- **Device list:** Select the desired device and **Select**, **Disconnect** or **Delete**.
- **Pair device:** Try pairing a new Bluetooth device.
- **Change Bluetooth code:** Manually change/set the Bluetooth code.
- **Restore factory settings:** Restore the initial setup values back to the default settings.

Radio

Usage	90
Radio data system (RDS)	98
Fixed mast antenna	102

Usage

Before using FM, AM or DAB radio

Main buttons and controls

(3) **RADIO/BAND** button

Toggle between FM, AM or DAB band radio.

(10) Multifunction knob

- Turn this control knob to manually find a broadcasting frequency.
- Press this button to access the menu screen from the current mode.

(9) **BACK** button

Cancel the input item or return to the previous screen/menu.

(17) / buttons

- Press these buttons to automatically search for available radio stations.
- Press and hold these buttons to change the radio frequency as desired, and then let the button stop at the current frequency.

(16) **FAV 1-2-3** button

Press this button to move through the pages of saved favourite radio stations.

(1) **1 ~ 6** preset buttons

- Press and hold any of these preset buttons to register the current radio station to that button.
- Press this button to select the station registered to the preset button.

(15) **AS 1-2** button

- Press and hold this button to automatically store the radio stations to the AS station pages 1 or 2.
- Press this button to select the AS station pages 1 or 2.

(14) **TP** button

While using the FM RDS function, turn the **TP** (Traffic Programme) function **On** or **Off**.

(12) **INFO** button

View the information for the broadcasted radio stations.

(6) button

Press this button to turn the mute function on and off.


Listening to a radio or DAB station

Selecting the FM, AM or DAB mode




Repeatedly press the **RADIO/BAND** button to select FM, AM or DAB band. The previously chosen broadcasting station will be received.

Automatically searching for a radio station

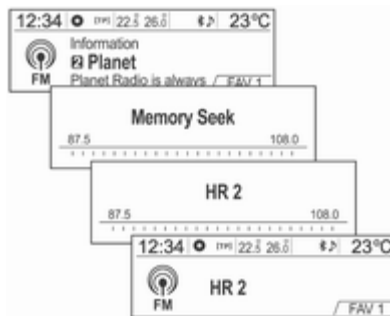


Press the ◀◀ / ▶▶ buttons to automatically search for available radio stations with good reception.

Automatically searching for the DAB service component

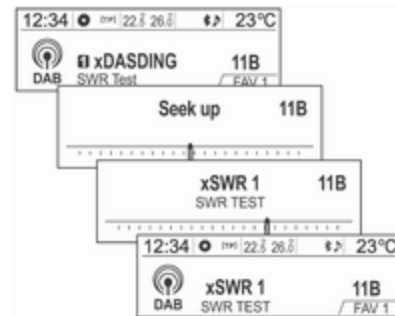


Press the ◀◀ / ▶▶ buttons to automatically seek for the available DAB service component in the current ensemble.

Seeking for a radio station

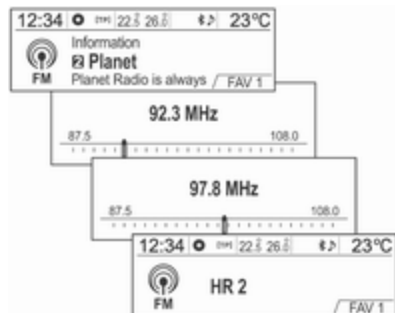


Press and hold the ◀◀ / ▶▶ buttons to quickly change the frequency, and then release the button at the desired frequency.

Seeking for a DAB ensemble

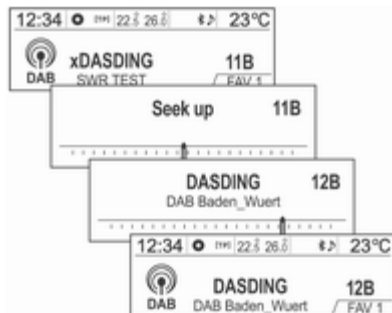


Press and hold the ◀◀ / ▶▶ buttons to automatically seek for the available DAB service component with good reception.


Linking the DAB service

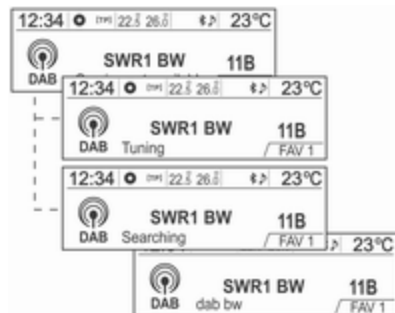

(DAB-DAB on/DAB-FM off)

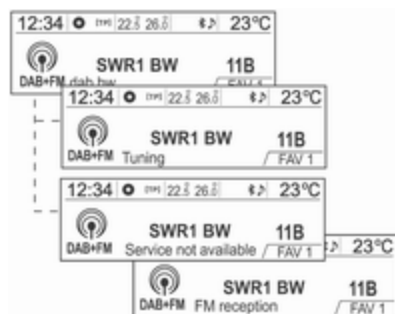


(DAB-DAB off/DAB-FM on)

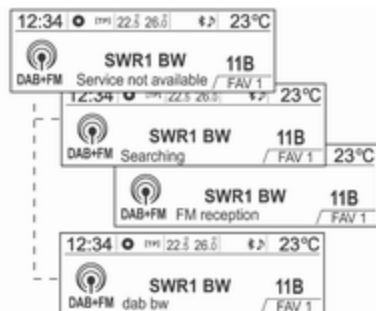

(DAB-DAB on/DAB-FM on)


When you setup the **Auto linking DAB-FM** as activated, if the DAB service signal is weak, the Infotainment system receives the linked service component automatically (refer to **Settings** → **Radio settings** → **DAB settings** → **Auto linking DAB-FM**).

Tuning a radio station manually

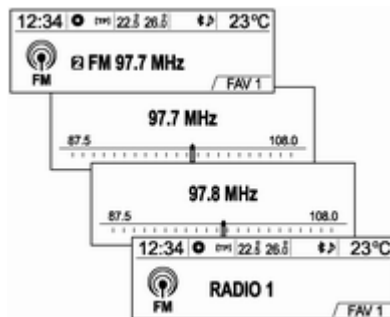

Turn the multifunction knob to manually find the desired broadcasting frequency.

Tuning a DAB station manually

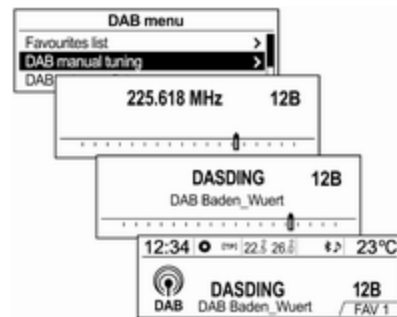


From the DAB mode, press the multifunction knob to enter the **DAB menu**.

Turn the multifunction knob to select **DAB manual tuning** and then press the multifunction knob.

Turn the multifunction knob to manually find the desired broadcasting frequency, and then press the multifunction knob.

Using the DAB stations list

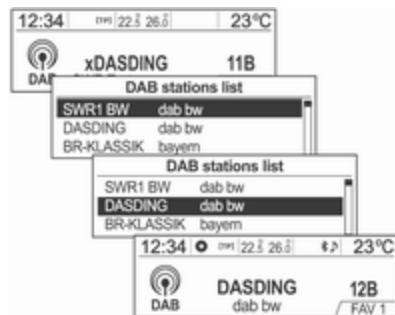


Turn the multifunction knob to display the **DAB stations list**.

- The **DAB stations list** information will be displayed.
- If the **DAB stations list** is empty, the **DAB stations list** update is started automatically.

Turn the multifunction knob to select the desired list, and then press the multifunction knob to receive the relevant broadcasting channel.

Showing the DAB information

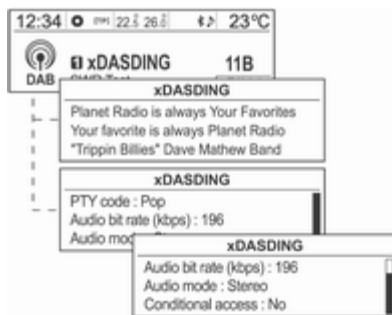

Repeatedly press the **INFO** button to select the desired display mode for the DAB station information.

The number 1 broadcasting information of the selected favourites preset page (**FAV1**, **FAV2**, etc.) will be displayed.

Using the preset buttons

Registering the preset button




Press the **FAV 1-2-3** button to select the desired page of saved favourites.

- Up to 3 favourites pages can be saved, and each page can store up to six radio or DAB stations.

- It is possible to setup the number of favourites pages being used under **Settings → Radio settings → Radio favourites → Max. number of favourites pages**.
- If a new radio station is registered to one of the previously registered 1 ~ 6 preset buttons, its previous content will be deleted and replaced with the new radio or DAB station that is saved.

Listening to the preset button directly

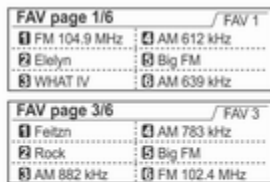



Repeatedly press the **FAV 1-2-3** button to select the desired favourites presets page.

The number 1 broadcasting information of the selected favourites presets page will be displayed.

Press one of the 1 ~ 6 preset buttons to directly listen to the radio or DAB station saved to that button.

Using the auto store stations

 
Registering the stations automatically

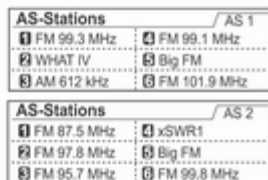

Hold down the **AS 1-2** button to store the stations with good reception to that button of the auto store page.

- An update message appears on the display.
- Up to two pages can be saved and each page can store up to six radio stations.

Listening to the auto stored stations

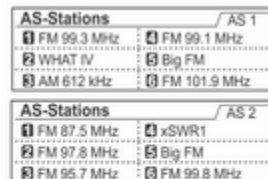

Repeatedly press the **AS 1-2** button to select the desired auto store preset page.

The number 1 broadcasting information of the selected favourites page will be displayed.

Press one of the 1 ~ 6 preset buttons to directly listen to the radio station saved to that button.

Using the FM, AM or DAB menu



Press the multifunction knob to display the radio menu or **DAB menu**.

Turn the multifunction knob to move to the desired menu item, and then press the multifunction knob to select the relevant item or to display the item's detailed menu.

FM, AM or DAB menu → Favourites list




From **FM menu**, **AM menu** or **DAB menu**, turn the multifunction knob to select the **Favourites list**, and then press the multifunction knob.

The **Favourites list** information will be displayed.

Turn the multifunction knob to select the desired **Favourites list**, and then press the multifunction knob to receive the relevant broadcasting channel.

DAB menu → DAB manual tuning

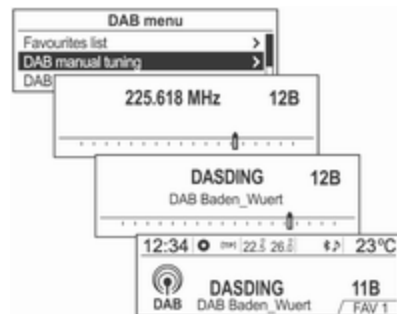

From the **DAB menu**, turn the multifunction knob to select **DAB manual tuning**, and then press the multifunction knob. Turn the multifunction knob to manually find the desired broadcasting frequency.

FM or AM menu → FM or AM stations list



From the **FM menu** or **AM menu**, turn the multifunction knob to select the **FM stations list** or the **AM stations list**, and then press the multifunction knob.

The **FM stations list** or **AM stations list** information will be displayed.

Turn the multifunction knob to select the desired list, and then press the multifunction knob to receive the relevant broadcasting channel.

FM or DAB menu → FM or DAB category list



From the **FM menu** or **DAB menu**, turn the multifunction knob to move to the **FM category list** or the **DAB category list**, and then press the multifunction knob.

The **FM category list** or the **DAB category list** will be displayed.

Turn the multifunction knob to select the desired list, and then press the multifunction knob to receive the relevant broadcasting frequency.

DAB menu → DAB announcements



From the **DAB menu**, turn the multifunction knob and move to the **DAB announcements**, and then press the multifunction knob.

The DAB announcements will be displayed.

Turn the multifunction knob to select the desired list, and then press the multifunction knob to receive the relevant broadcasting frequency.

FM, AM or DAB menu → Update the FM, AM or the DAB stations list



From the **FM menu**, **AM menu** or **DAB menu**, turn the multifunction knob and move to **Update FM stations list**, **Update AM stations list** or **Update DAB stations list**, and then press the multifunction knob.

- The **FM stations list** update, **AM stations list** update or **DAB stations list** update will proceed.
- During the **FM stations list** update, **AM stations list** update or **DAB stations list** update, press the

multifunction knob or the **BACK** button to stop it from saving changes.

Radio data system (RDS)

- The Radio Data System (RDS) is a service by FM stations that considerably makes it easier to find radio stations with fault-free reception.



- RDS stations are indicated by the programme name with the broadcasting frequency.

View RDS broadcasting information

While receiving RDS broadcasting, press the **INFO** button to check RDS broadcasting information that is being received.

Configuring RDS



Press the **CONFIG** button to display the **Settings** menu.

Turn the multifunction knob to move to **Radio settings**, and then press the multifunction knob.


Turn the multifunction knob to select **RDS options**, and then press the multifunction knob.

Switching RDS on and off

Set the RDS option **On** or **Off**.

The following advantages result from activating RDS:

- On the display, the programme name of the set station appears instead of its frequency.
- The Infotainment system always tunes into the best receivable broadcasting frequency of the set station by means of AF (alternative frequency).

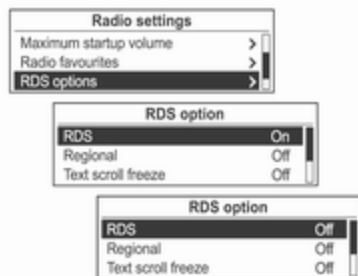

From **RDS options**, turn the multifunction knob to move to **RDS Off**, and then press the multifunction knob to turn on the RDS function.

Switching regionalisation on and off


RDS must be activated for regionalisation.

At certain times, some RDS stations broadcast regionally different programmes on different frequencies.

Set the option **Regional** to **On** or **Off**.

Only alternative frequencies (AF) with the same regional programmes are selected.


If regionalisation is switched off, alternative frequencies of the stations are selected without regarding regional programmes.

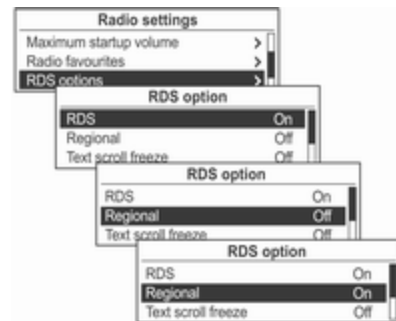

From **Settings** → **Radio settings** → **RDS options**, turn the multifunction knob to move to **Regional Off**, and then press the multifunction knob to turn on the **Regional** function.

Switching Text scroll freeze on and off


Switch the **Text scroll freeze** function (for displaying the information of the programme service) on or off:

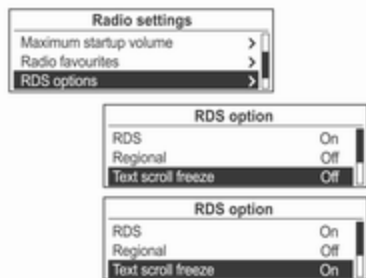

From **Settings** → **Radio settings** → **RDS options**, turn the multifunction knob to move to **Text scroll freeze Off**, and then press the multifunction knob to turn on the **Text scroll freeze** function.

Switching the Radio text function on and off

Switch the **Radio text** function for displaying the information of the programme service on and off.

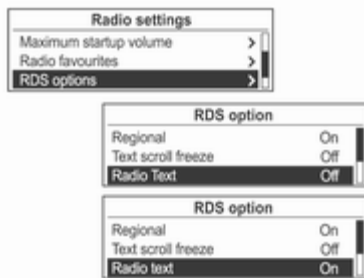


From **Settings** → **Radio settings** → **RDS options**, turn the multifunction knob to select **Radio text Off**, and then press the multifunction knob to turn on the **Radio text** function.

Volume of the traffic announcements (TA)

The minimum volume of the traffic announcements (TA) can be preset.

The minimum volume of the traffic announcements can be increased or reduced in comparison to the normal audio volume.

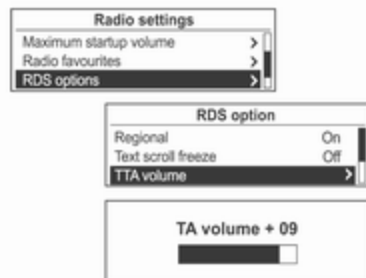

From **RDS options**, turn the multifunction knob to move to **TA volume**, and then press the multifunction knob.

Turn the multifunction knob to adjust the **TA volume** level, and then press the multifunction knob.

Radio traffic service

TP = traffic programme


Radio traffic service stations are RDS stations that broadcast traffic news.

Switch the traffic announcement standby facility of the Infotainment system on or off:



Press the **TP** button to turn the traffic programme service function on or off.

- If the radio traffic service is switched on, [] is displayed in the radio main menu.

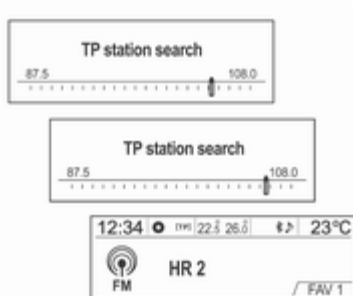

- If the current station is not a radio traffic service station, then a search is automatically started for the next radio traffic service station.
- Once a radio traffic service station has been found, [TP] is displayed in the radio main menu.
- If the radio traffic service is switched on, then the CD, MP3, USB, iPod, Bluetooth music or AUX replay is interrupted for the duration of the traffic announcement.

Blocking out traffic announcements

Block out a traffic announcement, e.g. during CD or MP3 replay or during radio reception:



Press the **TP** button.

Switch on the radio traffic service and fully turn down the volume of the Infotainment system.

The traffic announcement is aborted, but the radio traffic service remains switched on.

Blocking out current traffic announcements


Block out a current traffic announcement, e.g. during TA radio reception:



(1) Blocking out the status indicator:
[TP] → TP

Press the **TP** button.

Fixed mast antenna

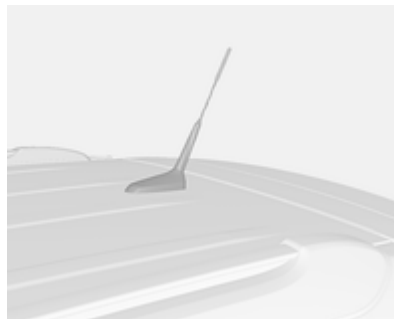

To remove the roof antenna, rotate it counterclockwise. To install the roof antenna, rotate it clockwise.

Caution

Be sure to remove the antenna before entering a place with a low ceiling or it may be damaged.

Entering the automatic car wash with the antenna installed may result in damage to the antenna or

the roof panel. Be sure to remove your antenna before entering the automatic car wash.

Install the antenna fully tightened and adjusted to the upright position to ensure proper reception.

Audio players

CD player	103
Auxiliary devices	111

CD player

The CD/MP3 player of this system can play audio CD and MP3 (WMA) discs.

Before using the CD player

Important information about audio CD and MP3 (WMA) discs

Caution

In any case, do not insert any DVDs, mini disks with a diameter of 8 cm, or discs with abnormal surfaces in this CD/MP3 (WMA) player.

Do not put any stickers on the disk surface. Such disks may get stuck in the CD player, and damage the drive device. If this occurs, then the device will need to be replaced at high costs.

- An audio CD disc with an anti-piracy function with no compatibility with the audio CD standard may not work properly or not at all.

- CD-R and CD-RW discs that are manually recorded are more often handled with carelessness than the original CD discs. Manually recorded CD-R and CD-RW discs should be handled with special care. Please refer to the following.
- Manually recorded CD-R and CD-RW discs may not play properly or not at all. In such cases, this is not a problem with the device.
- When changing discs, take care to not smear any fingerprints on the playing side.
- After removing the disc from the CD/MP3 player, make sure to immediately put the disc into a disc sleeve to prevent it from being damaged or smeared with dust.
- If the disc is smeared with dust or liquid, then this may cause problems by contaminating the lens of the CD/MP3 player inside the device.
- Protect the disc from heat and exposure to direct light.

Usable disc type

- This product can play audio CD/MP3 (WMA) discs.
 - ◆ CD-DA: CD-R/CD-RW
 - ◆ MP3 (WMA): CD-R/CD-RW/CD-ROM
- The MP3 (WMA) files below cannot be played.
 - ◆ Files encoded in MP3i (MP3 interactive) or MP3 PRO standards
 - ◆ MP3 (WMA) files encoded in non-standards
 - ◆ MP3 files that are not in MPEG1 Layer3 format

Cautions for using discs

- Do not use any of the discs described below. Excessive use of these discs in the player may cause problems.
 - ◆ Discs with stickers, labels, or a protective cell attached
 - ◆ Discs affixed with a label printed with an inkjet printer

- ◆ Discs that are made by over-burning, thus holding data exceeding the standard capacity
- ◆ Discs with cracks or scratches or which are bent
- ◆ An 8 cm disc or a non-circular disc (quadrangle, pentagon, oval)
- Do not put anything other than discs in the disc slot since this may cause trouble or damage.
- The disc player may not work properly if the heater is turned on in cold weather due to moisture created inside the device. If this is a concern, keep the product off for about one hour before use.
- Play may be stopped due to the vehicle shaking while driving on rugged roads.
- Do not forcefully take out or insert the disc or block it with your hand while it is being ejected.
- Insert the disc with the printed side facing up. It cannot be played if it is inserted upside down.

- Do not touch the recording side with your hand while handling the disc (the side without any print or decoration).
- Place discs that are not being used in cases, and keep them in a place not exposed to direct light or high temperature.
- Do not smear any chemical substances on the disc. Clean discs of dirt with a moist, soft cloth, wiping from the centre to the edge.

Caution for using CD-R/RW discs

- When using CD-R/CD-RW discs, only the discs that have been "finalised" can be used.
- Discs that are created with a PC may not play according to the application programme setup and environment.
- CD-R/CD-RW discs, especially bulk discs, may not work if they are exposed to direct light or high temperature, or if they are kept inside your vehicle for a long time.

- The title and other text information recorded on CD-R/CD-RW discs may not be displayed on this device.
 - CD-RW discs may have longer loading times than CDs or CD-R discs.
 - Damaged music files may not be played or will be cut off while playing.
 - Folders and music files are displayed in the order of: symbol → number → alphabet.
 - Some anti-piracy discs may not be played.
 - An MP3 (WMA) disc can have a maximum of 512 files for each of the 10 folder levels, and a maximum number of 999 files can be played.
 - The folder and file names are not arranged, and are indicated in the order in which they are recorded on the disc.
- This system can only recognise MP3 (WMA) discs made in ISO-9660 level 1/2 or in the Joliet file system. (It does not support the UDF file system.)
 - MP3 (WMA) files are not compatible with packet writing data transmission.
 - The disc on which MP3 (WMA) files and audio data (CDDA) are written may not be played if it is a CD-Extra or Mixed-Mode CD.
 - The file/folder names that can be used per disc storage type are the following, including the four-digit file name extensions (.mp3):
 - ◆ ISO 9660 Level 1: Maximum of 12 characters
 - ◆ ISO 9660 Level 2: Maximum of 31 characters
 - ◆ Joliet: Maximum of 64 characters (1 byte)
 - ◆ Windows long file name: Maximum of 28 characters (1 byte)

Cautions for using MP3 (WMA) music files

- This product can play MP3 (WMA) files with .mp3, .wma (lower case letters) or .MP3 and .WMA (capital letters) file name extensions.
- MP3 files that can be played by this product are the following:
 - ◆ Bit rate: 8kbps ~ 320kbps
 - ◆ Sampling frequency: 48kHz, 44.1kHz, 32kHz (for MPEG-1), 24kHz, 22.05kHz, 16kHz (for MPEG-2)
- While this product can play files with an 8kbps ~ 320kbps bit rate, files with a bit rate above 128kbps will result in high quality sound.
- This product can display ID3 tag (version 1.0, 1.1, 2.2, 2.3 or 2.4) information for MP3 files, such as the album name and the artist.

- To display album (disc title), track (track title), and artist (track artist) information, the file should be compatible with the ID3 tag V1 and V2 formats.
- This product can play MP3 files using VBR. When playing an MP3 file of this VBR type, the remaining time displayed may be different from the real time.

Playing CD/MP3

Main buttons and controls

(4) CD button

Select the CD/MP3 player.

(10) Multifunction knob

- Turn the control knob to move to the track list, menu, or MP3 (WMA) track information item.
- Press the button to display the menu screen for the current item or current mode.

(17) ◀◀ / ▶▶ buttons

- Press these buttons to play the previous or next track.
- Hold down these buttons to rewind or fast forward through the track, and release the button to resume playing at normal speed.

(13) ▲ button

Eject the disc.

(12) INFO button

Display the information for the track being played.

(6) 🔇/🔊 button

Hold down the button to turn the mute function on or off.

Inserting and playing the disk



Insert the disc to be played with the printed surface facing upwards in the disc inserting slot.

- Once the reading of the disc information is completed, the Infotainment system will automatically start playing from track 1.
- When a non-readable disc is inserted, the disc will automatically be ejected with the display of a disc error message, and then the system will switch to the previously used function or FM radio.



(1) Audio CD

(2) Audio CD with text

(3) MP3/WMA CD

When a disc to be played is already inserted, repeatedly press the **CD** button to select CD/MP3 play.

- If there is no disc to be played, **No CD inserted** will be displayed on the screen and the function will not be selectable.
- The track that was previously played will automatically play.

Ejecting the disc



To eject the disc, press the **▲** button and take out the disc.

- When the disc comes out, it automatically switches to the previously used function or FM radio.
- The disc will automatically be inserted back again if it is not taken out for some time.

Changing the playing track



Press the **◀◀ / ▶▶** buttons in play mode to play the previous or next track.

Using the steering wheel remote control, tracks can easily be changed by turning the **Δ SRC ▽** control knob.



For MP3 (WMA) tracks, turn the multifunction knob to move to the play track list, and then press the multifunction knob to instantly change it.

Changing playing position



Hold down the ◀◀ / ▶▶ buttons during play mode to rewind or fast forward through the song. Release the button to resume playing the song at normal speed.

The volume is slightly reduced during rewinding and fast forwarding, and the playing time will be displayed.

View information on playing track



Press the **INFO** button in play mode to display information about the track being played.

If there is no information on the playing track for audio CDs, then the system will display **No information**.

For MP3 (WMA) tracks, more information can be viewed by turning the multifunction knob from the track information display.

- The information displayed includes the file name, folder name, and ID3 tag information saved with the song.


If incorrect ID3 tag information (e.g. artist, song title) was added to the MP3 (WMA) files before they were burnt to disc, this information will be displayed as is by the Infotainment system.

Incorrect ID3 tag information cannot be modified or corrected on the Infotainment system (ID3 tags can only be corrected on a PC).

- The information for songs expressed in special symbols or in unavailable languages may be displayed as ---- or are not displayed at all.

Using the CD menu


Changing the playback mode

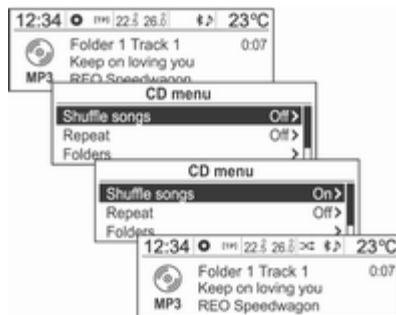

From the play mode, press the multifunction knob to display the **CD menu**.

Turn the multifunction knob to select the shuffle or repeat playback functions, and then press the multifunction knob to turn the relevant functions **On** or **Off**.


CD menu → Track list

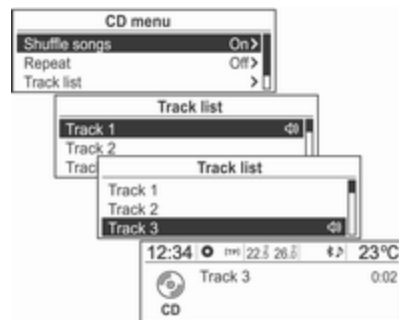

For audio CD discs, turn the multifunction knob from the **CD menu** to select the **Track list**, and then press the multifunction knob.

Turn the multifunction knob to find the desired track list, and then press the multifunction knob to play the selected track.

CD menu → Folders

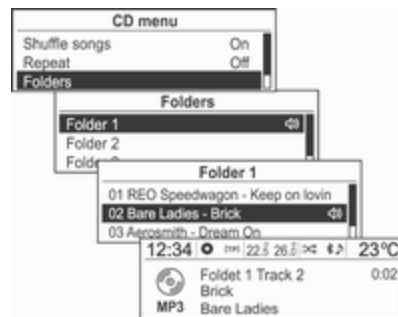

For MP3 (WMA) discs, turn the multifunction knob from the **CD menu** to select **Folders**, and then press the multifunction knob.

Turn the multifunction knob to select the desired folder, and then press the multifunction knob.

Turn the multifunction knob to find the desired track, and then press the multifunction knob to play the selected track from the selected folder.

CD menu → Search...




For MP3 (WMA) discs, turn the multifunction knob from the **CD menu**, move to **Search...**, and then press the multifunction knob.

- After the system reads the disc information, the first song of the **Playlist** will be displayed.
- If there are no music files in the **Playlist**, the first song from the **Artists** will be displayed.



Press the multifunction knob again, and from the displayed search item, turn the multifunction knob to select the desired play mode.

The number of relevant songs will be displayed by **Playlist**, **Artists**, **Albums**, **Songs** and **Genres**.

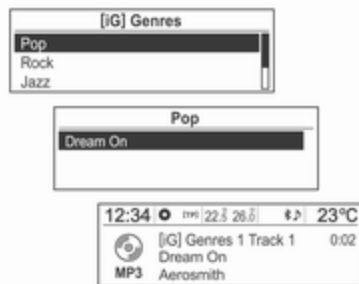

Turn the multifunction knob to select the detailed classification item, and then press the multifunction knob.

Turn the multifunction knob to find the desired track/title, and then press the multifunction knob to play the selected track.

Auxiliary devices

USB player

Cautions for using USB devices

- Operation cannot be guaranteed if the HDD built-in USB mass storage device or CF or SD memory card is

connected by using an USB adapter. Use a USB of flash memory type storage device.

- Take caution to avoid static electricity discharge when connecting or disconnecting the USB device. If connection and disconnection are repeated many times in a short time, this may cause a problem in using the device.
- Operation is not guaranteed if the connecting terminal of the USB device is not metal.
- The connection with i-Stick Type USB storage devices may be faulty due to vehicle vibration, so their operation cannot be guaranteed.
- Be careful not to touch the USB connecting terminal with an object or any part of your body.
- The USB storage device can only be recognised when it is formatted in FAT16/32 file format. Only devices with an allocated unit size of 512 byte/sector or 2,048 byte/

sector can be used. NTFS and other file systems cannot be recognised.

- According to the type and capacity of the USB storage device and the type of the stored file, the time it takes to recognise the files may differ. This is not a problem with the product in this case, so please wait for the files to be processed.
- Files in some USB storage devices may not be recognised due to compatibility problems, and connections with a memory reader or a USB hub are not supported. Please check the device's operation in the vehicle before use.
- When devices such as an MP3 player, mobile phone, or digital camera are connected through a mobile disc, it may not operate normally.
- Do not disconnect the USB storage device while it is being played. This may cause damage to the product or the performance of the USB device.

- Disconnect the connected USB storage device when the vehicle ignition is turned off. If the ignition is turned on while the USB storage device is connected, the USB storage device may be damaged or may not operate normally in some cases.
- USB storage devices can only be connected to this product for the purpose of playing music files.
The product's USB terminal should not be used to charge USB accessory equipment since the heat generation using the USB terminal may cause performance issues or damage to the product.
- When the logical drive is separated from a USB mass storage device, only the files from the top-level logical drive can be played for USB music files. This is why the music files to be played should be stored in the top-level drive of the device. Music files, in particular USB storage devices, may also not be

normally played if an application is loaded by partitioning a separate drive inside the USB device.

- Music files to which DRM (Digital Right Management) is applied cannot be played.
- This product can support USB storage devices that are up to 16 Gigabytes in capacity with a limit of 999 files, 512 folders, and 10 stages of folder structure. Normal usage cannot be guaranteed for storage devices that exceed this limit.

Cautions for using USB music files

- Damaged music files may be cut off during playback or may not be played at all.
- Folders and music files are displayed in the order of Symbol → Number → Language.
- A maximum of 64 characters can be recognised for folder or file names written in the Joliet file system.

About MP3 (WMA) music files

- The MP3 files that can be played are the following:
 - ◆ Bit rate: 8kbps ~ 320kbps
 - ◆ Sampling frequency:
48kHz, 44.1kHz, 32kHz (for MPEG-1)
24kHz, 22.05kHz, 16kHz (for MPEG-2)
- This product displays MP3 (WMA) files with the mp3, .wma (lower case letters) or .MP3 or .WMA (capital letters) file name extensions.
- This product can display ID3 tag (version 1.0, 1.1, 2.2, 2.3, 2.4) information about album, artist, etc. for MP3 files.
- The file/folder names that can be used according to the storage type are the following, including the four character file name extension (.mp3):

- ◆ ISO 9660 Level 1: Maximum of 12 characters
- ◆ ISO 9660 Level 2: Maximum of 31 characters
- ◆ Joliet: Maximum of 64 characters (1 byte)
- ◆ Windows long file name: maximum of 28 characters (1 byte)
- This product can play MP3 files which use VBR. When a VBR type MP3 file is being played, the remaining time displayed may be different from the actual time remaining.

Main buttons and controls

The following main buttons and controls are used to play USB music files.

(5) **AUX** button

Press the button repeatedly when the USB device is connected to select the USB play mode.

(10) Multifunction knob

- Turn the control knob to move to the track list, menu or MP3 (WMA) track information.

- Press the button to display the menu screen provided by the current item or current mode.

(17) ◀◀ / ▶▶ buttons

- Press these buttons to play the previous or next track.
- Hold down these buttons to rewind or fast forward, and then release to play at normal speed.

(12) **INFO** button

Displays the information of the track being played.

 
(6) ⏸ button

Hold down the button to turn the pause function on or off.


(9) ⏮ **BACK** button

Cancel the input item or return to the previous menu.

Connecting the USB storage device



Connect the USB storage device in which music files are stored to the USB connection terminal.

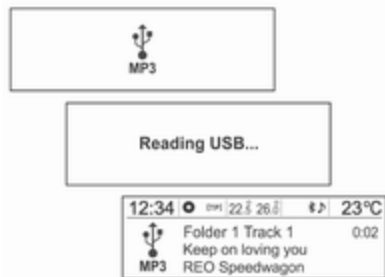

- Once the product finishes reading the information on the USB storage device, it will automatically play from track 1.
- If a non-readable USB storage device is connected, then an error message will appear and the product will automatically switch to the previously used function or the FM radio function.

If the USB storage device to be played is already connected, repeatedly press the **AUX** button to select the USB player.

It will automatically play from the point at which the playback stopped.

Afterwards, the functions of the USB player are operated similarly to CD/MP3 playback.

Ending the USB music files playback

Press the **RADIO/BAND** or **CD** button to select other functions.

To end the play and disconnect the USB storage device, use **Menu USB** → **Remove USB** to safely remove the USB storage device.

Using the USB menu

The instructions for **Shuffle songs/Repeat/Folders/Search...** from the **Menu USB** are similar to the CD/MP3 player's **CD menu**; only the **Remove USB** item has been added. Refer to the CD/MP3 player functions from the **CD menu**.

Menu USB → Remove USB



Press the multifunction knob from play mode to display the **Menu USB**. Turn the multifunction knob to select **Remove USB**, and then press the multifunction knob to display the message notifying that it is safe to remove the USB device.

Disconnect the USB device from the USB connection terminal.

Return to the previously used function.

iPod player

Main buttons and controls

The following main buttons and controls are used to play iPod music files.

(5) AUX button

Press the button repeatedly when the iPod is connected to select the iPod play mode.

(10) Multifunction knob

- Turn the control knob to move and display the track list that is playing.
- Press the button to display the menu screen provided by the current item or current mode.

(17) ◀◀ / ▶▶ buttons

- Press these buttons to play the previous or next track.
- Hold down these buttons to rewind or fast forward, and then release to play at normal speed.

(12) INFO button

Displays the information of the track being played.


(6) ⏏ button

Hold down the button to turn the pause function on or off.

(9) ⏮ BACK button

Cancel the previous item or return to the previous menu.

Connecting the iPod player

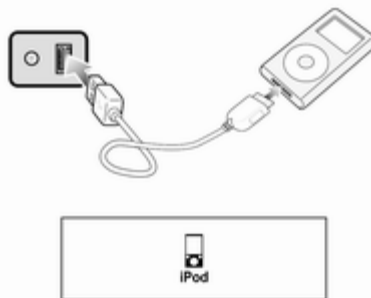

Connect the iPod device in which the music files are stored to the USB connection terminal.

- The iPod product models that are connected/supported by this product are the following:
 - ◆ iPod 2G Nano/iPod 3G Nano/iPod 4G & 5G Nano

- ◆ iPod 120GB & 160GB Classic
- ◆ iPod 1G, 2G, & 3G Touch
- ◆ iPhone 3G & 3GS



- Only connect the iPod to this product with connection cables supported by the iPod products. Other connection cables cannot be used.
- In some cases, the iPod product may be damaged if the ignition is turned off when it is connected to the product.

When the iPod product is not being used, keep it separately from this

product with the vehicle ignition turned off.

- Once the product finishes reading the information on the iPod device, it will automatically play from track 1 or the previously played track.
- If a non-readable iPod device is connected, then the relevant error message will appear and the product will automatically switch to the previously used function or the FM radio function.



If the iPod device to be played is already connected, repeatedly press the **AUX** button to select the iPod player.

- It will automatically play from the previously played point.
- The playback functions and the information display items of the iPod player used with this product may be different from the iPod in terms of play order, method, and the information displayed.

Afterwards, the functions to play the iPod are operated similarly to CD/MP3 playback.

Log-off the iPod playback

To end the playback, press the **RADIO/BAND** or the **CD** button to select other functions.

Using the iPod Menu

From the **iPod Menu**, the instructions for **Shuffle songs/Repeat/Search...** (including **Audiobooks** and **Composers**) are similar to the CD/MP3 player's **CD menu**; only the **Eject iPod** item has been added. Refer to each item of CD/MP3 for use.

iPod Menu → Eject iPod



From the iPod mode, press the multifunction knob to display the **iPod Menu**.

Turn the multifunction knob to move to **Eject iPod**, and then press the multifunction knob to display the message notifying you that it is safe to remove the device.

Separate the iPod device from the USB connection terminal.

Return to the previously used function.

Exterior sound (AUX) Input

Main buttons and controls

The following main buttons and controls are used to enjoy the rich sound of the Infotainment system from the sound output of a connected exterior sound device.

(5) **AUX** button

When an exterior sound device is connected, press the button repeatedly to select the exterior sound input mode.


(2) **⏮** button with **VOL** control knob

Turn the control knob to adjust the volume.


(6) **🔊** button

Hold down this button to turn the mute function **On** or **Off**.

Connecting an exterior sound

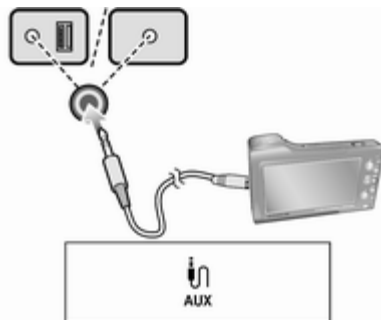

 Connect the audio output of the external audio equipment to the AUX input terminal.



The Infotainment system will automatically switch to the exterior sound (AUX) input mode when the exterior sound device is connected.

Press the **AUX** button to switch to the exterior sound input mode if the exterior sound system has already been connected.

Turn the **VOL** control knob to adjust the volume.

Phone

Bluetooth®	118
Hands free phone	123

Bluetooth®

Main buttons and controls

The following main buttons and controls are used to play music files or use the call functions via a Bluetooth device.

(6)  button

Press this button to activate the Bluetooth mode.

(5) **AUX** button

When a Bluetooth device with a music player function is connected, press this button repeatedly to select Bluetooth audio play mode.

(10) Multifunction knob

- Press the button in Bluetooth phone mode to display the menu screen.
- Turn the control knob to move to the menu or setup value.

(17)  /  buttons


- Press these buttons in Bluetooth audio play mode to play the previous or next track.
- Hold down these buttons to rewind or fast forward, and release to play at normal speed.

Connecting Bluetooth

Registering the Bluetooth device

Register the Bluetooth device to be connected to the Infotainment system with the vehicle ignition turned off.

Firstly, set up the Bluetooth device to be connected from **Bluetooth settings** to enable other devices to search for the Bluetooth device.

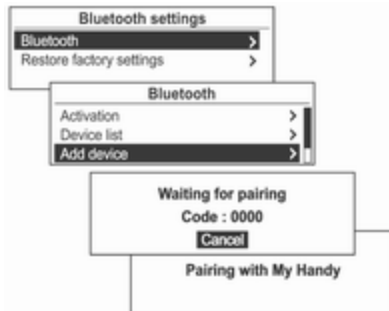

Press the **CONFIG** button, and use the multifunction knob to move to **Settings** → **Bluetooth settings** → **Bluetooth** → **Add device (Handsfree)**, and then press the multifunction knob.

 
- Bluetooth devices can be registered not only by using the **CONFIG** button, but also by using **Phone Menu** → **Bluetooth settings** → **Bluetooth** → **Add device (Handsfree)**.

- If there already is a Bluetooth device connected to the Infotainment system, the **Bluetooth is busy** message will appear.
- Connection standby will be displayed with a message and a security code. (The initial value is 0000, and can be changed from **Settings** → **Bluetooth settings** → **Bluetooth** → **Change Bluetooth code**.)

The Infotainment system can be found by searching the to-be-connected Bluetooth device.

Enter the security code for the Infotainment system through the Bluetooth device.


If the registration of the device to be connected to the Infotainment system is successful, then the screen will display the information of the Bluetooth device.




The Infotainment system can register up to five Bluetooth devices.

Connecting/deleting/separating the Bluetooth devices

Firstly, set up the Bluetooth device to be connected from **Bluetooth settings** to enable other devices to search for the Bluetooth device.

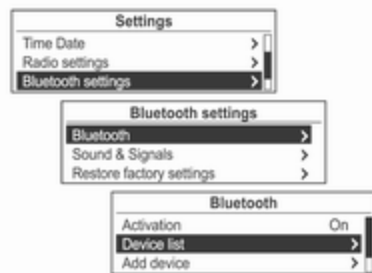

Press the **CONFIG** button, and use the multifunction knob to move to **Settings** → **Bluetooth settings** → **Bluetooth** → **Device list** and then press the multifunction knob.

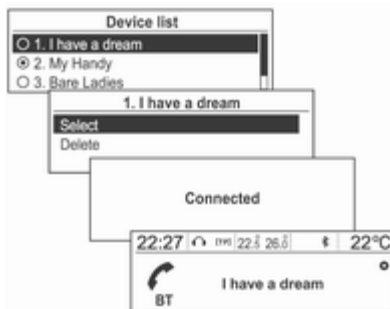

Use the multifunction knob to move from the registered Bluetooth device to the device to be connected, and then press the multifunction knob.



Use the multifunction knob to move from the registered Bluetooth device to the device to be deleted, and then press the multifunction knob.



To disconnect the currently connected Bluetooth device from the device list screen, select the connected device, which will display **Disconnect**, and then press the multifunction knob.

Cautions for registering/connecting Bluetooth

- When it is not possible to connect to Bluetooth, delete the entire device list from the Bluetooth

device to be connected, and try again. If deleting the entire device list does not work, then reinstall the battery and reconnect.

- If there is a problem after the Bluetooth device has been connected, use the multifunction knob to carry out **Settings** → **Bluetooth settings** → **Restore factory settings**.


Initialise the device with the problem caused by an error that occurred with the connection of the Bluetooth device and the Infotainment system.

- Sometimes, Bluetooth can only be connected through handsfree or the Bluetooth audio play functions despite a stereo headset being connected. In this case, try and reconnect the Infotainment system using the Bluetooth device.
- For Bluetooth devices that do not support stereo headsets, the Bluetooth audio play function cannot be used.

Bluetooth audio

How to play Bluetooth audio

- A mobile phone or Bluetooth device that supports A2DP (Advanced Audio Distribution Profile) versions over 1.2 must be registered and connected to the product.
- From the mobile phone or Bluetooth device, find the Bluetooth device type to set/connect the item as a stereo headset.

A musical note icon  will appear at the bottom right of the screen, if the stereo headset is successfully connected.

- Do not connect the mobile phone to the Bluetooth connection terminal. An error may occur if it is connected during the CD/MP3 and Bluetooth audio play mode.

Playing Bluetooth audio



Press the **AUX** button repeatedly to select the connected Bluetooth audio play mode.

If the Bluetooth device is not connected, then this function cannot be selected.

Activating the mobile phone or Bluetooth device will play the music files.

- The sound played by the Bluetooth device is delivered through the Infotainment system.
- For Bluetooth audio to play, the music must at least be played once from the music player mode of the mobile phone or Bluetooth device after connecting as a stereo headset. After being played at least once, the music player will automatically play upon entering play mode, and it will automatically stop when the music player mode ends. If the mobile phone or Bluetooth device is not in the waiting screen mode, some devices may not automatically play in Bluetooth audio play mode.

Press the ◀◀ / ▶▶ buttons to switch to the previous or next track, or hold down these buttons to fast forward or rewind.

- This function only operates with Bluetooth devices that support AVRCP (Audio Video Remote Control Profile) version 1.0 or above. (Depending on the Bluetooth device options, some

devices may display AVRCP being connected for the initial connection.)

- The information about the playing track and the track position will not be displayed on the Infotainment system screen.

Cautions for playing Bluetooth audio

- Do not change the track too quickly when playing Bluetooth audio.

It takes some time to transmit data from the mobile phone to the Infotainment system.

- The Infotainment system transmits the order to play from the mobile phone in the Bluetooth audio play mode. If this is done in a different mode, then the device transmits the order to stop.

Depending on the mobile phone's options, this order to play/stop may take some time to activate.

- If the mobile phone or Bluetooth device is not in the waiting screen mode, it may not automatically play despite being carried out from the Bluetooth audio play mode.

If Bluetooth audio playback is not functioning, then check to see if the mobile phone is in the waiting screen mode.

- Sometimes, sounds may be cut off during the Bluetooth audio playback. The Infotainment system outputs the sound from the mobile phone or Bluetooth device as it is transmitted.

Bluetooth error messages and measures

■ Bluetooth deactivated

Check if Bluetooth is activated. The Bluetooth function can be used upon activating Bluetooth.

■ Bluetooth is busy

Check if there are any Bluetooth devices connected. To connect another device, disconnect any other connected devices first, and then reconnect.

■ Device list is full

Check if there are less than 5 registered devices. No more than 5 devices can be registered.

■ No phone book available

This message will be displayed if the mobile phone does not support contacts transmission. If this message appears after several attempts, then the device does not support contacts transmission.

Caution

The message will be displayed when the transmission of contacts is supported while information with a device error is also transmitted. Update the device again if this occurs.


■ The phone book is empty


This message is displayed if no phone numbers are stored in the mobile phone. This will also be displayed if the phone log transmission is supported, but in a way that is not supported by the Infotainment system.

Hands free phone


Taking calls

When a phone call comes through the connected Bluetooth mobile phone, the track currently playing will be cut off and the phone will ring, displaying the relevant information.

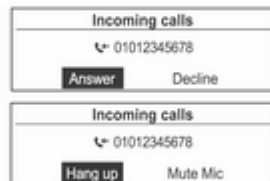

To talk on the phone, press the  button on the steering wheel remote control or turn the multifunction knob to move to the answer function, and then press the multifunction knob.




- To reject a call, press the  button on the steering wheel remote control or use the multifunction knob and select **Decline**.



- While talking on the phone, it is possible to block the transmitted sound by selecting the **Mute Mic** (mute microphone) item by using the multifunction knob.




- While talking on the phone, press and hold the  button from the steering wheel remote control to change to the private call mode (some phones may not support the private call mode depending on the phone's options).
- When a call is received with the Infotainment system and Bluetooth is being connected, there are mobile phones that do not automatically change to the private call mode. This depends on the original specifications of each mobile phone.



- When it is possible to use services related to a third-party conversation supported by the communications service provider through an application, it is possible to make calls during a call through the Infotainment system.
- While third or more-party conversations, displaying contents may differ from practical information.

Calling by redial




From the steering wheel remote control, press the  button to display the redial guidance screen, or press and hold the button to display the caller log screen.

Turn the multifunction knob to select **Yes**, and then press the multifunction knob to make a call.

- If the mobile phone is not in waiting mode, your phone might not support the redial function. This depends on the mobile phone's options.

- When redialling a number, the connected phone number will not be displayed.
- Depending on the mobile phone, there are cases in which the call is made through the call history of the received or missed calls instead of the redial mode. This depends on the mobile phone's options.

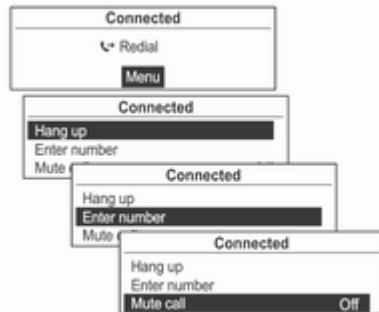


Press the multifunction knob while the phone is connected to display the connecting functions as shown below.

Use the multifunction knob to use the functions in the menu that appears.

Calling by outgoing call log




To make a call by the outgoing call log, press and hold the  button on the steering wheel remote control and turn the multifunction knob to select the desired call list, then press the multifunction knob.



To end a call, turn the multifunction knob to choose **Hang up**, and then press the multifunction knob.

Using the Phone Menu

Phone Menu → Phone book → Search

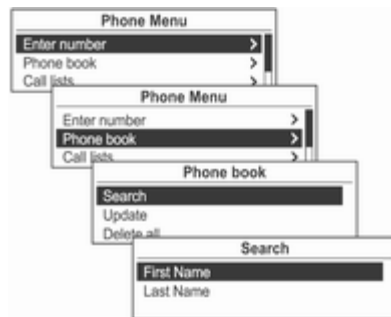


Press the multifunction knob, turn the multifunction knob to select **Phone book**, and then press the multifunction knob.

A notification will appear on screen, with no contacts to use, and you will be returned to the previous menu.

Turn the multifunction knob to select **Search**, and then press the multifunction knob.

Turn the multifunction knob to select **First Name** or **Last Name**, and then press the multifunction knob.

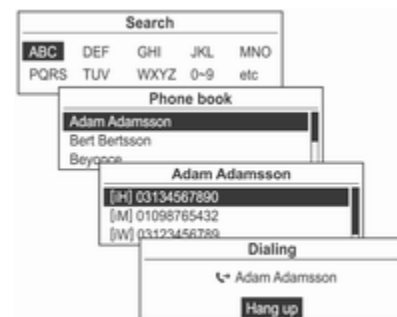

Turn the multifunction knob to select the search terms/range, and then press the multifunction knob.

Turn the multifunction knob from the search results screen to select the desired item, and then press the multifunction knob to view the details for that item.

Display number types

[iH]: Home

[iM]: Mobile

[iW]: Work


[iO]: Other

To call the relevant number, press the multifunction knob.

For more information, refer to the making phone calls item.

Phone Menu → Phone book → Update

Update the contacts of the connected mobile phone to the system's contacts.

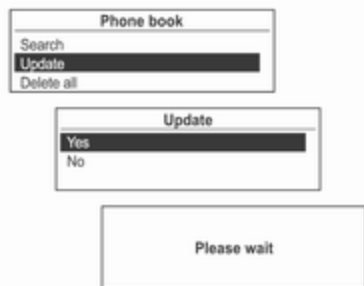

Using the multifunction knob, select **Phone Menu → Phone book → Update**, and then press the multifunction knob.

Turn the multifunction knob to select **Yes** or **No**, and then press the multifunction knob to activate or cancel the update.

**Notice for updating contacts**

- This function can be used with mobile phones that support a contacts update and the call history transmission function. (If the product is connected to a mobile phone that does not support these functions, the call history can be displayed through the Infotainment system.)
- An update is not supported for more than 1,000 contact numbers.

- Be aware that hands-free and Bluetooth audio playback will be cut off while proceeding with updates for contacts (other functions except for handsfree and Bluetooth audio playback can be used.)
- To update your contacts, it is possible to request for the transmission certification for contacts. If the waiting screen does not change for a long time, you can check whether the mobile phone is requesting for certification. When requesting for certification of the mobile phone, all Bluetooth connections will be cut off if it is not accepted, and then the device will be reconnected.
- When receiving the call history, it is possible to request for the transmission certification for the call history from the mobile phone. If the waiting screen does not change for a long time, check whether the mobile phone is requesting for certification. When requesting for the certification of the mobile phone, all

Bluetooth connections will be cut off if it is not accepted, and then the device will be reconnected.

- If there is a problem in the stored information of the mobile phone, the contacts may not be updated.
- The Infotainment system only uses information coded in UTF-8 format.
- If other operations (game, map search, navigation, etc.) are activated during the contacts update or call history transmission progress, the update/transmission process may not work.

This is because other operations running on the mobile phone are affecting the data transmission.

- When the contacts update or call history transmission is completed, all handsfree and Bluetooth audio play modes will be automatically disconnected and then reconnected.
- If the Infotainment system gets turned off while talking on the phone, the call will be transmitted to the mobile phone. Some phones

may need to setup a call transmission function beforehand, depending on the type of the phone.


- If the user disconnects the connection directly (using the Infotainment or mobile phone), the auto connection function does not take place.

Auto-connection: This function automatically finds and connects the device that was last connected.

- The contacts may not always display all the lists on the phone when selected. The Infotainment system only displays what has been transmitted from the mobile phone.
- The contacts update can only receive four numbers per contacts directory (mobile phone, office, home, and other).
- Changing the language setup during the contacts update will delete all previous updates.

- If the mobile phone is not set with a waiting screen, calls may not be made to this Infotainment system.
- If the OS of the mobile phone gets updated, it may change how the phone's Bluetooth function works.
- Special characters and unsupported languages will be displayed as ____.
- Calls registered in the contacts without any name will be indicated as **No number in contact**.
- The Infotainment system will display contacts, call history, and redial information as it is transmitted from the mobile phone.

Phone Menu → Phone book → Delete all

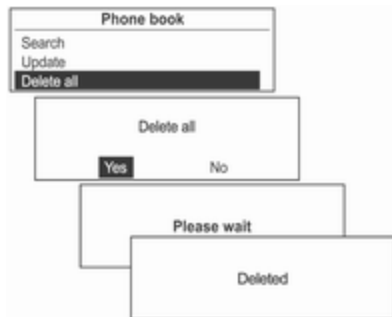


Use the multifunction knob to select **Phone Menu** → **Phone book** → **Delete all**, and then press the multifunction knob.

Turn the multifunction knob to select **Yes** or **No**, and then press the multifunction knob to delete all contacts or to cancel.

Phone Menu → Call lists

Check, use, or delete contacts.

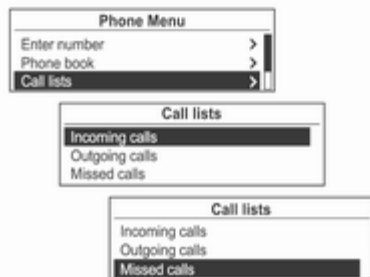

Use the multifunction knob to select **Phone Menu** → **Call lists**, and then press the multifunction knob.

Use the multifunction knob to select the detailed call history, and then press the multifunction knob.



Turn the multifunction knob to check the call history and to make a call.

Press the multifunction knob to call the selected number from the call history.

- If the **Please wait** screen continues to be displayed for too long after selecting the call log, check if the mobile phone is requesting verification for the transfer of call numbers. After completing the mobile phone verification

procedures, the contacts and the call log will be transmitted to the Infotainment system.


- The call log from the mobile phone and the log displayed on the Infotainment system may be different. This Infotainment system shows the information transmitted from the mobile phone as it is.

Phone Menu → Bluetooth settings


Set up the Bluetooth function.




Using the multifunction knob, select the **Phone Menu** → **Bluetooth settings**, and then press the multifunction knob.

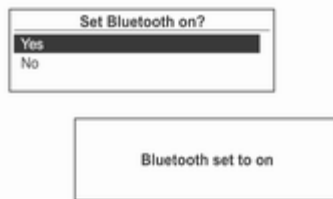

To activate the Bluetooth function, register, connect or delete the Bluetooth device or change the Bluetooth code, choose **Bluetooth** by using the multifunction knob, and then use the multifunction knob to set up the desired item.

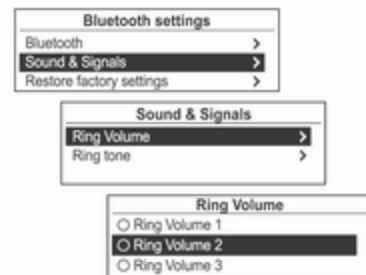

To set up the ring tone and its volume used by the Bluetooth function, use the multifunction knob to select **Sound & Signals**, and then set up the desired items with the multifunction knob.

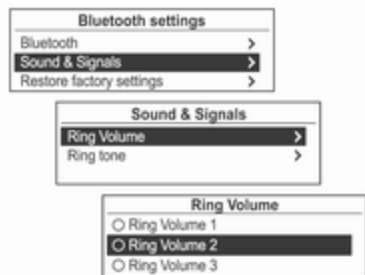

To reinitialise the **Bluetooth settings** to their default values, use the multifunction knob to select the initial setup restoration item, and then select **Yes** with the multifunction knob.

Index

A
Auxiliary devices 111

B
Bluetooth® 118

C
CD player 103
Control elements overview..... 80

F
Fixed mast antenna..... 102

G
General information..... 78

H
Hands free phone 123

O
Operation 82

P
Personalisation..... 86

R
Radio data system (RDS) 98

T
Theft-deterrent feature 79

U
Usage..... 90

Copyright by ADAM OPEL AG, Rüsselsheim, Germany.

The information contained in this publication is effective as of the date indicated below. Adam Opel AG reserves the right to make changes to the technical specifications, features and design of the vehicles relative to the information in this publication as well as changes to the publication itself.

Edition: , ADAM OPEL AG, Rüsselsheim.

Printed on chlorine-free bleached paper.

KTA-2755/2-en

01/2014

